

# TMS320C28x Assembly Language Tools v6.0

## User's Guide



Literature Number: SPRU513D

May 2011



|                                                                 |           |
|-----------------------------------------------------------------|-----------|
| <b>Preface</b> .....                                            | <b>11</b> |
| <b>1 Introduction to the Software Development Tools</b> .....   | <b>15</b> |
| 1.1 Software Development Tools Overview .....                   | 16        |
| 1.2 Tools Descriptions .....                                    | 17        |
| <b>2 Introduction to Object Modules</b> .....                   | <b>19</b> |
| 2.1 Sections .....                                              | 20        |
| 2.2 How the Assembler Handles Sections .....                    | 21        |
| 2.2.1 Uninitialized Sections .....                              | 21        |
| 2.2.2 Initialized Sections .....                                | 22        |
| 2.2.3 Named Sections .....                                      | 23        |
| 2.2.4 Subsections .....                                         | 23        |
| 2.2.5 Section Program Counters .....                            | 24        |
| 2.2.6 Using Sections Directives .....                           | 24        |
| 2.3 How the Linker Handles Sections .....                       | 27        |
| 2.3.1 Default Memory Allocation .....                           | 27        |
| 2.3.2 Placing Sections in the Memory Map .....                  | 28        |
| 2.4 Relocation .....                                            | 28        |
| 2.5 Run-Time Relocation .....                                   | 30        |
| 2.6 Loading a Program .....                                     | 30        |
| 2.7 Symbols in an Object File .....                             | 31        |
| 2.7.1 External Symbols .....                                    | 31        |
| 2.7.2 The Symbol Table .....                                    | 31        |
| <b>3 Assembler Description</b> .....                            | <b>33</b> |
| 3.1 Assembler Overview .....                                    | 34        |
| 3.2 The Assembler's Role in the Software Development Flow ..... | 35        |
| 3.3 Invoking the Assembler .....                                | 36        |
| 3.4 Naming Alternate Directories for Assembler Input .....      | 37        |
| 3.4.1 Using the --include_path Assembler Option .....           | 38        |
| 3.4.2 Using the C2000_A_DIR Environment Variable .....          | 38        |
| 3.5 Source Statement Format .....                               | 40        |
| 3.5.1 Label Field .....                                         | 40        |
| 3.5.2 Mnemonic Field .....                                      | 41        |
| 3.5.3 Operand Field .....                                       | 41        |
| 3.5.4 Comment Field .....                                       | 41        |
| 3.6 Constants .....                                             | 42        |
| 3.6.1 Binary Integers .....                                     | 42        |
| 3.6.2 Octal Integers .....                                      | 42        |
| 3.6.3 Decimal Integers .....                                    | 43        |
| 3.6.4 Hexadecimal Integers .....                                | 43        |
| 3.6.5 Character Constants .....                                 | 43        |
| 3.6.6 Assembly-Time Constants .....                             | 43        |
| 3.7 Floating-Point Constants .....                              | 44        |
| 3.8 Character Strings .....                                     | 44        |
| 3.9 Symbols .....                                               | 44        |
| 3.9.1 Labels .....                                              | 44        |

|          |                                                                                   |            |
|----------|-----------------------------------------------------------------------------------|------------|
| 3.9.2    | Local Labels .....                                                                | 45         |
| 3.9.3    | Symbolic Constants .....                                                          | 47         |
| 3.9.4    | Defining Symbolic Constants (--asm_define Option) .....                           | 47         |
| 3.9.5    | Predefined Symbolic Constants .....                                               | 48         |
| 3.9.6    | Substitution Symbols .....                                                        | 49         |
| 3.10     | Expressions .....                                                                 | 50         |
| 3.10.1   | Operators .....                                                                   | 50         |
| 3.10.2   | Expression Overflow and Underflow .....                                           | 51         |
| 3.10.3   | Well-Defined Expressions .....                                                    | 51         |
| 3.10.4   | Conditional Expressions .....                                                     | 51         |
| 3.10.5   | Legal Expressions .....                                                           | 51         |
| 3.11     | Built-In Functions .....                                                          | 52         |
| 3.12     | Specifying Assembler Fill Values (--asm_code_fill and --asm_data_fill) .....      | 53         |
| 3.13     | TMS320C28x Assembler Modes .....                                                  | 54         |
| 3.13.1   | C27x Object Mode .....                                                            | 54         |
| 3.13.2   | C28x Object Mode .....                                                            | 55         |
| 3.13.3   | C28x Object - Accept C27x Syntax Mode .....                                       | 55         |
| 3.13.4   | C28x Object - Accept C2xlp Syntax Mode .....                                      | 55         |
| 3.13.5   | C28x FPU32 and FPU64 Object Modes .....                                           | 56         |
| 3.13.6   | C28x CLA Object Mode .....                                                        | 56         |
| 3.14     | Source Listings .....                                                             | 57         |
| 3.15     | Debugging Assembly Source .....                                                   | 59         |
| 3.16     | C-Type Symbolic Debugging for Assembly Variables (--cdebug_asm_data Option) ..... | 60         |
| 3.17     | Cross-Reference Listings .....                                                    | 61         |
| 3.18     | Smart Encoding .....                                                              | 62         |
| 3.19     | Pipeline Conflict Detection .....                                                 | 63         |
| 3.19.1   | Protected and Unprotected Pipeline Instructions .....                             | 63         |
| 3.19.2   | Pipeline Conflict Prevention and Detection .....                                  | 63         |
| 3.19.3   | Pipeline Conflicts Detected .....                                                 | 64         |
| <b>4</b> | <b>Assembler Directives .....</b>                                                 | <b>65</b>  |
| 4.1      | Directives Summary .....                                                          | 66         |
| 4.2      | Compatibility With the TMS320C1x/C2x/C2xx/C5x Assembler Directives .....          | 70         |
| 4.3      | Directives That Define Sections .....                                             | 70         |
| 4.4      | Directives That Initialize Constants .....                                        | 72         |
| 4.5      | Directives That Perform Alignment and Reserve Space .....                         | 73         |
| 4.6      | Directives That Format the Output Listings .....                                  | 75         |
| 4.7      | Directives That Reference Other Files .....                                       | 76         |
| 4.8      | Directives That Enable Conditional Assembly .....                                 | 76         |
| 4.9      | Directives That Define Union or Structure Types .....                             | 77         |
| 4.10     | Directives That Define Enumerated Types .....                                     | 77         |
| 4.11     | Directives That Define Symbols at Assembly Time .....                             | 77         |
| 4.12     | Directives That Override the Assembler Mode .....                                 | 78         |
| 4.13     | Miscellaneous Directives .....                                                    | 78         |
| 4.14     | Directives Reference .....                                                        | 79         |
| <b>5</b> | <b>Macro Description .....</b>                                                    | <b>135</b> |
| 5.1      | Using Macros .....                                                                | 136        |
| 5.2      | Defining Macros .....                                                             | 136        |
| 5.3      | Macro Parameters/Substitution Symbols .....                                       | 138        |
| 5.3.1    | Directives That Define Substitution Symbols .....                                 | 139        |
| 5.3.2    | Built-In Substitution Symbol Functions .....                                      | 140        |
| 5.3.3    | Recursive Substitution Symbols .....                                              | 141        |
| 5.3.4    | Forced Substitution .....                                                         | 141        |
| 5.3.5    | Accessing Individual Characters of Subscripted Substitution Symbols .....         | 142        |

|          |                                                                                                                         |            |
|----------|-------------------------------------------------------------------------------------------------------------------------|------------|
| 5.3.6    | Substitution Symbols as Local Variables in Macros .....                                                                 | 143        |
| 5.4      | Macro Libraries .....                                                                                                   | 143        |
| 5.5      | Using Conditional Assembly in Macros .....                                                                              | 144        |
| 5.6      | Using Labels in Macros .....                                                                                            | 146        |
| 5.7      | Producing Messages in Macros .....                                                                                      | 147        |
| 5.8      | Using Directives to Format the Output Listing .....                                                                     | 148        |
| 5.9      | Using Recursive and Nested Macros .....                                                                                 | 149        |
| 5.10     | Macro Directives Summary .....                                                                                          | 150        |
| <b>6</b> | <b>Archiver Description .....</b>                                                                                       | <b>151</b> |
| 6.1      | Archiver Overview .....                                                                                                 | 152        |
| 6.2      | The Archiver's Role in the Software Development Flow .....                                                              | 153        |
| 6.3      | Invoking the Archiver .....                                                                                             | 154        |
| 6.4      | Archiver Examples .....                                                                                                 | 155        |
| 6.5      | Library Information Archiver Description .....                                                                          | 157        |
| 6.5.1    | Invoking the Library Information Archiver .....                                                                         | 157        |
| 6.5.2    | Library Information Archiver Example .....                                                                              | 157        |
| 6.5.3    | Listing the Contents of an Index Library .....                                                                          | 158        |
| 6.5.4    | Requirements .....                                                                                                      | 158        |
| <b>7</b> | <b>Linker Description .....</b>                                                                                         | <b>159</b> |
| 7.1      | Linker Overview .....                                                                                                   | 160        |
| 7.2      | The Linker's Role in the Software Development Flow .....                                                                | 161        |
| 7.3      | Invoking the Linker .....                                                                                               | 162        |
| 7.4      | Linker Options .....                                                                                                    | 163        |
| 7.4.1    | Wild Cards in File, Section, and Symbol Patterns .....                                                                  | 165        |
| 7.4.2    | Relocation Capabilities (--absolute_exe and --relocatable Options) .....                                                | 165        |
| 7.4.3    | Allocate Memory for Use by the Loader to Pass Arguments (--arg_size Option) .....                                       | 166        |
| 7.4.4    | Control Linker Diagnostics .....                                                                                        | 167        |
| 7.4.5    | Disable Automatic Library Selection (--disable_auto_rts Option) .....                                                   | 167        |
| 7.4.6    | Disable Conditional Linking (--disable_clink Option) .....                                                              | 167        |
| 7.4.7    | Link Command File Preprocessing (--disable_pp, --define and --undefine Options) .....                                   | 168        |
| 7.4.8    | Define an Entry Point (--entry_point Option) .....                                                                      | 169        |
| 7.4.9    | Define Far Heap Size (--farheap Option) .....                                                                           | 169        |
| 7.4.10   | Set Default Fill Value (--fill_value Option) .....                                                                      | 169        |
| 7.4.11   | Generate List of Dead Functions (--generate_dead_funcs_list Option) .....                                               | 169        |
| 7.4.12   | Define Heap Size (--heap_size Option) .....                                                                             | 170        |
| 7.4.13   | Hiding Symbols .....                                                                                                    | 170        |
| 7.4.14   | Alter the Library Search Algorithm (--library Option, --search_path Option, and C2000_C_DIR Environment Variable) ..... | 170        |
| 7.4.15   | Change Symbol Localization .....                                                                                        | 173        |
| 7.4.16   | Create a Map File (--map_file Option) .....                                                                             | 174        |
| 7.4.17   | Managing Map File Contents (--mapfile_contents Option) .....                                                            | 175        |
| 7.4.18   | Disable Name Demangling (--no_demangle) .....                                                                           | 176        |
| 7.4.19   | Disable Merge of Symbolic Debugging Information (--no_sym_merge Option) .....                                           | 176        |
| 7.4.20   | Strip Symbolic Information (--no_sym_table Option) .....                                                                | 176        |
| 7.4.21   | Name an Output Module (--output_file Option) .....                                                                      | 177        |
| 7.4.22   | C Language Options (--ram_model and --rom_model Options) .....                                                          | 177        |
| 7.4.23   | Create an Absolute Listing File (--run_abs Option) .....                                                                | 177        |
| 7.4.24   | Scan All Libraries for Duplicate Symbol Definitions (--scan_libraries) .....                                            | 177        |
| 7.4.25   | Define Stack Size (--stack_size Option) .....                                                                           | 177        |
| 7.4.26   | Enforce Strict Compatibility (--strict_compatibility Option) .....                                                      | 177        |
| 7.4.27   | Mapping of Symbols (--symbol_map Option) .....                                                                          | 178        |
| 7.4.28   | Introduce an Unresolved Symbol (--undef_sym Option) .....                                                               | 178        |
| 7.4.29   | Display a Message When an Undefined Output Section Is Created (--warn_sections Option) .....                            | 178        |

|             |                                                             |            |
|-------------|-------------------------------------------------------------|------------|
| 7.4.30      | Generate XML Link Information File (--xml_link_info Option) | 178        |
| <b>7.5</b>  | <b>Linker Command Files</b>                                 | <b>179</b> |
| 7.5.1       | Reserved Names in Linker Command Files                      | 180        |
| 7.5.2       | Constants in Linker Command Files                           | 180        |
| 7.5.3       | The MEMORY Directive                                        | 181        |
| 7.5.4       | The SECTIONS Directive                                      | 185        |
| 7.5.5       | Specifying a Section's Run-Time Address                     | 199        |
| 7.5.6       | Using UNION and GROUP Statements                            | 201        |
| 7.5.7       | Overlaying Pages                                            | 205        |
| 7.5.8       | Special Section Types (DSECT, COPY, and NOLOAD)             | 207        |
| 7.5.9       | Assigning Symbols at Link Time                              | 208        |
| 7.5.10      | Creating and Filling Holes                                  | 213        |
| <b>7.6</b>  | <b>Object Libraries</b>                                     | <b>216</b> |
| <b>7.7</b>  | <b>Default Allocation Algorithm</b>                         | <b>217</b> |
| 7.7.1       | How the Allocation Algorithm Creates Output Sections        | 217        |
| 7.7.2       | Reducing Memory Fragmentation                               | 218        |
| <b>7.8</b>  | <b>Linker-Generated Copy Tables</b>                         | <b>218</b> |
| 7.8.1       | A Current Boot-Loaded Application Development Process       | 218        |
| 7.8.2       | An Alternative Approach                                     | 219        |
| 7.8.3       | Overlay Management Example                                  | 219        |
| 7.8.4       | Generating Copy Tables Automatically With the Linker        | 220        |
| 7.8.5       | The table() Operator                                        | 221        |
| 7.8.6       | Boot-Time Copy Tables                                       | 221        |
| 7.8.7       | Using the table() Operator to Manage Object Components      | 221        |
| 7.8.8       | Copy Table Contents                                         | 222        |
| 7.8.9       | General Purpose Copy Routine                                | 223        |
| 7.8.10      | Linker-Generated Copy Table Sections and Symbols            | 224        |
| 7.8.11      | Splitting Object Components and Overlay Management          | 225        |
| <b>7.9</b>  | <b>Linker-Generated CRC Tables</b>                          | <b>227</b> |
| 7.9.1       | The crc_table() Operator                                    | 227        |
| 7.9.2       | Restrictions                                                | 227        |
| 7.9.3       | Examples                                                    | 228        |
| 7.9.4       | Interface                                                   | 229        |
| <b>7.10</b> | <b>Partial (Incremental) Linking</b>                        | <b>233</b> |
| <b>7.11</b> | <b>Linking C/C++ Code</b>                                   | <b>234</b> |
| 7.11.1      | Run-Time Initialization                                     | 234        |
| 7.11.2      | Object Libraries and Run-Time Support                       | 234        |
| 7.11.3      | Setting the Size of the Stack and Heap Sections             | 234        |
| 7.11.4      | Autoinitialization of Variables at Run Time                 | 235        |
| 7.11.5      | Initialization of Variables at Load Time                    | 235        |
| 7.11.6      | The --rom_model and --ram_model Linker Options              | 236        |
| <b>7.12</b> | <b>Linker Example</b>                                       | <b>237</b> |
| <b>8</b>    | <b>Absolute Lister Description</b>                          | <b>241</b> |
| 8.1         | Producing an Absolute Listing                               | 242        |
| 8.2         | Invoking the Absolute Lister                                | 243        |
| 8.3         | Absolute Lister Example                                     | 244        |
| <b>9</b>    | <b>Cross-Reference Lister Description</b>                   | <b>247</b> |
| 9.1         | Producing a Cross-Reference Listing                         | 248        |
| 9.2         | Invoking the Cross-Reference Lister                         | 249        |
| 9.3         | Cross-Reference Listing Example                             | 250        |
| <b>10</b>   | <b>Object File Utilities Descriptions</b>                   | <b>253</b> |
| 10.1        | Invoking the Object File Display Utility                    | 254        |
| 10.2        | Invoking the Disassembler                                   | 255        |

|           |                                                                               |            |
|-----------|-------------------------------------------------------------------------------|------------|
| 10.3      | Invoking the Name Utility .....                                               | 255        |
| 10.4      | Invoking the Strip Utility .....                                              | 256        |
| <b>11</b> | <b>Hex Conversion Utility Description .....</b>                               | <b>257</b> |
| 11.1      | The Hex Conversion Utility's Role in the Software Development Flow .....      | 258        |
| 11.2      | Invoking the Hex Conversion Utility .....                                     | 259        |
| 11.2.1    | Invoking the Hex Conversion Utility From the Command Line .....               | 259        |
| 11.2.2    | Invoking the Hex Conversion Utility With a Command File .....                 | 261        |
| 11.3      | Understanding Memory Widths .....                                             | 262        |
| 11.3.1    | Target Width .....                                                            | 262        |
| 11.3.2    | Specifying the Memory Width .....                                             | 263        |
| 11.3.3    | Partitioning Data Into Output Files .....                                     | 264        |
| 11.3.4    | Specifying Word Order for Output Words .....                                  | 266        |
| 11.4      | The ROMS Directive .....                                                      | 266        |
| 11.4.1    | When to Use the ROMS Directive .....                                          | 267        |
| 11.4.2    | An Example of the ROMS Directive .....                                        | 268        |
| 11.5      | The SECTIONS Directive .....                                                  | 270        |
| 11.6      | The Load Image Format (--load_image Option) .....                             | 271        |
| 11.6.1    | Load Image Section Formation .....                                            | 271        |
| 11.6.2    | Load Image Characteristics .....                                              | 271        |
| 11.7      | Excluding a Specified Section .....                                           | 271        |
| 11.8      | Assigning Output Filenames .....                                              | 272        |
| 11.9      | Image Mode and the --fill Option .....                                        | 273        |
| 11.9.1    | Generating a Memory Image .....                                               | 273        |
| 11.9.2    | Specifying a Fill Value .....                                                 | 273        |
| 11.9.3    | Steps to Follow in Using Image Mode .....                                     | 273        |
| 11.10     | Building a Table for an On-Chip Boot Loader .....                             | 274        |
| 11.10.1   | Description of the Boot Table .....                                           | 274        |
| 11.10.2   | The Boot Table Format .....                                                   | 274        |
| 11.10.3   | How to Build the Boot Table .....                                             | 274        |
| 11.10.4   | Booting From a Device Peripheral .....                                        | 275        |
| 11.10.5   | Setting the Entry Point for the Boot Table .....                              | 275        |
| 11.10.6   | Using the C28x Boot Loader .....                                              | 276        |
| 11.11     | Controlling the ROM Device Address .....                                      | 280        |
| 11.12     | Control Hex Conversion Utility Diagnostics .....                              | 281        |
| 11.13     | Description of the Object Formats .....                                       | 282        |
| 11.13.1   | ASCII-Hex Object Format (--ascii Option) .....                                | 282        |
| 11.13.2   | Intel MCS-86 Object Format (--intel Option) .....                             | 283        |
| 11.13.3   | Motorola Exorciser Object Format (--motorola Option) .....                    | 284        |
| 11.13.4   | Extended Tektronix Object Format (--tektronix Option) .....                   | 285        |
| 11.13.5   | Texas Instruments SDSMAC (TI-Tagged) Object Format (--ti_tagged Option) ..... | 286        |
| 11.13.6   | TI-TXT Hex Format (--ti_txt Option) .....                                     | 287        |
| 11.14     | Hex Conversion Utility Error Messages .....                                   | 288        |
| <b>12</b> | <b>Sharing C/C++ Header Files With Assembly Source .....</b>                  | <b>289</b> |
| 12.1      | Overview of the .cdecls Directive .....                                       | 290        |
| 12.2      | Notes on C/C++ Conversions .....                                              | 290        |
| 12.2.1    | Comments .....                                                                | 290        |
| 12.2.2    | Conditional Compilation (#if/#else/#ifdef/etc.) .....                         | 291        |
| 12.2.3    | Pragmas .....                                                                 | 291        |
| 12.2.4    | The #error and #warning Directives .....                                      | 291        |
| 12.2.5    | Predefined symbol __ASM_HEADER__ .....                                        | 291        |
| 12.2.6    | Usage Within C/C++ asm( ) Statements .....                                    | 291        |
| 12.2.7    | The #include Directive .....                                                  | 291        |
| 12.2.8    | Conversion of #define Macros .....                                            | 291        |

|          |                                                    |            |
|----------|----------------------------------------------------|------------|
| 12.2.9   | The #undef Directive .....                         | 292        |
| 12.2.10  | Enumerations .....                                 | 292        |
| 12.2.11  | C Strings .....                                    | 292        |
| 12.2.12  | C/C++ Built-In Functions .....                     | 293        |
| 12.2.13  | Structures and Unions .....                        | 293        |
| 12.2.14  | Function/Variable Prototypes .....                 | 293        |
| 12.2.15  | C Constant Suffixes .....                          | 294        |
| 12.2.16  | Basic C/C++ Types .....                            | 294        |
| 12.3     | Notes on C++ Specific Conversions .....            | 294        |
| 12.3.1   | Name Mangling .....                                | 294        |
| 12.3.2   | Derived Classes .....                              | 294        |
| 12.3.3   | Templates .....                                    | 294        |
| 12.3.4   | Virtual Functions .....                            | 295        |
| 12.4     | Special Assembler Support .....                    | 295        |
| 12.4.1   | Enumerations (.enum/.emember/.endenum) .....       | 295        |
| 12.4.2   | The .define Directive .....                        | 295        |
| 12.4.3   | The .undefine/.unasg Directives .....              | 295        |
| 12.4.4   | The \$defined( ) Directive .....                   | 296        |
| 12.4.5   | The \$sizeof Built-In Function .....               | 296        |
| 12.4.6   | Structure/Union Alignment & \$alignof( ) .....     | 296        |
| 12.4.7   | The .cstring Directive .....                       | 296        |
| <b>A</b> | <b>Symbolic Debugging Directives .....</b>         | <b>297</b> |
| A.1      | DWARF Debugging Format .....                       | 298        |
| A.2      | COFF Debugging Format .....                        | 298        |
| A.3      | Debug Directive Syntax .....                       | 299        |
| <b>B</b> | <b>XML Link Information File Description .....</b> | <b>301</b> |
| B.1      | XML Information File Element Types .....           | 302        |
| B.2      | Document Elements .....                            | 302        |
| B.2.1    | Header Elements .....                              | 302        |
| B.2.2    | Input File List .....                              | 303        |
| B.2.3    | Object Component List .....                        | 304        |
| B.2.4    | Logical Group List .....                           | 305        |
| B.2.5    | Placement Map .....                                | 307        |
| B.2.6    | Far Call Trampoline List .....                     | 308        |
| B.2.7    | Symbol Table .....                                 | 309        |
| <b>C</b> | <b>CRC Reference Implementation .....</b>          | <b>311</b> |
| C.1      | Compilation Instructions .....                     | 312        |
| C.2      | Reference CRC Calculation Routine .....            | 312        |
| C.3      | Linker-Generated Copy Tables and CRC Tables .....  | 315        |
| <b>D</b> | <b>Glossary .....</b>                              | <b>319</b> |



## List of Figures

|        |                                                                              |     |
|--------|------------------------------------------------------------------------------|-----|
| 1-1.   | TMS320C28x Software Development Flow .....                                   | 16  |
| 2-1.   | Partitioning Memory Into Logical Blocks .....                                | 20  |
| 2-2.   | Using Sections Directives Example .....                                      | 25  |
| 2-3.   | Object Code Generated by the File in .....                                   | 26  |
| 2-4.   | Combining Input Sections to Form an Executable Object Module.....            | 27  |
| 3-1.   | The Assembler in the TMS320C28x Software Development Flow .....              | 35  |
| 3-2.   | Example Assembler Listing .....                                              | 58  |
| 4-1.   | The .field Directive .....                                                   | 72  |
| 4-2.   | Initialization Directives .....                                              | 73  |
| 4-3.   | The .align Directive.....                                                    | 74  |
| 4-4.   | The .space and .bes Directives.....                                          | 74  |
| 4-5.   | Allocating .bss Blocks Within a Page .....                                   | 84  |
| 4-6.   | The .field Directive .....                                                   | 101 |
| 4-7.   | Single-Precision Floating-Point Format .....                                 | 102 |
| 4-8.   | The .usect Directive .....                                                   | 132 |
| 6-1.   | The Archiver in the TMS320C28x Software Development Flow.....                | 153 |
| 7-1.   | The Linker in the TMS320C28x Software Development Flow .....                 | 161 |
| 7-2.   | Memory Map Defined in .....                                                  | 183 |
| 7-3.   | Section Allocation Defined by .....                                          | 187 |
| 7-4.   | Run-Time Execution of .....                                                  | 201 |
| 7-5.   | Memory Allocation Shown in and .....                                         | 202 |
| 7-6.   | Overlay Pages Defined in and .....                                           | 207 |
| 7-7.   | CRC_TABLE Conceptual Model .....                                             | 230 |
| 7-8.   | CRC Data Flow Example .....                                                  | 232 |
| 7-9.   | Autoinitialization at Run Time .....                                         | 235 |
| 7-10.  | Initialization at Load Time.....                                             | 236 |
| 8-1.   | Absolute Lister Development Flow .....                                       | 242 |
| 9-1.   | The Cross-Reference Lister Development Flow .....                            | 248 |
| 11-1.  | The Hex Conversion Utility in the TMS320C28x Software Development Flow ..... | 258 |
| 11-2.  | Hex Conversion Utility Process Flow.....                                     | 262 |
| 11-3.  | Object File Data and Memory Widths .....                                     | 263 |
| 11-4.  | Data, Memory, and ROM Widths .....                                           | 265 |
| 11-5.  | The infile.out File Partitioned Into Four Output Files .....                 | 268 |
| 11-6.  | Sample Hex Converter Out File for Booting From 8-Bit SPI Boot.....           | 277 |
| 11-7.  | Sample Hex Converter Out File for C28x 16-Bit Parallel Boot GP I/O.....      | 278 |
| 11-8.  | Sample Hex Converter Out File for Booting From 8-Bit SCI Boot.....           | 279 |
| 11-9.  | ASCII-Hex Object Format.....                                                 | 282 |
| 11-10. | Intel Hexadecimal Object Format .....                                        | 283 |
| 11-11. | Motorola-S Format .....                                                      | 284 |
| 11-12. | Extended Tektronix Object Format .....                                       | 285 |
| 11-13. | TI-Tagged Object Format .....                                                | 286 |
| 11-14. | TI-TXT Object Format .....                                                   | 287 |

## List of Tables

|       |                                                                     |     |
|-------|---------------------------------------------------------------------|-----|
| 3-1.  | TMS320C28x Assembler Options .....                                  | 36  |
| 3-2.  | Operators Used in Expressions (Precedence) .....                    | 50  |
| 3-3.  | Built-In Mathematical Functions .....                               | 52  |
| 3-4.  | Non-TMS320C27x Instructions Supported in the C27x Object Mode ..... | 54  |
| 3-5.  | Symbol Attributes .....                                             | 61  |
| 3-6.  | Smart Encoding for Efficiency .....                                 | 62  |
| 3-7.  | Smart Encoding Intuitively .....                                    | 62  |
| 3-8.  | Instructions That Avoid Smart Encoding .....                        | 63  |
| 4-1.  | Directives That Define Sections .....                               | 66  |
| 4-2.  | Directives That Initialize Values (Data and Memory) .....           | 66  |
| 4-3.  | Directives That Perform Alignment and Reserve Space .....           | 67  |
| 4-4.  | Directives That Format the Output Listing .....                     | 67  |
| 4-5.  | Directives That Reference Other Files .....                         | 67  |
| 4-6.  | Directives That Effect Symbol Linkage and Visibility .....          | 67  |
| 4-7.  | Directives That Override the Assembly Mode .....                    | 67  |
| 4-8.  | Directives That Enable Conditional Assembly .....                   | 68  |
| 4-9.  | Directives That Define Union or Structure Types .....               | 68  |
| 4-10. | Directives That Define Symbols at Assembly Time .....               | 68  |
| 4-11. | Directives That Create or Effect Macros .....                       | 69  |
| 4-12. | Directives That Control Diagnostics .....                           | 69  |
| 4-13. | Directives That Perform Assembly Source Debug .....                 | 69  |
| 4-14. | Directives That Are Used by the Absolute Lister .....               | 69  |
| 4-15. | Directives That Perform Miscellaneous Functions .....               | 69  |
| 5-1.  | Substitution Symbol Functions and Return Values .....               | 140 |
| 5-2.  | Creating Macros .....                                               | 150 |
| 5-3.  | Manipulating Substitution Symbols .....                             | 150 |
| 5-4.  | Conditional Assembly .....                                          | 150 |
| 5-5.  | Producing Assembly-Time Messages .....                              | 150 |
| 5-6.  | Formatting the Listing .....                                        | 150 |
| 7-1.  | Basic Options Summary .....                                         | 163 |
| 7-2.  | Command File Preprocessing Options Summary .....                    | 163 |
| 7-3.  | Diagnostic Options Summary .....                                    | 163 |
| 7-4.  | File Search Path Options Summary .....                              | 163 |
| 7-5.  | Linker Output Options Summary .....                                 | 164 |
| 7-6.  | Symbol Management Options Summary .....                             | 164 |
| 7-7.  | Run-Time Environment Options Summary .....                          | 164 |
| 7-8.  | Link-Time Optimization Options Summary .....                        | 164 |
| 7-9.  | Miscellaneous Options Summary .....                                 | 165 |
| 7-10. | Groups of Operators Used in Expressions (Precedence) .....          | 209 |
| 9-1.  | Symbol Attributes in Cross-Reference Listing .....                  | 251 |
| 11-1. | Basic Hex Conversion Utility Options .....                          | 259 |
| 11-2. | Boot-Loader Options .....                                           | 274 |
| 11-3. | Boot Table Source Formats .....                                     | 276 |
| 11-4. | Boot Table Format .....                                             | 276 |
| 11-5. | Options for Specifying Hex Conversion Formats .....                 | 282 |
| A-1.  | Symbolic Debugging Directives .....                                 | 299 |

## Read This First

---

---

---

### About This Manual

The *TMS320C28x Assembly Language Tools User's Guide* explains how to use these assembly language tools:

- Assembler
- Archiver
- Linker
- Library information archiver
- Absolute lister
- Cross-reference lister
- Disassembler
- Object file display utility
- Name utility
- Strip utility
- Hex conversion utility

### How to Use This Manual

This book helps you learn how to use the Texas Instruments assembly language tools designed specifically for the TMS320C28x™ 16-bit devices. This book consists of four parts:

- **Introductory information**, consisting of [Chapter 1](#) and [Chapter 2](#), gives you an overview of the assembly language development tools. It also discusses object modules, which helps you to use the TMS320C28x tools more efficiently. Read [Chapter 2](#) before using the assembler and linker.
- **Assembler description**, consisting of [Chapter 3](#) through [Chapter 5](#), contains detailed information about using the assembler. This portion explains how to invoke the assembler and discusses source statement format, valid constants and expressions, assembler output, and assembler directives. It also describes the macro language.
- **Additional assembly language tools description**, consisting of [Chapter 6](#) through [Chapter 11](#), describes in detail each of the tools provided with the assembler to help you create executable object files. For example, [Chapter 7](#) explains how to invoke the linker, how the linker operates, and how to use linker directives; [Chapter 11](#) explains how to use the hex conversion utility.
- **Reference material**, consisting of [Appendix A](#) through [Appendix D](#), provides supplementary information including symbolic debugging directives that the TMS320C28x C/C++ compiler uses. It also provides hex utility examples, a description of the XML link information file and a glossary.

## Notational Conventions

This document uses the following conventions:

- Program listings, program examples, and interactive displays are shown in a *special typeface*. Interactive displays use a bold version of the special typeface to distinguish commands that you enter from items that the system displays (such as prompts, command output, error messages, etc.).

Here is a sample of C code:

```
#include <stdio.h>
main()
{
    printf("hello, cruel world\n");
}
```

- In syntax descriptions, the instruction, command, or directive is in a **bold typeface** and parameters are in an *italic typeface*. Portions of a syntax that are in bold should be entered as shown; portions of a syntax that are in italics describe the type of information that should be entered.
- Square brackets ( [ and ] ) identify an optional parameter. If you use an optional parameter, you specify the information within the brackets. Unless the square brackets are in the **bold typeface**, do not enter the brackets themselves. The following is an example of a command that has an optional parameter:

```
cl2000 [options] [filenames] [--run_linker [link_options] [object files]]
```

- Braces ( { and } ) indicate that you must choose one of the parameters within the braces; you do not enter the braces themselves. This is an example of a command with braces that are not included in the actual syntax but indicate that you must specify either the `--rom_model` or `--ram_model` option:

```
cl2000 --silicon_version=28 --run_linker {--rom_model | --ram_model} filenames  
--output_file= name.out --library= libraryname
```

- In assembler syntax statements, column 1 is reserved for the first character of a label or symbol. If the label or symbol is optional, it is usually not shown. If it is a required parameter, it is shown starting against the left margin of the box, as in the example below. No instruction, command, directive, or parameter, other than a symbol or label, can begin in column 1.

```
symbol .usect "section name", size in bytes[, alignment]
```

- Some directives can have a varying number of parameters. For example, the `.byte` directive can have up to 100 parameters. This syntax is shown as [ , ..., *parameter* ].
- The TMS320C2800 core is referred to as TMS320C28x or C28x.
- Following are other symbols and abbreviations used throughout this document:

| Symbol | Definition                   |
|--------|------------------------------|
| B, b   | Suffix — binary integer      |
| H, h   | Suffix — hexadecimal integer |
| LSB    | Least significant bit        |
| MSB    | Most significant bit         |
| 0x     | Prefix — hexadecimal integer |
| Q, q   | Suffix — octal integer       |

## Related Documentation From Texas Instruments

You can use the following books to supplement this user's guide:

[SPRAA08](#) — **Common Object File Format Application Report.** Provides supplementary information on the internal format of COFF object files. Much of this information pertains to the symbolic debugging information that is produced by the C compiler.

[SPRU127](#) — **TMS320C2xx User's Guide.** Discusses the hardware aspects of the TMS320C2xx 16-bit fixed-point digital signal processors. It describes the architecture, the instruction set, and the on-chip peripherals.

[SPRU430](#) — **TMS320C28x DSP CPU and Instruction Set Reference Guide.** Describes the central processing unit (CPU) and the assembly language instructions of the TMS320C28x fixed-point CPU. It also describes emulation features available on these devices.

[SPRU514](#) — **TMS320C28x Optimizing C/C++ Compiler User's Guide.** Describes the TMS320C28x C/C++ compiler. This C/C++ compiler accepts ANSI standard C/C++ source code and produces assembly language source code for the TMS320C28x devices.

[SPRU566](#) — **TMS320x28xx, 28xxx DSP Peripherals Reference Guide.** Describes all the peripherals available for TMS320x28xx and TMS320x28xxx devices.

[SPRUE02](#) — **TMS320C28x Floating Point Unit and Instruction Set Reference Guide.** Describes the CPU architecture, pipeline, instruction set, and interrupts of the C28x floating-point DSP.



## Introduction to the Software Development Tools

---

---

The TMS320C28x™ is supported by a set of software development tools, which includes an optimizing C/C++ compiler, an assembler, a linker, and assorted utilities. This chapter provides an overview of these tools.

The TMS320C28x is supported by the following assembly language development tools:

- Assembler
- Archiver
- Linker
- Library information archiver
- Absolute lister
- Cross-reference lister
- Object file display utility
- Disassembler
- Name utility
- Strip utility
- Hex conversion utility


This chapter shows how these tools fit into the general software tools development flow and gives a brief description of each tool. For convenience, it also summarizes the C/C++ compiler and debugging tools. For detailed information on the compiler and debugger, and for complete descriptions of the TMS320C28x, refer to the books listed in *Related Documentation From Texas Instruments*.

| Topic                                                | Page      |
|------------------------------------------------------|-----------|
| <b>1.1 Software Development Tools Overview .....</b> | <b>16</b> |
| <b>1.2 Tools Descriptions .....</b>                  | <b>17</b> |

### 1.1 Software Development Tools Overview

Figure 1-1 shows the TMS320C28x software development flow. The shaded portion highlights the most common development path; the other portions are optional. The other portions are peripheral functions that enhance the development process.

Figure 1-1. TMS320C28x Software Development Flow

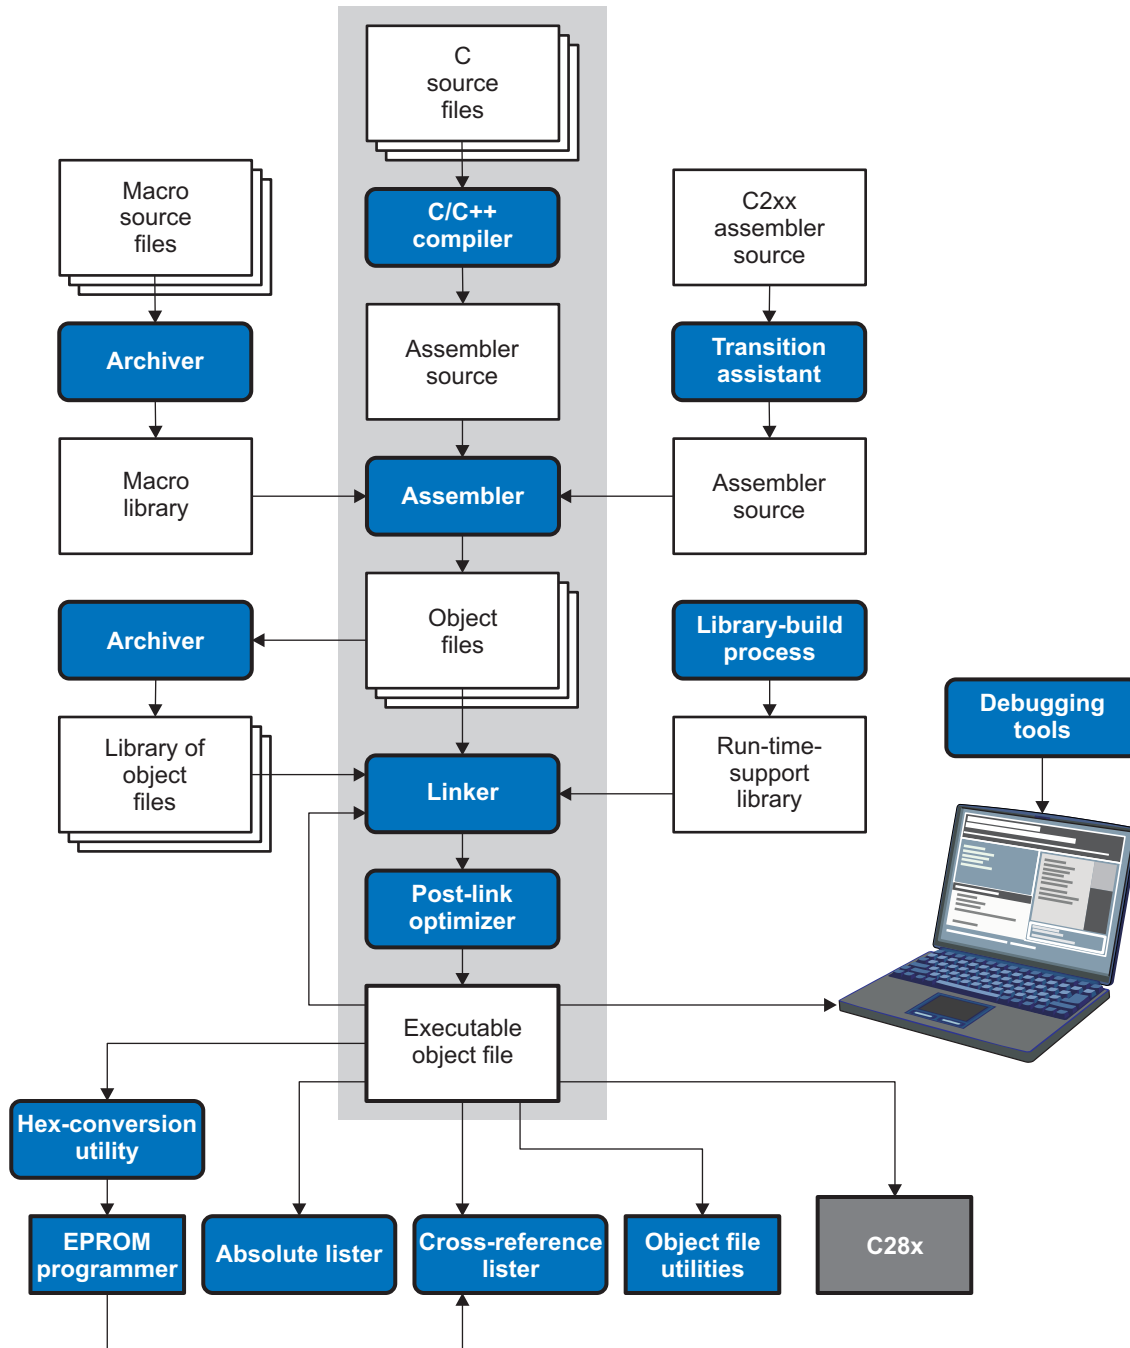



## 1.2 Tools Descriptions

The following list describes the tools that are shown in [Figure 1-1](#):

- The **C/C++ compiler** accepts C/C++ source code and produces TMS320C28x assembly language source code. A **shell program**, an **optimizer**, and an **interlist utility** are included in the compiler package:
  - The shell program enables you to compile, assemble, and link source modules in one step.
  - The optimizer modifies code to improve the efficiency of C/C++ programs.
  - The interlist utility interlists C/C++ source statements with assembly language output to correlate code produced by the compiler with your source code.
 See the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for more information.
- The **assembler** translates assembly language source files into machine language object modules. Source files can contain instructions, assembler directives, and macro directives. You can use assembler directives to control various aspects of the assembly process, such as the source listing format, data alignment, and section content. See [Chapter 3](#) through [Chapter 5](#). See the *TMS320C28x DSP CPU and Instruction Set Reference Guide* for detailed information on the assembly language instruction set.
- The **linker** combines object files into a single executable object module. As it creates the executable module, it performs relocation and resolves external references. The linker accepts relocatable object modules (created by the assembler) as input. It also accepts archiver library members and output modules created by a previous linker run. Link directives allow you to combine object file sections, bind sections or symbols to addresses or within memory ranges, and define or redefine global symbols. See [Chapter 7](#).
- The **archiver** allows you to collect a group of files into a single archive file, called a library. For example, you can collect several macros into a macro library. The assembler searches the library and uses the members that are called as macros by the source file. You can also use the archiver to collect a group of object files into an object library. The linker includes in the library the members that resolve external references during the link. The archiver allows you to modify a library by deleting, replacing, extracting, or adding members. See [Section 6.1](#).
- The **library information archiver** allows you to create an index library of several object file library versions, which is useful when several versions of a single library are available. This index library is the used in the link step in place of a particular version of your object file library. See [Section 6.5](#).
- You can use the **library-build process** to build your own customized run-time-support library. See the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for more information.
- The **hex conversion utility** converts an object file into TI-Tagged, ASCII-Hex, Intel, Motorola-S, or Tektronix object format. The converted file can be downloaded to an EPROM programmer. See [Chapter 11](#).
- The **absolute lister** uses linked object files to create .abs files. These files can be assembled to produce a listing of the absolute addresses of object code. See [Chapter 8](#).
- The **cross-reference lister** uses object files to produce a cross-reference listing showing symbols, their definition, and their references in the linked source files. See [Chapter 9](#).
- The main product of this development process is a module that can be executed in a **TMS320C28x** device. You can use one of several debugging tools to refine and correct your code. Available products include:
  - An instruction-accurate and clock-accurate software simulator
  - An XDS emulator

In addition, the following utilities are provided:

- The **object file display utility** prints the contents of object files, executable files, and/or archive libraries in both human readable and XML formats. See [Section 10.1](#).
- The **disassembler** writes the disassembled object code from object or executable files. See [Section 10.2](#).
- The **name utility** prints a list of names defined and referenced in a object or an executable file. See [Section 10.3](#).
- The **strip utility** removes symbol table and debugging information from object and executable files. See [Section 10.4](#).



---

---

## Introduction to Object Modules

---

---

The assembler and linker create object modules that can be executed by a TMS320C28x device.

Object modules make modular programming easier because they encourage you to think in terms of *blocks* of code and data when you write an assembly language program. These blocks are known as sections. Both the assembler and the linker provide directives that allow you to create and manipulate sections.

This chapter focuses on the concept and use of sections in assembly language programs.

| Topic                                               | Page      |
|-----------------------------------------------------|-----------|
| <b>2.1 Sections .....</b>                           | <b>20</b> |
| <b>2.2 How the Assembler Handles Sections .....</b> | <b>21</b> |
| <b>2.3 How the Linker Handles Sections .....</b>    | <b>27</b> |
| <b>2.4 Relocation .....</b>                         | <b>28</b> |
| <b>2.5 Run-Time Relocation .....</b>                | <b>30</b> |
| <b>2.6 Loading a Program .....</b>                  | <b>30</b> |
| <b>2.7 Symbols in an Object File .....</b>          | <b>31</b> |

## 2.1 Sections

The smallest unit of an object file is called a *section*. A section is a block of code or data that occupies contiguous space in the memory map with other sections. Each section of an object file is separate and distinct. Object files usually contain three default sections:

|                      |                                                    |
|----------------------|----------------------------------------------------|
| <b>.text section</b> | usually contains executable code                   |
| <b>.data section</b> | usually contains initialized data                  |
| <b>.bss section</b>  | usually reserves space for uninitialized variables |

In addition, the assembler and linker allow you to create, name, and link *named* sections that are used like the .data, .text, and .bss sections.

There are two basic types of sections:


|                               |                                                                                                                                                                               |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Initialized sections</b>   | contain data or code. The .text and .data sections are initialized; named sections created with the .sect assembler directive are also initialized.                           |
| <b>Uninitialized sections</b> | reserve space in the memory map for uninitialized data. The .bss section is uninitialized; named sections created with the .usect assembler directive are also uninitialized. |

Several assembler directives allow you to associate various portions of code and data with the appropriate sections. The assembler builds these sections during the assembly process, creating an object file organized as shown in [Figure 2-1](#).

One of the linker's functions is to relocate sections into the target system's memory map; this function is called *allocation*. Because most systems contain several types of memory, using sections can help you use target memory more efficiently. All sections are independently relocatable; you can place any section into any allocated block of target memory. For example, you can define a section that contains an initialization routine and then allocate the routine into a portion of the memory map that contains ROM.

[Figure 2-1](#) shows the relationship between sections in an object file and a hypothetical target memory.

**Figure 2-1. Partitioning Memory Into Logical Blocks**

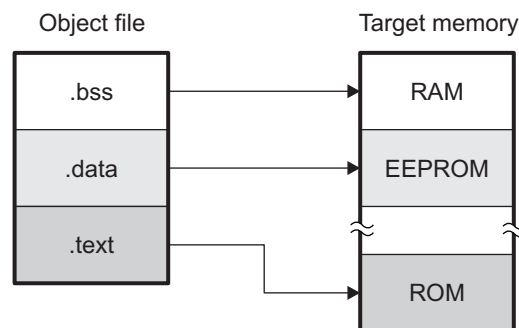

## 2.2 How the Assembler Handles Sections

The assembler identifies the portions of an assembly language program that belong in a given section. The assembler has five directives that support this function:

- .bss
- .usect
- .text
- .data
- .sect

The .bss and .usect directives create *uninitialized sections*; the .text, .data, and .sect directives create *initialized sections*.

You can create subsections of any section to give you tighter control of the memory map. Subsections are created using the .sect and .usect directives. Subsections are identified with the base section name and a subsection name separated by a colon; see [Section 2.2.4](#).

---

### Default Sections Directive

**NOTE:** If you do not use any of the sections directives, the assembler assembles everything into the .text section.

---

### 2.2.1 Uninitialized Sections

Uninitialized sections reserve space in TMS320C28x memory; they are usually allocated into RAM. These sections have no actual contents in the object file; they simply reserve memory. A program can use this space at run time for creating and storing variables.

Uninitialized data areas are built by using the .bss and .usect assembler directives.

- The .bss directive reserves space in the .bss section.
- The .usect directive reserves space in a specific uninitialized named section.

Each time you invoke the .bss or .usect directive, the assembler reserves additional space in the .bss or the named section. The syntaxes for these directives are:

|                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------|
| <pre><b>.bss</b> <i>symbol</i>, <i>size in words</i>[, <i>blocking flag</i>[, <i>alignment flag</i>[, <i>type</i>] ] ]</pre>         |
| <pre><i>symbol</i> <b>.usect</b> "<i>section name</i>", <i>size in words</i>[, <i>blocking flag</i>[, <i>alignment flag</i>] ]</pre> |

|                       |                                                                                                                                                                                                                                                                                                        |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>symbol</i>         | points to the first byte reserved by this invocation of the .bss or .usect directive. The <i>symbol</i> corresponds to the name of the variable that you are reserving space for. It can be referenced by any other section and can also be declared as a global symbol (with the .global directive).  |
| <i>size in words</i>  | is an absolute expression. The .bss directive reserves <i>size in words</i> words in the .bss section. The .usect directive reserves <i>size in words</i> words in section name. For either directive you must specify a size; there is no default value.                                              |
| <i>blocking flag</i>  | is an optional parameter. If you specify a value greater than 0 for this parameter, the assembler allocates <i>size in words</i> contiguously. This means the allocated space does not cross a page boundary unless its size is greater than a page, in which case the objects starts a page boundary. |
| <i>alignment flag</i> | is an optional parameter. It causes the assembler to allocate size in words on long word boundaries.                                                                                                                                                                                                   |
| <i>type</i>           | is an optional parameter. It causes the assembler to produce the appropriate debug information for the symbol. See <a href="#">Section 3.16</a> for more information.                                                                                                                                  |
| <i>section name</i>   | tells the assembler which named section to reserve space in. See <a href="#">Section 2.2.3</a> .                                                                                                                                                                                                       |

The initialized section directives (.text, .data, and .sect) tell the assembler to stop assembling into the current section and begin assembling into the indicated section. The .bss and .usect directives, however, *do not* end the current section and begin a new one; they simply escape from the current section temporarily. The .bss and .usect directives can appear anywhere in an initialized section without affecting its contents. For an example, see [Section 2.2.6](#).

The assembler treats uninitialized subsections (created with the .usect directive) in the same manner as uninitialized sections. See [Section 2.2.4](#), for more information on creating subsections.

## 2.2.2 Initialized Sections

Initialized sections contain executable code or initialized data. The contents of these sections are stored in the object file and placed in TMS320C28x memory when the program is loaded. Each initialized section is independently relocatable and may reference symbols that are defined in other sections. The linker automatically resolves these section-relative references.

Three directives tell the assembler to place code or data into a section. The syntaxes for these directives are:

|                                                                                            |
|--------------------------------------------------------------------------------------------|
| <pre> <b>.text</b> <b>.data</b> <b>.sect</b> " <i>section name</i>"                 </pre> |
|--------------------------------------------------------------------------------------------|

When the assembler encounters one of these directives, it stops assembling into the current section (acting as an implied end of current section command). It then assembles subsequent code into the designated section until it encounters another .text, .data, or .sect directive.

Sections are built through an iterative process. For example, when the assembler first encounters a .data directive, the .data section is empty. The statements following this first .data directive are assembled into the .data section (until the assembler encounters a .text or .sect directive). If the assembler encounters subsequent .data directives, it adds the statements following these .data directives to the statements already in the .data section. This creates a single .data section that can be allocated continuously into memory.

Initialized subsections are created with the .sect directive. The assembler treats initialized subsections in the same manner as initialized sections. See [Section 2.2.4](#), for more information on creating subsections.

### 2.2.3 Named Sections

Named sections are sections that *you* create. You can use them like the default `.text`, `.data`, and `.bss` sections, but they are assembled separately.

For example, repeated use of the `.text` directive builds up a single `.text` section in the object file. When linked, this `.text` section is allocated into memory as a single unit. Suppose there is a portion of executable code (perhaps an initialization routine) that you do not want allocated with `.text`. If you assemble this segment of code into a named section, it is assembled separately from `.text`, and you can allocate it into memory separately. You can also assemble initialized data that is separate from the `.data` section, and you can reserve space for uninitialized variables that is separate from the `.bss` section.

Two directives let you create named sections:

- The `.usect` directive creates uninitialized sections that are used like the `.bss` section. These sections reserve space in RAM for variables.
- The `.sect` directive creates initialized sections, like the default `.text` and `.data` sections, that can contain code or data. The `.sect` directive creates named sections with relocatable addresses.

The syntaxes for these directives are:

```
symbol    .usect "section name", size in words[, blocking flag[, alignment flag[, type] ] ]
          .sect "section name"
```

The *section name* parameter is the name of the section. You can create up to 32 767 separate named sections. For the `.usect` and `.sect` directives, a section name can refer to a subsection; see [Section 2.2.4](#) for details.

Each time you invoke one of these directives with a new name, you create a new named section. Each time you invoke one of these directives with a name that was already used, the assembler assembles code or data (or reserves space) into the section with that name. *You cannot use the same names with different directives.* That is, you cannot create a section with the `.usect` directive and then try to use the same section with `.sect`.

### 2.2.4 Subsections

Subsections are smaller sections within larger sections. Like sections, subsections can be manipulated by the linker. Placing each function and object in a uniquely-named subsection allows finer-grained memory placement, and also allows the linker finer-grained unused-function elimination. You can create subsections by using the `.sect` or `.usect` directive. The syntaxes for a subsection name are:

```
symbol    .usect "section name:subsection name",size in words[,blocking flag[,alignment flag[,type]]]
          .sect "section name:subsection name"
```

A subsection is identified by the base section name followed by a colon and the name of the subsection. A subsection can be allocated separately or grouped with other sections using the same base name. For example, you create a subsection called `_func` within the `.text` section:

```
.sect ".text:_func"
```

Using the linker's `SECTIONS` directive, you can allocate `.text:_func` separately, or with all the `.text` sections. See [Section 7.5.4.1](#) for an example using subsections.

You can create two types of subsections:

- Initialized subsections are created using the `.sect` directive. See [Section 2.2.2](#).
- Uninitialized subsections are created using the `.usect` directive. See [Section 2.2.1](#).

Subsections are allocated in the same manner as sections. See [Section 7.5.4](#) for information on the `SECTIONS` directive.

### 2.2.5 Section Program Counters

The assembler maintains a separate program counter for each section. These program counters are known as *section program counters*, or *SPCs*.

An SPC represents the current address within a section of code or data. Initially, the assembler sets each SPC to 0. As the assembler fills a section with code or data, it increments the appropriate SPC. If you resume assembling into a section, the assembler remembers the appropriate SPC's previous value and continues incrementing the SPC from that value.

The assembler treats each section as if it began at address 0; the linker relocates each section according to its final location in the memory map. See [Section 2.4](#) for information on relocation.

### 2.2.6 Using Sections Directives

[Figure 2-2](#) shows how you can build sections incrementally, using the sections directives to swap back and forth between the different sections. You can use sections directives to begin assembling into a section for the first time, or to continue assembling into a section that already contains code. In the latter case, the assembler simply appends the new code to the code that is already in the section.

The format in [Figure 2-2](#) is a listing file. [Figure 2-2](#) shows how the SPCs are modified during assembly. A line in a listing file has four fields:

- Field 1** contains the source code line counter.
- Field 2** contains the section program counter.
- Field 3** contains the object code.
- Field 4** contains the original source statement.

See [Section 3.14](#) for more information on interpreting the fields in a source listing.



**Figure 2-2. Using Sections Directives Example**

```

1          *****
2          ** Assemble an initialized table into .data. **
3          *****
4 00000000          .data
5 00000000 0011  coeff      .word  011h, 022h, 033h
6 00000001 0022
7 00000002 0033
8
9          *****
10         ** Reserve space in .bss for a variable. **
11         *****
12         .bss  buffer, 10
13
14         *****
15         ** Still in .data **
16         *****
17 00000003 0123  ptr      .word  0123h
18
19         *****
20         ** Assemble code into the .text section. **
21         *****
22         .text
23 00000000 28A1  add:      mov   ar1, #0Fh
24 00000001 000F
25 00000002 0BA1  aloop:   dec   ar1
26 00000003 0009          banz  aloop, ar1--
27 00000004 FFFF
28
29         *****
30         ** Another initialized table into .data **
31         *****
32         .data
33 00000004 00AA  ivals      .word  0AAh, 0BBh, 0CCh
34 00000005 00BB
35 00000006 00CC
36
37         *****
38         ** Define another section for more variables. **
39         *****
40         var2      .usect "newvars", 1
41         inbuf     .usect "newvars", 7
42
43         *****
44         ** Assemble more code into .text. **
45         *****
46         .text
47 00000005 28A1  end_mpy:  mov   ar1, #0Ah
48 00000006 000A
49 00000007 33A1  mloop:   mpy   p,t,ar1
50 00000008 28AC          mov   t, #0Ah
51 00000009 000A
52 0000000a 3FA1          mov   ar1, p
53 0000000b 6BFA          sb   end_mpy, OV

```

As [Figure 2-3](#) shows, the file in [Figure 2-2](#) creates four sections:

- .text** contains ten 32-bit words of object code.
- .data** contains five words of initialized data.
- .bss** reserves ten words in memory.
- newvars** is a named section created with the `.usect` directive; it contains eight words in memory.

The second column shows the object code that is assembled into these sections; the first column shows the source statements that generated the object code.

**Figure 2-3. Object Code Generated by the File in [Figure 2-2](#)**

| Line number | Object code                      | Section |
|-------------|----------------------------------|---------|
| 5           | 0011                             | .data   |
| 5           | 0022                             |         |
| 5           | 0033                             |         |
| 15          | 0123                             |         |
| 29          | 00AA                             |         |
| 29          | 00BB                             |         |
| 29          | 00CC                             | .text   |
| 21          | 28A1                             |         |
| 21          | 000F                             |         |
| 22          | 0BA1                             |         |
| 23          | 0009                             |         |
| 23          | FFFF                             |         |
| 41          | 28A1                             |         |
| 41          | 000A                             |         |
| 42          | 33A1                             |         |
| 43          | 28AC                             |         |
| 43          | 000A                             |         |
| 44          | 3FA1                             |         |
| 45          | 6BFB                             | .bss    |
| 10          | No data<br>10 words<br>preserved |         |
| 34          | No data<br>8 words<br>preserved  | newvars |
| 35          |                                  |         |

## 2.3 How the Linker Handles Sections

The linker has two main functions related to sections. First, the linker uses the sections in object files as building blocks; it combines input sections (when more than one file is being linked) to create output sections in an executable output module. Second, the linker chooses memory addresses for the output sections.

Two linker directives support these functions:

- The *MEMORY* directive allows you to define the memory map of a target system. You can name portions of memory and specify their starting addresses and their lengths.
- The *SECTIONS* directive tells the linker how to combine input sections into output sections and where to place these output sections in memory.

Subsections allow you to manipulate sections with greater precision. You can specify subsections with the linker's *SECTIONS* directive. If you do not specify a subsection explicitly, then the subsection is combined with the other sections with the same base section name.

It is not always necessary to use linker directives. If you do not use them, the linker uses the target processor's default allocation algorithm described in [Section 7.7](#). When you *do* use linker directives, you must specify them in a linker command file.


Refer to the following sections for more information about linker command files and linker directives:

- [Section 7.5](#), *Linker Command Files*
- [Section 7.5.3](#), *The MEMORY Directive*
- [Section 7.5.4](#), *The SECTIONS Directive*
- [Section 7.7](#), *Default Allocation Algorithm*

### 2.3.1 Default Memory Allocation

Figure 2-4 illustrates the process of linking two files together.

**Figure 2-4. Combining Input Sections to Form an Executable Object Module**

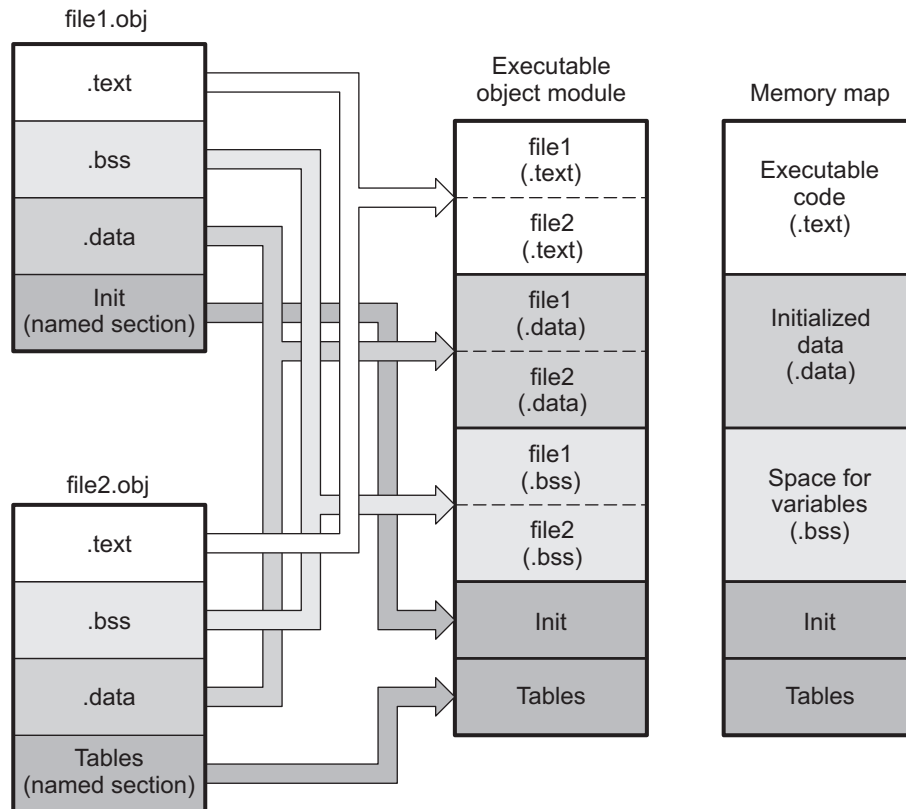

In [Figure 2-4](#), file1.obj and file2.obj have been assembled to be used as linker input. Each contains the .text, .data, and .bss default sections; in addition, each contains a named section. The executable object module shows the combined sections. The linker combines the .text section from file1.obj and the .text section from file2.obj to form one .text section, then combines the two .data sections and the two .bss sections, and finally places the named sections at the end. The memory map shows how the sections are put into memory.

By default, the linker begins at 0h and places the sections one after the other in the following order: .text, .const, .data, .bss, .cinit, and then any named sections in the order they are encountered in the input files.

The C/C++ compiler uses the .const section to store string constants, and variables or arrays that are declared as *const*. The C/C++ compiler produces tables of data for autoinitializing global variables; these variables are stored in a named section called .cinit (see [Example 7-8](#)). For more information on the .const and .cinit sections, see the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.

### 2.3.2 Placing Sections in the Memory Map

[Figure 2-4](#) illustrates the linker's default method for combining sections. Sometimes you may not want to use the default setup. For example, you may not want all of the .text sections to be combined into a single .text section. Or you may want a named section placed where the .data section would normally be allocated. Most memory maps contain various types of memory (RAM, ROM, EPROM, etc.) in varying amounts; you may want to place a section in a specific type of memory.

For further explanation of section placement within the memory map, see the discussions in [Section 7.5.3](#) and [Section 7.5.4](#).

## 2.4 Relocation

The assembler treats each section as if it began at address 0. All relocatable symbols (labels) are relative to address 0 in their sections. Of course, all sections cannot actually begin at address 0 in memory, so the linker *relocates* sections by:

- Allocating them into the memory map so that they begin at the appropriate address as defined with the linker's MEMORY directive
- Adjusting symbol values to correspond to the new section addresses
- Adjusting references to relocated symbols to reflect the adjusted symbol values

The linker uses *relocation entries* to adjust references to symbol values. The assembler creates a relocation entry each time a relocatable symbol is referenced. The linker then uses these entries to patch the references after the symbols are relocated. [Example 2-1](#) contains a code segment for a TMS320C28x device that generates relocation entries.

### Example 2-1. Code That Generates Relocation Entries

```

1          .global X
2 00000000 .text
3 00000000 0080' LC      Y          ; Generates a relocation entry
   00000001 0004
4 00000002 28A1! MOV     AR1,#X    ; Generates a relocation entry
   00000003 0000
5 00000004 7621 Y:      IDLE

```

In [Example 2-1](#), both symbols X and Y are relocatable. Y is defined in the .text section of this module; X is defined in another module. When the code is assembled, X has a value of 0 (the assembler assumes all undefined external symbols have values of 0), and Y has a value of 4 (relative to address 0 in the .text section). The assembler generates two relocation entries: one for X and one for Y. The reference to X is an external reference (indicated by the ! character in the listing). The reference to Y is to an internally defined relocatable symbol (indicated by the ' character in the listing).

After the code is linked, suppose that X is relocated to address 0x7100. Suppose also that the .text section is relocated to begin at address 0x7200; Y now has a relocated value of 0x7204. The linker uses the two relocation entries to patch the two references in the object code:

```

0080' LC      Y          becomes      0080'
0004
28A1! MOV    AR1, #X     becomes      28A1!
0000
                                7100
                                7204
  
```

Sometimes an expression contains more than one relocatable symbol, or cannot be evaluated at assembly time. In this case, the assembler encodes the entire expression in the object file. After determining the addresses of the symbols, the linker computes the value of the expression as shown in [Example 2-2](#).

### Example 2-2. Simple Assembler Listing

```

1          .global  sym1, sym2
2
3 00000000 FF20%      MOV      ACC, #(sym2-sym1)
   00000001 0000
  
```

The symbols sym1 and sym2 are both externally defined. Therefore, the assembler cannot evaluate the expression sym2 - sym1, so it encodes the expression in the object file. The '%' listing character indicates a relocation expression. Suppose the linker relocates sym2 to 300h and sym1 to 200h. Then the linker computes the value of the expression to be 300h - 200h = 100h. Thus the MOV instruction is patched to:

```

00000000 FF20          MOV      ACC, #(sym2-sym1)
00000001 0100
  
```

Each section in an object module has a table of relocation entries. The table contains one relocation entry for each relocatable reference in the section. The linker usually removes relocation entries after it uses them. This prevents the output file from being relocated again (if it is relinked or when it is loaded). A file that contains no relocation entries is an *absolute* file (all its addresses are absolute addresses). If you want the linker to retain relocation entries, invoke the linker with the --relocatable option (see [Section 7.4.2.2](#)).

## 2.5 Run-Time Relocation

At times you may want to load code into one area of memory and run it in another. For example, you may have performance-critical code in an external-memory-based system. The code must be loaded into external memory, but it would run faster in internal memory.

The linker provides a simple way to handle this. Using the `SECTIONS` directive, you can optionally direct the linker to allocate a section twice: first to set its load address and again to set its run address. Use the `load` keyword for the load address and the `run` keyword for the run address.

The load address determines where a loader places the raw data for the section. Any references to the section (such as references to labels in it) refer to its run address. The application must copy the section from its load address to its run address before the first reference of the symbol is encountered at run time; this does *not* happen automatically simply because you specify a separate run address. For an example that illustrates how to move a block of code at run time, see [Example 7-10](#).

If you provide only one allocation (either load or run) for a section, the section is allocated only once and loads and runs at the same address. If you provide both allocations, the section is actually allocated as if it were two separate sections of the same size.

Uninitialized sections (such as `.bss`) are not loaded, so the only significant address is the run address. The linker allocates uninitialized sections only once; if you specify both run and load addresses, the linker warns you and ignores the load address.

For a complete description of run-time relocation, see [Section 7.5.5](#).

## 2.6 Loading a Program

The linker produces executable object modules. An executable object module has the same format as object files that are used as linker input; the sections in an executable object module, however, are combined and relocated into target memory.

To run a program, the data in the executable object module must be transferred, or loaded, into target system memory. Several methods can be used for loading a program, depending on the execution environment. Common situations are described below:

- Code Composer Studio can load an executable object module onto hardware. The Code Composer Studio loader reads the executable file and copies the program into target memory.
- You can use the hex conversion utility (`hex2000`, which is shipped as part of the assembly language package) to convert the executable object module into one of several object file formats. You can then use the converted file with an EPROM programmer to burn the program into an EPROM.

## 2.7 Symbols in an Object File

An object file contains a symbol table that stores information about symbols in the program. The linker uses this table when it performs relocation.

### 2.7.1 External Symbols

External symbols are symbols that are defined in one file and referenced in another file. You can use the `.def`, `.ref`, or `.global` directive to identify symbols as external:

|                |                                                                            |
|----------------|----------------------------------------------------------------------------|
| <b>.def</b>    | The symbol is defined in the current file and used in another file.        |
| <b>.ref</b>    | The symbol is referenced in the current file, but defined in another file. |
| <b>.global</b> | The symbol can be either of the above.                                     |

The following code segment illustrates these definitions.

```

        .def      x
        .ref      y
        .global   z
        .global   q

x:      ADD     AR1, #56h
        B       y, UNC

q:      ADD     AR1, #56h
        B       z, UNC
  
```

In this example, the `.def` definition of `x` says that it is an external symbol defined in this file and that other files can reference `x`. The `.ref` definition of `y` says that it is an undefined symbol that is defined in another file. The `.global` definition of `z` says that it is defined in some file and available in this file. The `.global` definition of `q` says that it is defined in this file and that other files can reference `q`.

The assembler places `x`, `y`, `z`, and `q` in the object file's symbol table. When the file is linked with other object files, the entries for `x` and `q` resolve references to `x` and `q` in other files. The entries for `y` and `z` cause the linker to look through the symbol tables of other files for `y`'s and `z`'s definitions.

The linker must match all references with corresponding definitions. If the linker cannot find a symbol's definition, it prints an error message about the unresolved reference. This type of error prevents the linker from creating an executable object module.

### 2.7.2 The Symbol Table

The assembler always generates an entry in the symbol table when it encounters an external symbol (both definitions and references defined by one of the directives in [Section 2.7.1](#)). The assembler also creates special symbols that point to the beginning of each section; the linker uses these symbols to relocate references to other symbols.

The assembler does not usually create symbol table entries for any symbols other than those described above, because the linker does not use them. For example, labels are not included in the symbol table unless they are declared with the `.global` directive. For informational purposes, it is sometimes useful to have entries in the symbol table for each symbol in a program. To accomplish this, invoke the assembler with the `--output_all_syms` option (see [Section 3.3](#)).





## Assembler Description

The TMS320C28x assembler translates assembly language source files into machine language object files. These files are in object modules, which are discussed in [Chapter 2](#). Source files can contain the following assembly language elements:

|                                |                                                                                  |
|--------------------------------|----------------------------------------------------------------------------------|
| Assembler directives           | described in <a href="#">Chapter 4</a>                                           |
| Macro directives               | described in <a href="#">Chapter 5</a>                                           |
| Assembly language instructions | described in the <i>TMS320C28x DSP CPU and Instruction Set Reference Guide</i> . |

| Topic                                                                                       | Page      |
|---------------------------------------------------------------------------------------------|-----------|
| <b>3.1 Assembler Overview .....</b>                                                         | <b>34</b> |
| <b>3.2 The Assembler's Role in the Software Development Flow .....</b>                      | <b>35</b> |
| <b>3.3 Invoking the Assembler .....</b>                                                     | <b>36</b> |
| <b>3.4 Naming Alternate Directories for Assembler Input .....</b>                           | <b>37</b> |
| <b>3.5 Source Statement Format .....</b>                                                    | <b>40</b> |
| <b>3.6 Constants .....</b>                                                                  | <b>42</b> |
| <b>3.7 Floating-Point Constants .....</b>                                                   | <b>44</b> |
| <b>3.8 Character Strings .....</b>                                                          | <b>44</b> |
| <b>3.9 Symbols .....</b>                                                                    | <b>44</b> |
| <b>3.10 Expressions .....</b>                                                               | <b>50</b> |
| <b>3.11 Built-In Functions .....</b>                                                        | <b>52</b> |
| <b>3.12 Specifying Assembler Fill Values (--asm_code_fill and --asm_data_fill) .....</b>    | <b>53</b> |
| <b>3.13 TMS320C28x Assembler Modes .....</b>                                                | <b>54</b> |
| <b>3.14 Source Listings .....</b>                                                           | <b>57</b> |
| <b>3.15 Debugging Assembly Source .....</b>                                                 | <b>59</b> |
| <b>3.16 C-Type Symbolic Debugging for Assembly Variables (--cdebug_asm_data Option) ...</b> | <b>60</b> |
| <b>3.17 Cross-Reference Listings .....</b>                                                  | <b>61</b> |
| <b>3.18 Smart Encoding .....</b>                                                            | <b>62</b> |
| <b>3.19 Pipeline Conflict Detection .....</b>                                               | <b>63</b> |

### 3.1 Assembler Overview


The 2-pass assembler does the following:

- Processes the source statements in a text file to produce a relocatable object file
- Produces a source listing (if requested) and provides you with control over this listing
- Allows you to segment your code into sections and maintain a section program counter (SPC) for each section of object code
- Defines and references global symbols and appends a cross-reference listing to the source listing (if requested)
- Allows conditional assembly
- Supports macros, allowing you to define macros inline or in a library

### 3.2 The Assembler's Role in the Software Development Flow

Figure 3-1 illustrates the assembler's role in the software development flow. The shaded portion highlights the most common assembler development path. The assembler accepts assembly language source files as input, both those you create and those created by the TMS320C28x C/C++ compiler.

Figure 3-1. The Assembler in the TMS320C28x Software Development Flow

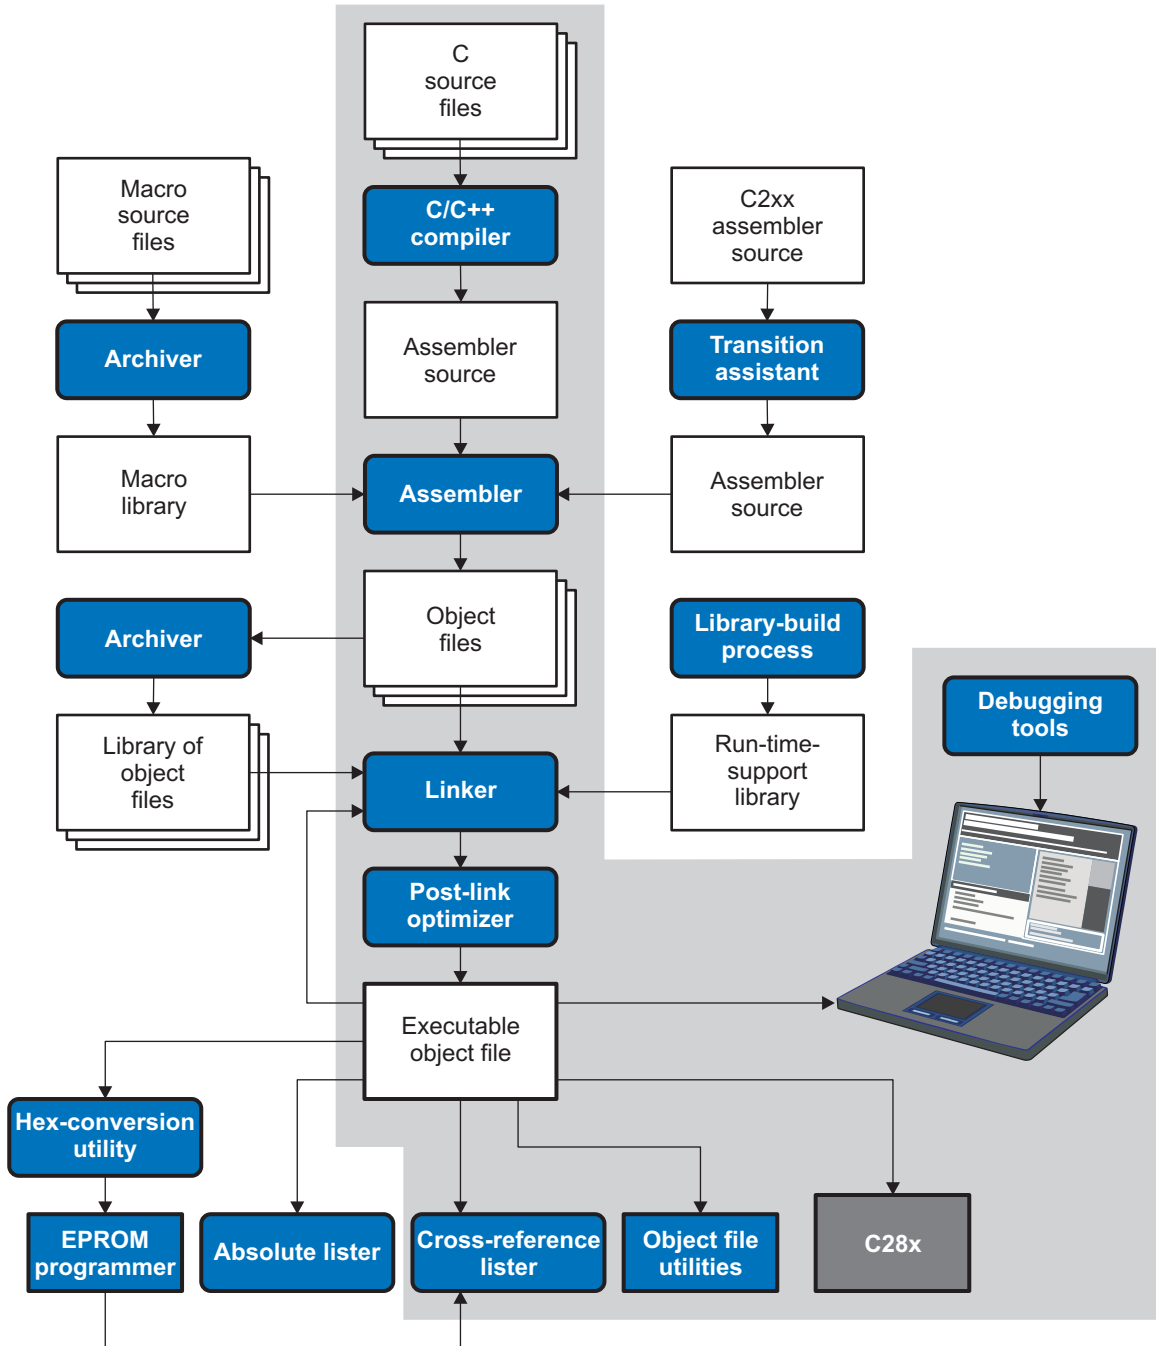

### 3.3 Invoking the Assembler

To invoke the assembler, enter the following:

```
cl2000 version input file [options]
```

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>cl2000</b>     | is the command that invokes the assembler through the compiler. The compiler considers any file with an .asm extension to be an assembly file and calls the assembler.                                                                                                                                                                                                                                                                                                                                    |
| <i>version</i>    | refers to the target processor for which the source file is assembled. The valid versions are -v28 for the TMS320C28x processor and -v27 for the TMS320C27x processor. The version is required; the assembler issues an error if version is not specified.<br>If both -v28 and -v27 are specified, the assembler ignores the second version and issues a warning. For more information, see <a href="#">Section 3.13</a> .<br>The long option versions are --silicon_version=28 and --silicon_version=27. |
| <i>input file</i> | names the assembly language source file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>options</i>    | identify the assembler options that you want to use. Options are case sensitive and can appear anywhere on the command line following the command. Precede each option with one or two hyphens as shown.                                                                                                                                                                                                                                                                                                  |

The valid assembler options are listed in [Table 3-1](#):

**Table 3-1. TMS320C28x Assembler Options**

| Option                         | Alias       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>--absolute_listing</b>      | <b>-aa</b>  | creates an absolute listing. When you use --absolute_listing, the assembler does not produce an object file. The --absolute_listing option is used in conjunction with the absolute lister.                                                                                                                                                                                                                                                                                                                        |
| <b>--asm_code_fill=value</b>   |             | specifies fill value for code sections. Default is zero. See <a href="#">Section 3.12</a> .                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>--asm_data_fill=value</b>   |             | specifies fill value for data sections. Default is NOP instructions. See <a href="#">Section 3.12</a> .                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>--asm_define=name[=def]</b> | <b>-ad</b>  | sets the <i>name</i> symbol. This is equivalent to defining <i>name</i> with a .set directive in the case of a numeric value or with an .asg directive otherwise. If <i>value</i> is omitted, the symbol is set to 1. See <a href="#">Section 3.9.4</a> .                                                                                                                                                                                                                                                          |
| <b>--asm_dependency</b>        | <b>-apd</b> | performs preprocessing for assembly files, but instead of writing preprocessed output, writes a list of dependency lines suitable for input to a standard make utility. The list is written to a file with the same name as the source file but with a .ppa extension.                                                                                                                                                                                                                                             |
| <b>--asm_includes</b>          | <b>-api</b> | performs preprocessing for assembly files, but instead of writing preprocessed output, writes a list of files included with the .include directive. The list is written to a file with the same name as the source file but with a .ppa extension.                                                                                                                                                                                                                                                                 |
| <b>--asm_listing</b>           | <b>-al</b>  | produces a listing file with the same name as the input file with a .lst extension.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>--asm_remarks</b>           | <b>-mw</b>  | enables additional assembly-time checking. A warning is generated if a .bss allocation size is greater than 64 words, or a 16-bit operand value resides outside of the -32768 to 65535 range.                                                                                                                                                                                                                                                                                                                      |
| <b>--asm_undefine=name</b>     | <b>-au</b>  | undefines the predefined constant <i>name</i> , which overrides any --asm_define options for the specified constant.                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>--c2xlp_src_compatible</b>  | <b>-m20</b> | accepts C2xLP assembly instructions and encodes them as equivalent C28x instructions. The --c2xlp_src_compatible option implies the -v28 option. See <a href="#">Section 3.13</a> .                                                                                                                                                                                                                                                                                                                                |
| <b>--cdebug_asm_data</b>       | <b>-mg</b>  | produces C-type symbolic debugging for assembly variables defined in assembly source code using data directives. This support is for basic C types, structures, and arrays.                                                                                                                                                                                                                                                                                                                                        |
| <b>--cla_support[=cla0]</b>    |             | specifies TMS320C28x Control Law Accelerator (CLA) version 0 support. This option is useful only if the source is assembly code, written for the CLA. The option is ignored for C/C++ code. This option does not need any special library support at the linker; the libraries used for C28x with/without FPU support should be sufficient.                                                                                                                                                                        |
| <b>--cmd_file=filename</b>     | <b>-@</b>   | appends the contents of a file to the command line. You can use this option to avoid limitations on command line length imposed by the host operating system. Use an asterisk or a semicolon (* or ;) at the beginning of a line in the command file to include comments. Comments that begin in any other column must begin with a semicolon. Within the command file, filenames or option parameters containing embedded spaces or hyphens must be surrounded with quotation marks. For example: "this-file.asm" |
| <b>--copy_file=filename</b>    | <b>-ahc</b> | copies the specified file for the assembly module. The file is inserted before source file statements. The copied file appears in the assembly listing files.                                                                                                                                                                                                                                                                                                                                                      |

**Table 3-1. TMS320C28x Assembler Options (continued)**

| Option                                      | Alias             | Description                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--cross_reference</code>              | <code>-ax</code>  | produces a cross-reference table and appends it to the end of the listing file; it also adds cross-reference information to the object file for use by the cross-reference utility. If you do not request a listing file but use the <code>--cross_reference</code> option, the assembler creates a listing file automatically, naming it with the same name as the input file with a <code>.lst</code> extension. |
| <code>--float_support={ fpu32 fpu64}</code> |                   | assembles code for C28x with 32-bit or 64-bit hardware FPU support. This option requires the <code>-v28</code> option and assumes the large memory model ( <code>--large_memory_model</code> option) is specified.                                                                                                                                                                                                 |
| <code>--include_file=filename</code>        | <code>-ahi</code> | includes the specified file for the assembly module. The file is included before source file statements. The included file does not appear in the assembly listing files.                                                                                                                                                                                                                                          |
| <code>--include_path=pathname</code>        | <code>-I</code>   | specifies a directory where the assembler can find files named by the <code>.copy</code> , <code>.include</code> , or <code>.mlib</code> directives. There is no limit to the number of directories you can specify in this manner; each pathname must be preceded by the <code>--include_path</code> option. See <a href="#">Section 3.4.1</a> .                                                                  |
| <code>--large_memory_model</code>           | <code>-ml</code>  | allows conditional compilation of 16-bit code with large memory model code. Defines the <code>LARGE_MODEL</code> symbol and sets it to true.                                                                                                                                                                                                                                                                       |
| <code>--out_as_uout</code>                  | <code>-mu</code>  | encodes C2xlp OUT instructions as C28x UOUT instructions. The C28x processor has protected (OUT) and unprotected (UOUT) instructions. By default, the assembler encodes C2xlp OUT instructions as C28x protected OUT instructions. This option is ignored if <code>--c2xlp_src_compatible</code> is not specified.                                                                                                 |
| <code>--output_all_syms</code>              | <code>-as</code>  | puts all defined symbols in the object file's symbol table. The assembler usually puts only global symbols into the symbol table. When you use <code>--output_all_syms</code> , symbols defined as labels or as assembly-time constants are also placed in the table.                                                                                                                                              |
| <code>--quiet</code>                        | <code>-q</code>   | suppresses the banner and progress information (assembler runs in quiet mode).                                                                                                                                                                                                                                                                                                                                     |
| <code>--symdebug:dwarf</code>               | <code>-g</code>   | enables assembler source debugging in the C source debugger. Line information is output to the object module for every line of source in the assembly language source file. You cannot use the <code>--symdebug:dwarf</code> option on assembly code that contains <code>.line</code> directives. See <a href="#">Section 3.15</a> .                                                                               |
| <code>--syms_ignore_case</code>             | <code>-ac</code>  | makes case insignificant in the assembly language files. For example, <code>--syms_ignore_case</code> makes the symbols <code>ABC</code> and <code>abc</code> equivalent. <i>If you do not use this option, case is significant (default).</i> Case significance is enforced primarily with symbol names, not with mnemonics and register names.                                                                   |
| <code>--vcu_support[=vcu0]</code>           |                   | specifies support for the Viterbi, Complex Math and CRC Unit (VCU), version 0. This option is useful only if the source is in assembly code, written for the VCU. The option is ignored for C/C++ code. This option does not need any special library support at the linker; the libraries used for C28x with/without VCU support should be sufficient.                                                            |

### 3.4 Naming Alternate Directories for Assembler Input

The `.copy`, `.include`, and `.mlib` directives tell the assembler to use code from external files. The `.copy` and `.include` directives tell the assembler to read source statements from another file, and the `.mlib` directive names a library that contains macro functions. [Chapter 4](#) contains examples of the `.copy`, `.include`, and `.mlib` directives. The syntax for these directives is:

```
.copy [" ]filename[" ]
.include [" ]filename[" ]
.mlib [" ]filename[" ]
```

The *filename* names a copy/include file that the assembler reads statements from or a macro library that contains macro definitions. If *filename* begins with a number the double quotes are required. The filename may be a complete pathname, a partial pathname, or a filename with no path information. The assembler searches for the file in the following locations in the order given:

1. The directory that contains the current source file. The current source file is the file being assembled when the `.copy`, `.include`, or `.mlib` directive is encountered.
2. Any directories named with the `--include_path` option
3. Any directories named with the `C2000_A_DIR` environment variable
4. Any directories named with the `C2000_C_DIR` environment variable

Because of this search hierarchy, you can augment the assembler's directory search algorithm by using the `--include_path` option (described in [Section 3.4.1](#)) or the `C2000_A_DIR` environment variable (described in [Section 3.4.2](#)). `C2000_C_DIR` is discussed in the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.

### 3.4.1 Using the `--include_path` Assembler Option

The `--include_path` assembler option names an alternate directory that contains copy/include files or macro libraries. The format of the `--include_path` option is as follows:

```
cl2000 -v28 --include_path= pathname source filename [other options]
```

There is no limit to the number of `--include_path` options per invocation; each `--include_path` option names one pathname. In assembly source, you can use the `.copy`, `.include`, or `.mlib` directive without specifying path information. If the assembler does not find the file in the directory that contains the current source file, it searches the paths designated by the `--include_path` options.

For example, assume that a file called `source.asm` is in the current directory; `source.asm` contains the following directive statement:

```
.copy "copy.asm"
```

Assume the following paths for the `copy.asm` file:

```
UNIX:           /tools/files/copy.asm
Windows:       c:\tools\files\copy.asm
```

You could set up the search path with the commands shown below:

| Operating System    | Enter                                                             |
|---------------------|-------------------------------------------------------------------|
| UNIX (Bourne shell) | <code>cl2000 -v28 --include_path=/tools/files source.asm</code>   |
| Windows             | <code>cl2000 -v28 --include_path=c:\tools\files source.asm</code> |

The assembler first searches for `copy.asm` in the current directory because `source.asm` is in the current directory. Then the assembler searches in the directory named with the `--include_path` option.

### 3.4.2 Using the `C2000_A_DIR` Environment Variable

An environment variable is a system symbol that you define and assign a string to. The assembler uses the `C2000_A_DIR` environment variable to name alternate directories that contain copy/include files or macro libraries.

The assembler looks for the `C2000_A_DIR` environment variable and then reads and processes it. If the assembler does not find the `C2000_A_DIR` variable, it then searches for `C2000_C_DIR`. The processor-specific variables are useful when you are using Texas Instruments tools for different processors at the same time.

See the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for details on `C2000_C_DIR`.

The command syntax for assigning the environment variable is as follows:

| Operating System    | Enter                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------|
| UNIX (Bourne Shell) | <code>C2000_A_DIR=" pathname<sub>1</sub>; pathname<sub>2</sub>; . . . "; export C2000_A_DIR</code> |
| Windows             | <code>set C2000_A_DIR= pathname<sub>1</sub>; pathname<sub>2</sub>; . . .</code>                    |

The *pathnames* are directories that contain copy/include files or macro libraries. The pathnames must follow these constraints:

- Pathnames must be separated with a semicolon.
- Spaces or tabs at the beginning or end of a path are ignored. For example the space before and after the semicolon in the following is ignored:

```
set C28X_A_DIR= c:\path\one\to\tools ; c:\path\two\to\tools
```

- Spaces and tabs are allowed within paths to accommodate Windows directories that contain spaces. For example, the pathnames in the following are valid:

```
set C28X_A_DIR=c:\first path\to\tools;d:\second path\to\tools
```

In assembly source, you can use the `.copy`, `.include`, or `.mlib` directive without specifying path information. If the assembler does not find the file in the directory that contains the current source file or in directories named by the `--include_path` option, it searches the paths named by the environment variable.

For example, assume that a file called `source.asm` contains these statements:

```
.copy "copy1.asm"
.copy "copy2.asm"
```

Assume the following paths for the files:

UNIX:                    /tools/files/copy1.asm and /dsys/copy2.asm  
Windows:                c:\tools\files\copy1.asm and c:\dsys\copy2.asm

You could set up the search path with the commands shown below:

| Operating System    | Enter                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------|
| UNIX (Bourne shell) | <code>C2000_A_DIR="/dsys"; export C2000_A_DIR<br/>c12000 -v28 --include_path=/tools/files source.asm</code> |
| Windows             | <code>C2000_A_DIR=c:\dsys<br/>c12000 -v28 --include_path=c:\tools\files source.asm</code>                   |

The assembler first searches for `copy1.asm` and `copy2.asm` in the current directory because `source.asm` is in the current directory. Then the assembler searches in the directory named with the `--include_path` option and finds `copy1.asm`. Finally, the assembler searches the directory named with `C2000_A_DIR` and finds `copy2.asm`.

The environment variable remains set until you reboot the system or reset the variable by entering one of these commands:

| Operating System    | Enter                          |
|---------------------|--------------------------------|
| UNIX (Bourne shell) | <code>unset C2000_A_DIR</code> |
| Windows             | <code>set C2000_A_DIR=</code>  |

### 3.5 Source Statement Format

TMS320C28x assembly language source programs consist of source statements that can contain assembler directives, assembly language instructions, macro directives, and comments. A source statement can contain four ordered fields (label, mnemonic, operand list, and comment). The general syntax for source statements is as follows:

```
[label[:] ] [||] mnemonic [operand list] [;comment]
```

Labels cannot be placed on instructions that have parallel bars.

Following are examples of source statements:

```
two      .set 2           ; Symbol two = 2
Begin:   MOV  AR1,#two    ; Load AR1 with 2
         .word 016h      ; Initialize a word with 016h
```

The C28x assembler reads up to 200 characters per line. Any characters beyond 200 are truncated. Keep the operational part of your source statements (that is, everything other than comments) less than 200 characters in length for correct assembly. Your comments can extend beyond the 200-character limit, but the truncated portion is not included in the listing file.

Follow these guidelines:

- All statements must begin with a label, a blank, an asterisk, or a semicolon.
- Labels are optional; if used, they must begin in column 1.
- One or more blanks must separate each field. Tab and space characters are blanks. You must separate the operand list from the preceding field with a blank.
- Comments are optional. Comments that begin in column 1 can begin with an asterisk or a semicolon (\* or ;), but comments that begin in any other column *must* begin with a semicolon.
- A mnemonic cannot begin in column 1 or it will be interpreted as a label.

The following sections describe each of the fields.

#### 3.5.1 Label Field

Labels are optional for all assembly language instructions and for most (but not all) assembler directives. When used, a label must begin in column 1 of a source statement. A label can contain up to 128 alphanumeric characters (A-Z, a-z, 0-9, \_, and \$). Labels are case sensitive (except when the `--syms_ignore_case` option is used), and the first character cannot be a number. A label can be followed by a colon (:). The colon is not treated as part of the label name. If you do not use a label, the first character position must contain a blank, a semicolon, or an asterisk.

When you use a label, its value is the current value of the SPC. The label points to the statement it is associated with. For example, if you use the `.word` directive to initialize several words, a label points to the first word. In the following example, the label `Start` has the value 40h.

```
.      .      .      .
.      .      .      .
.      .      .      .
.      .      .      .
      9          * Assume some code was assembled
10 000040 000A Start: .word 0Ah,3,7
      000044 0003
      000048 0007
```

A label on a line by itself is a valid statement. The label assigns the current value of the section program counter to the label; this is equivalent to the following directive statement:

```
label .equ $ ; $ provides the current value of the SPC
```

When a label appears on a line by itself, it points to the instruction on the next line (the SPC is not incremented):

```
      1 000000      Here:
      2 000000 0003      .word 3
```

If you do not use a label, the character in column 1 must be a blank, an asterisk, or a semicolon.



### 3.5.2 Mnemonic Field

The mnemonic field follows the label field. The mnemonic field cannot start in column 1; if it does, it is interpreted as a label. The mnemonic field can begin with pipe symbols (||) when the previous instruction is a RPT. Pipe symbols that follow a RPT instruction indicate instructions that are repeated. For example:

```

      RPT
||   Inst2 ← This instruction is repeated.

```

In the case of C28x with FPU support, the mnemonic field can begin with pipe symbols to indicate instructions that are to be executed in parallel. For example, in the instance given below, Inst1 and Inst2 are FPU instructions that execute in parallel:

```

      Instr1
||   Instr2

```

Next, the mnemonic field contains one of the following items:

- Machine-instruction mnemonic (such as ADD, MOV, or B)
- Assembler directive (such as .data, .list, .equ)
- Macro directive (such as .macro, .var, .mexit)
- Macro call

### 3.5.3 Operand Field

The operand field follows the mnemonic field and contains one or more operands. The operand field is not required for all instructions or directives. An operand consists of the following items:

- Constants (see [Section 3.6](#))
- Floating-point constants (see [Section 3.7](#))
- Character strings (see [Section 3.8](#))
- Symbols (see [Section 3.9](#))
- Expressions (combination of constants and symbols; see [Section 3.10](#))

You must separate operands with commas.

### 3.5.4 Comment Field

A comment can begin in any column and extends to the end of the source line. A comment can contain any ASCII character, including blanks. Comments are printed in the assembly source listing, but they do not affect the assembly.

A source statement that contains only a comment is valid. If it begins in column 1, it can start with a semicolon (;) or an asterisk (\*). Comments that begin anywhere else on the line must begin with a semicolon. The asterisk identifies a comment only if it appears in column 1.

### 3.6 Constants

The assembler supports several types of constants:

- Binary integer
- Octal integer
- Decimal integer
- Hexadecimal integer
- Character
- Assembly time
- Floating-point

The assembler maintains each constant internally as a 32-bit quantity. Constants are not sign extended. For example, the constant 00FFh is equal to 00FF (base 16) or 255 (base 10); it *does not* equal -1. However, when used with the .byte directive, -1 is equivalent to 00FFh.

#### 3.6.1 Binary Integers

A binary integer constant is a string of up to 32 binary digits (0s and 1s) followed by the suffix B (or b). If fewer than 32 digits are specified, the assembler right justifies the value and fills the unspecified bits with zeros. These are examples of valid binary constants:

|           |                                                          |
|-----------|----------------------------------------------------------|
| 00000000B | Constant equal to 0 <sub>10</sub> or 0 <sub>16</sub>     |
| 0100000b  | Constant equal to 32 <sub>10</sub> or 20 <sub>16</sub>   |
| 01b       | Constant equal to 1 <sub>10</sub> or 1 <sub>16</sub>     |
| 11111000B | Constant equal to 248 <sub>10</sub> or 0F8 <sub>16</sub> |

#### 3.6.2 Octal Integers

An octal integer constant is a string of up to 11 octal digits (0 through 7) followed by the suffix Q (or q). These are examples of valid octal constants:

|         |                                                                |
|---------|----------------------------------------------------------------|
| 10Q     | Constant equal to 8 <sub>10</sub> or 8 <sub>16</sub>           |
| 010     | Constant equal to 8 <sub>10</sub> or 8 <sub>16</sub> © format) |
| 100000Q | Constant equal to 32 768 <sub>10</sub> or 8000 <sub>16</sub>   |
| 226q    | Constant equal to 150 <sub>10</sub> or 96 <sub>16</sub>        |

---

#### Octal Numbers Are Not Accepted With C2xlp Syntax Mode

**NOTE:** When the -v28 --c2xlp\_src\_compatible options are specified, cl2000 accepts C2xlp source code. The C2xlp assembler interpreted numbers with leading zeros as decimal integers, that is 010 was interpreted as 10. Because of this, when cl2000 is invoked with -v28 --c2xlp\_src\_compatible --asm\_remarks, the assembler issues a warning when it encounters an octal number.

---

### 3.6.3 Decimal Integers

A decimal integer constant is a string of decimal digits ranging from -2147 483 648 to 4 294 967 295. These are examples of valid decimal constants:

|        |                                                               |
|--------|---------------------------------------------------------------|
| 1000   | Constant equal to 1000 <sub>10</sub> or 3E8 <sub>16</sub>     |
| -32768 | Constant equal to -32 768 <sub>10</sub> or 8000 <sub>16</sub> |
| 25     | Constant equal to 25 <sub>10</sub> or 19 <sub>16</sub>        |

### 3.6.4 Hexadecimal Integers

A hexadecimal integer constant is a string of up to eight hexadecimal digits followed by the suffix H (or h) or preceded by 0x. Hexadecimal digits include the decimal values 0-9 and the letters A-F or a-f. A *hexadecimal constant must begin with a decimal value (0-9)*. If fewer than eight hexadecimal digits are specified, the assembler right justifies the bits. These are examples of valid hexadecimal constants:

|       |                                                                     |
|-------|---------------------------------------------------------------------|
| 78h   | Constant equal to 120 <sub>10</sub> or 0078 <sub>16</sub>           |
| 0x78  | Constant equal to 120 <sub>10</sub> or 0078 <sub>16</sub> © format) |
| 0Fh   | Constant equal to 15 <sub>10</sub> or 000F <sub>16</sub>            |
| 37ACh | Constant equal to 14 252 <sub>10</sub> or 37AC <sub>16</sub>        |

### 3.6.5 Character Constants

A character constant is a single character enclosed in *single* quotes. The characters are represented internally as 8-bit ASCII characters. Two consecutive single quotes are required to represent each single quote that is part of a character constant. A character constant consisting only of two single quotes is valid and is assigned the value 0. These are examples of valid character constants:

|     |                                                                                    |
|-----|------------------------------------------------------------------------------------|
| 'a' | Defines the character constant a and is represented internally as 61 <sub>16</sub> |
| 'C' | Defines the character constant C and is represented internally as 43 <sub>16</sub> |
| ''  | Defines the character constant ' and is represented internally as 27 <sub>16</sub> |
| "   | Defines a null character and is represented internally as 00 <sub>16</sub>         |

Notice the difference between character *constants* and character *strings* (Section 3.8 discusses character strings). A character constant represents a single integer value; a string is a sequence of characters.

### 3.6.6 Assembly-Time Constants

If you use the .set directive to assign a value to a symbol (see [Define Assembly-Time Constant](#)), the symbol becomes a constant. To use this constant in expressions, the value that is assigned to it must be absolute. For example:

```
shift3 .set 3
      MOV AR1, #shift3
```

You can also use the .set directive to assign symbolic constants for register names. In this case, the symbol becomes a synonym for the register:

```
myReg .set AR1
      MOV myReg, #3
```

### 3.7 Floating-Point Constants

A floating-point constant is a string of decimal digits followed by an optional decimal point, fractional portion, and exponent portion. The syntax for a floating-point number is:

$$[ +|- ] [ nnn ] . [ nnn [ E|e [ +|- ] nnn ] ]$$

Replace *nnn* with a string of decimal digits. You can precede *nnn* with a + or a -. You must specify a decimal point. For example, 3.e5 is valid, but 3e5 is not valid. The exponent indicates a power of 10. These are examples of valid character constants:

```
3.0
3.14
.3
-0.314e13
+314.59e-2
```

### 3.8 Character Strings

A character string is a string of characters enclosed in *double* quotes. Double quotes that are part of character strings are represented by two consecutive double quotes. The maximum length of a string varies and is defined for each directive that requires a character string. Characters are represented internally as 8-bit ASCII characters.

These are examples of valid character strings:

```
"sample program"    defines the 14-character string sample program.
"PLAN ""C""         defines the 8-character string PLAN "C".
```

Character strings are used for the following:

- Filenames, as in .copy "filename"
- Section names, as in .sect "section name"
- Data initialization directives, as in .byte "charstring"
- Operands of .string directives

### 3.9 Symbols

Symbols are used as labels, constants, and substitution symbols. A symbol name is a string of alphanumeric characters, the dollar sign, and underscores (A-Z, a-z, 0-9, \$, and \_). The first character in a symbol cannot be a number, and symbols cannot contain embedded blanks. The symbols you define are case sensitive; for example, the assembler recognizes ABC, Abc, and abc as three unique symbols. You can override case sensitivity with the --syms\_ignore\_case assembler option (see [Section 3.3](#)). A symbol is valid only during the assembly in which it is defined, unless you use the .global directive or the .def directive to declare it as an external symbol (see [Identify Global Symbols](#)).

#### 3.9.1 Labels

Symbols used as labels become symbolic addresses that are associated with locations in the program. Labels used locally within a file must be unique. Mnemonic opcodes and assembler directive names without the . prefix are valid label names.

Labels can also be used as the operands of .global, .ref, .def, or .bss directives; for example:

```
.global label1

label2: NOP
        ADD  AR1, label1
        SB   label2, UNC
```

### 3.9.2 Local Labels

Local labels are special labels whose scope and effect are temporary. A local label can be defined in two ways:

- $\$n$ , where  $n$  is a decimal digit in the range 0-9. For example,  $\$4$  and  $\$1$  are valid local labels. See [Example 3-1](#).
- *name?*, where *name* is any legal symbol name as described above. The assembler replaces the question mark with a period followed by a unique number. When the source code is expanded, *you will not see the unique number in the listing file*. Your label appears with the question mark as it did in the source definition. You cannot declare this label as global. See [Example 3-2](#).

Normal labels must be unique (they can be declared only once), and they can be used as constants in the operand field. Local labels, however, can be undefined and defined again. Local labels cannot be defined by directives.

A local label can be undefined or reset in one of these ways:

- By using the `.newblock` directive
- By changing sections (using a `.sect`, `.text`, or `.data` directive)
- By entering an include file (specified by the `.include` or `.copy` directive)
- By leaving an include file (specified by the `.include` or `.copy` directive)

#### Example 3-1. Local Labels of the Form $\$n$

This is an example of code that declares and uses a local label legally:

```

$1:
    ADDB  AL, #-7
    B     $1, GEQ

    .newblock           ; undefine $1 to use it again.

$1  MOV   T, AL
     MPYB ACC, T, #7
     CMP  AL, #1000
     B     $1, LT

```

The following code uses a local label illegally:

```

$1:
    ADDB  AL, #-7
    B     $1, GEQ

$1  MOV   T, AL           ; WRONG - $1 is multiply defined.
     MPYB ACC, T, #7
     CMP  AL, #1000
     B     $1, LT

```

The  $\$1$  label is not undefined before being reused by the second branch instruction. Therefore,  $\$1$  is redefined, which is illegal.

Local labels are especially useful in macros. If a macro contains a normal label and is called more than once, the assembler issues a multiple-definition error. If you use a local label and `.newblock` within a macro, however, the local label is used and reset each time the macro is expanded.

Up to ten local labels of the  $\$n$  form can be in effect at one time. Local labels of the form *name?* are not limited. After you undefine a local label, you can define it and use it again. Local labels do not appear in the object code symbol table.

Because local labels are intended to be used only locally, branches to local labels are not expanded in case the branch's offset is out of range.

**Example 3-2. Local Labels of the Form name?**

```

*****
** First definition of local label mylab          **
*****
        nop
mylab?  nop
        B mylab?, UNC

*****
** Include file has second definition of mylab   **
*****
        .copy "a.inc"

*****
** Third definition of mylab, reset upon exit from .include **
*****
mylab?  nop
        B mylab?, UNC

*****
** Fourth definition of mylab in macro, macros use different **
** namespace to avoid conflicts                    **
*****
mymac  .macro
mylab?  nop
        B mylab?, UNC
        .endm

*****
** Macro invocation                                **
*****
        mymac

*****
** Reference to third definition of mylab. Definition is not **
** reset by macro invocation.                        **
*****
        B mylab?, UNC

*****
** Changing section, allowing fifth definition of mylab      **
*****
        .sect "Sect_One"
        nop
mylab?  .word 0
        nop
        nop
        B mylab?, UNC

*****
** The .newblock directive allows sixth definition of mylab  **
*****
mylab?  .newblock
        .word 0
        nop
        nop
        B mylab?, UNC

```

### 3.9.3 Symbolic Constants

Symbols can be set to constant values. By using constants, you can equate meaningful names with constant values. The `.set` and `.struct/.tag/.endstruct` directives enable you to set constants to symbolic names. Symbolic constants *cannot* be redefined. The following example shows how these directives can be used:

```
K      .set 1024           ; constant definitions
maxbuf .set 2*K

item  .struct           ; item structure definition
value .int             ; value offset = 0
delta .int             ; delta offset = 4
i_len .endstruct       ; item size    = 8

array .tag item
      .bss array, i_len*K ; declare an array of K "items"
      .text
      MOV array.delta, AR1 ; access array .delta
```

The assembler also has several predefined symbolic constants; these are discussed in [Section 3.9.5](#).

### 3.9.4 Defining Symbolic Constants (`--asm_define` Option)

The `--asm_define` option equates a constant value or a string with a symbol. The symbol can then be used in place of a value in assembly source. The format of the `--asm_define` option is as follows:

```
cl2000 -v28 --asm_define=name[=value]
```

The *name* is the name of the symbol you want to define. The *value* is the constant or string value you want to assign to the symbol. If the *value* is omitted, the symbol is set to 1. If you want to define a quoted string and keep the quotation marks, do one of the following:

- For Windows, use `--asm_define= name ="\" value \"`". For example, `--asm_define=car=\"sedan\"`
- For UNIX, use `--asm_define= name ="\" value \"`". For example, `--asm_define=car="sedan"`
- For Code Composer, enter the definition in a file and include that file with the `--cmd_file` (or `-@`) option.

Once you have defined the name with the `--asm_define` option, the symbol can be used in place of a constant value, a well-defined expression, or an otherwise undefined symbol used with assembly directives and instructions. For example, on the command line you enter:

```
cl2000 -v28 --asm_define=SYM1=1 --asm_define=SYM2=2 --asm_define=SYM3=3 --asm_define=SYM4=4
value.asm
```

Since you have assigned values to SYM1, SYM2, SYM3, and SYM4, you can use them in source code. [Example 3-3](#) shows how the `value.asm` file uses these symbols without defining them explicitly.

Within assembler source, you can test the symbol defined with the `--asm_define` option with the following directives:

| Type of Test       | Directive Usage                          |
|--------------------|------------------------------------------|
| Existence          | <code>.if \$isdefed(" name ")</code>     |
| Nonexistence       | <code>.if \$isdefed(" name ") = 0</code> |
| Equal to value     | <code>.if name = value</code>            |
| Not equal to value | <code>.if name != value</code>           |

The argument to the `$isdefed` built-in function must be enclosed in quotes. The quotes cause the argument to be interpreted literally rather than as a substitution symbol.

**Example 3-3. Using Symbolic Constants Defined on Command Line**

```

IF_4:if      SYM4 = SYM2 * SYM2
    .byte    SYM4          ; Equal values
    .else
    .byte    SYM2 * SYM2  ; Unequal values
    .endif

IF_5:  .if      SYM1 <= 10
    .byte    10           ; Less than / equal
    .else
    .byte    SYM1         ; Greater than
    .endif

IF_6:  .if      SYM3 * SYM2 != SYM4 + SYM2
    .byte    SYM3 * SYM2 ; Unequal value
    .else
    .byte    SYM4 + SYM4 ; Equal values
    .endif

IF_7:  .if      SYM1 = SYM2
    .byte    SYM1
    .elseif  SYM2 + SYM3 = 5
    .byte    SYM2 + SYM3
    .endif
    
```

**3.9.5 Predefined Symbolic Constants**

The assembler has several predefined symbols, including the following types:

- **\$**, the dollar-sign character, represents the current value of the section program counter (SPC). \$ is a relocatable symbol.
- **Processor symbols**, including the following:

| Symbol name        | Description                                                              |
|--------------------|--------------------------------------------------------------------------|
| .TMS320C2000       | Always set to 1                                                          |
| .TMS320C2700       | Set to 1 for C27x (-v27 option), otherwise 0                             |
| .TMS320C2800       | Set to 1 for C28x (-v28 option), otherwise 0                             |
| .TMS320C2800_FPU32 | Set to 1 for C28x (-v28 option) with 32-bit FPU support, otherwise 0     |
| __LARGE_MODEL      | Set to 1 for large model mode (--large_memory_model option); otherwise 0 |

- **CPU control registers**, including the following:

| Register       | Description                                            |
|----------------|--------------------------------------------------------|
| ACC/AH, AL     | Accumulator/accumulator high, accumulator low          |
| DBGIER         | Debug interrupt enable register                        |
| DP             | Data page pointer                                      |
| IER            | Interrupt enable register                              |
| IFR            | Interrupt flag pointer                                 |
| P/PH, PL       | Product register/product high, product low             |
| PC             | Program counter                                        |
| RPC            | Return program counter                                 |
| ST0            | Status register 0                                      |
| ST1            | Status register 1                                      |
| SP             | Stack pointer register                                 |
| TH             | Multiplicand high register; an alias of T register     |
| XAR0/AR0H, AR0 | Auxiliary register 0/auxiliary 0 high, auxiliary 0 low |
| XAR1/AR1H, AR1 | Auxiliary register 1/auxiliary 1 high, auxiliary 1 low |



| Register       | Description                                               |
|----------------|-----------------------------------------------------------|
| XAR2/AR2H, AR2 | Auxiliary register 2/auxiliary 2 high, auxiliary 2 low    |
| XAR3/AR3H, AR3 | Auxiliary register 3/auxiliary 3 high, auxiliary 3 low    |
| XAR4/AR4H, AR4 | Auxiliary register 4/auxiliary 4 high, auxiliary 4 low    |
| XAR5/AR5H, AR5 | Auxiliary register 5/auxiliary 5 high, auxiliary 5 low    |
| XAR6/AR6H, AR6 | Auxiliary register 6/auxiliary 6 high, auxiliary 6 low    |
| XAR7/AR7H, AR7 | Auxiliary register 7/auxiliary 7 high, auxiliary 7 low    |
| XT/T, TL       | Multiplicand register/Multiplicand high, multiplicand low |

Control registers can be entered as all upper-case or all lower-case characters; for example, IER can also be entered as ier.

- **FPU control registers**, including the following:

| Register | Description                    |
|----------|--------------------------------|
| R0H      | Floating point register 0      |
| R1H      | Floating point register 1      |
| R2H      | Floating point register 2      |
| R3H      | Floating point register 3      |
| R4H      | Floating point register 4      |
| R5H      | Floating point register 5      |
| R6H      | Floating point register 6      |
| R7H      | Floating point register 7      |
| STF      | Floating point status register |

- **VCU registers**, including the following:

| Register | Description                     |
|----------|---------------------------------|
| VSTATUS  | VCU status and control register |
| VR0-VR8  | VCU registers                   |
| VT0, VT1 | VCU transition bit registers    |
| VCRC     | VCU CRC result register         |

### 3.9.6 Substitution Symbols

Symbols can be assigned a string value (variable). This enables you to alias character strings by equating them to symbolic names. Symbols that represent character strings are called substitution symbols. When the assembler encounters a substitution symbol, its string value is substituted for the symbol name. Unlike symbolic constants, substitution symbols can be redefined.

A string can be assigned to a substitution symbol anywhere within a program; for example:

```
.asg "AR1", myReg ;register AR1
.asg "**+XAR2 [2]", ARG1 ;first arg
.asg "**+XAR2 [1]", ARG2 ;second arg
```

When you are using macros, substitution symbols are important because macro parameters are actually substitution symbols that are assigned a macro argument. The following code shows how substitution symbols are used in macros:

```
add2 .macro A, B ; add2 macro definition
MOV AL, A
ADD AL, B
.endm

*add2 invocation
add2 LOC1, LOC2 ;add "LOC1" argument to a
;second argument "LOC2".

MOV AL,LOC1
ADD AL,LOC2
```

See [Chapter 5](#) for more information about macros.

### 3.10 Expressions

An expression is a constant, a symbol, or a series of constants and symbols separated by arithmetic operators. The 32-bit ranges of valid expression values are -2147 483 648 to 2147 483 647 for signed values, and 0 to 4 294 967 295 for unsigned values. Three main factors influence the order of expression evaluation:

|                                 |                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parentheses</b>              | Expressions enclosed in parentheses are always evaluated first.<br>$8 / (4 / 2) = 4$ , but $8 / 4 / 2 = 1$<br>You <i>cannot</i> substitute braces ( { } ) or brackets ( [ ] ) for parentheses.                                                                         |
| <b>Precedence groups</b>        | Operators, listed in <a href="#">Table 3-2</a> , are divided into nine precedence groups. When parentheses do not determine the order of expression evaluation, the highest precedence operation is evaluated first.<br>$8 + 4 / 2 = 10$ ( $4 / 2$ is evaluated first) |
| <b>Left-to-right evaluation</b> | When parentheses and precedence groups do not determine the order of expression evaluation, the expressions are evaluated from left to right, except for Group 1, which is evaluated from right to left.<br>$8 / 4 * 2 = 4$ , but $8 / (4 * 2) = 1$                    |

#### 3.10.1 Operators

[Table 3-2](#) lists the operators that can be used in expressions, according to precedence group.

##### Difference in Precedence For C2xlp Source

**NOTE:** When cl2000 is invoked with -v28 --c2xlp\_src\_compatible, the assembler accepts C2xlp source code. A programmer writing code for the C2xlp assembler would assume different precedence than that used by the C28x assembler. Therefore when invoked with the -v28 --c2xlp\_src\_compatible --asm\_remarks options, the C28x assembler issues a warning when it encounters an expression such as  $a + b << c$ .

**Table 3-2. Operators Used in Expressions (Precedence)**

| Group <sup>(1)</sup> | Operator           | Description <sup>(2)</sup>                                                     |
|----------------------|--------------------|--------------------------------------------------------------------------------|
| 1                    | +<br>-<br>~<br>!   | Unary plus<br>Unary minus<br>1s complement<br>Logical NOT                      |
| 2                    | *<br>/<br>%        | Multiplication<br>Division<br>Modulo                                           |
| 3                    | +<br>-             | Addition<br>Subtraction                                                        |
| 4                    | <<<br>>>           | Shift left<br>Shift right                                                      |
| 5                    | <<br><=<br>><br>>= | Less than<br>Less than or equal to<br>Greater than<br>Greater than or equal to |
| 6                    | =[=<br>!=          | Equal to<br>Not equal to                                                       |
| 7                    | &                  | Bitwise AND                                                                    |
| 8                    | ^                  | Bitwise exclusive OR (XOR)                                                     |
| 9                    |                    | Bitwise OR                                                                     |

<sup>(1)</sup> Group 1 operators are evaluated right to left. All other operators are evaluated left to right.

<sup>(2)</sup> Unary + and - have higher precedence than the binary forms.

### 3.10.2 Expression Overflow and Underflow

The assembler checks for overflow and underflow conditions when arithmetic operations are performed at assembly time. It issues a warning (the message *Value Truncated*) whenever an overflow or underflow occurs. The assembler *does not* check for overflow or underflow in multiplication.

### 3.10.3 Well-Defined Expressions

Some assembler directives require well-defined expressions as operands. Well-defined expressions contain only symbols or assembly-time constants that are defined before they are encountered in the expression. The evaluation of a well-defined expression must be absolute.

This is an example of a well-defined expression:

```
1000h+X
```

where X was previously defined as an absolute symbol.

### 3.10.4 Conditional Expressions

The assembler supports relational operators that can be used in any expression; they are especially useful for conditional assembly. Relational operators include the following:

|   |              |    |                          |
|---|--------------|----|--------------------------|
| = | Equal to     | != | Not equal to             |
| < | Less than    | <= | Less than or equal to    |
| > | Greater than | >= | Greater than or equal to |

Conditional expressions evaluate to 1 if true and 0 if false and can be used only on operands of equivalent types; for example, absolute value compared to absolute value, but not absolute value compared to relocatable value.

### 3.10.5 Legal Expressions

With the exception of the following expression contexts, there is no restriction on combinations of operations, constants, internally defined symbols, and externally defined symbols.

When an expression contains more than one relocatable symbol or cannot be evaluated at assembly time, the assembler encodes a relocation expression in the object file that is later evaluated by the linker. If the final value of the expression is larger in bits than the space reserved for it, you receive an error message from the linker. See [Section 2.4](#) for more information on relocation expressions.

When using the register relative addressing mode, the expression in brackets or parenthesis must be a well-defined expression, as described in [Section 3.10.3](#). For example:

```
*+XA4[7]
```

### 3.11 Built-In Functions

The assembler supports many built-in mathematical functions. The built-in functions always return a value and they can be used in conditional assembly or any place where a constant can be used.

In [Table 3-3](#) x, y and z are type float, n is an int. The functions \$cvi, \$sint and \$sgn return an integer and all other functions return a float. Angles for trigonometric functions are expressed in radians.

**Table 3-3. Built-In Mathematical Functions**

| Function          | Description                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------|
| \$acos(x)         | Returns $\cos^{-1}(x)$ in range $[0, \pi]$ , $-1 \leq x \leq 1$                                                 |
| \$asin(x)         | Returns $\sin^{-1}(x)$ in range $[-\pi/2, \pi/2]$ , $-1 \leq x \leq 1$                                          |
| \$atan x)         | Returns $\tan^{-1}(x)$ in range $[-\pi/2, \pi/2]$                                                               |
| \$atan2(x, y)     | Returns $\tan^{-1}(y/x)$ in range $[-\pi, \pi]$                                                                 |
| \$ceil(x)         | Returns the smallest integer not less than x, as a float                                                        |
| \$cos(x)          | Returns the cosine of x                                                                                         |
| \$cosh(x)         | Returns the hyperbolic cosine of x                                                                              |
| \$cvf(n)          | Converts an integer to a float                                                                                  |
| \$cvi(x)          | Converts a float to an integer. Returns an integer.                                                             |
| \$exp(x)          | Returns the exponential function $e^x$                                                                          |
| \$fabs(x)         | Returns the absolute value $ x $                                                                                |
| \$floor(x)        | Returns the largest integer not greater than x, as a float                                                      |
| \$fmod(x, y)      | Returns the floating-point remainder of x/y, with the same sign as x                                            |
| \$int(x)          | Returns 1 if x has an integer value; else returns 0. Returns an integer.                                        |
| \$ldexp(x, n)     | Multiplies x by an integer power of 2. That is, $x \times 2^n$                                                  |
| \$log(x)          | Returns the natural logarithm $\ln(x)$ , where $x > 0$                                                          |
| \$log10(x)        | Returns the base-10 logarithm $\log_{10}(x)$ , where $x > 0$                                                    |
| \$max(x, y, ...z) | Returns the greatest value from the argument list                                                               |
| \$min(x, y, ...z) | Returns the smallest value from the argument list                                                               |
| \$pow(x, y)       | Returns $x^y$                                                                                                   |
| \$round(x)        | Returns x rounded to the nearest integer                                                                        |
| \$sgn(x)          | Returns the sign of x. Returns 1 if x is positive, 0 if x is zero, and -1 if x is negative. Returns an integer. |
| \$sin(x)          | Returns the sine of x                                                                                           |
| \$sinh(x)         | Returns the hyperbolic sine of x                                                                                |
| \$sqrt(x)         | Returns the square root of x, $x \geq 0$                                                                        |
| \$tan(x)          | Returns the tangent of x                                                                                        |
| \$tanh(x)         | Returns the hyperbolic tangent of x                                                                             |
| \$trunc(x)        | Returns x truncated toward 0                                                                                    |

The built-in substitution symbol functions are discussed in [Section 5.3.2](#).

### 3.12 Specifying Assembler Fill Values (--asm\_code\_fill and --asm\_data\_fill)

The C28x assembler allows you to specify fill values to fill the holes created by the assembler.

The `.align` directive aligns the section program counter (SPC) on the next boundary, depending on the *size in words* parameter. The assembler might create holes to align the SPC. For example consider the following assembly code:

```
.sect "MyData"
.align 1
.field 0x01,16
.align 2
.field 0x00010002,32

.sect "MyProg"
.align 1
MOV ah, #0
.align 2
MOV acc,#1234 << 5
```

The assembler supports the `--asm_code_fill` and `--asm_data_fill` options to enable you to specify the fill values for the code sections and data sections, respectively. You can specify a 16-bit value with these options in decimal (1024), octal (02000) or hexadecimal (0x400) format.

The assembler uses the default values of zero for data sections and NOP instructions for code sections.

A code section is defined as either a `.text` section or any section that has an instruction to encode. The following are considered to be code sections:

#### Example 1

```
.text
.field 0x100, 16
```

#### Example 2

```
.data
.field 0x100, 16
MOV al, #1
```

#### Example 3

```
.sect "MyProg"
MOV al, #0
```

Any section other than a `.text` section is considered a data section if it does not have any instruction to encode. For example:

```
.sect "MyData"
.field 0x100, 16
```

### 3.13 TMS320C28x Assembler Modes

The TMS320C28x processor is object code compatible with the TMS320C27x processor and source code compatible with the TMS320C2xx (C2xlp) processor. The C28x assembler operates in five different modes to support backward compatibility with C27x and C2xlp processors. These five modes are controlled by options as follows:

```
-v27                C27x object mode
-v28                C28x object mode
-v28 --c2xlp_src_compatible  C28x object mode--Accept C2xlp Syntax Mode
```

The `--c2xlp_src_compatible` option implies the `-v28` (or `--silicon_version=28`) option. Therefore you do not need to specify `-v28` explicitly.

When multiple versions are specified, the assembler uses the first version specified and ignores the rest. For example the command `cl2000 -v28 -v27` invokes the assembler in the C28x object mode and the assembler ignores the `-v27` switch. Also the assembler issues the following warning:

```
>> Version already specified. -v27 is ignored
```

Since `--c2xlp_src_compatible` implies the version `-v28` the command:

```
cl2000 --c2xlp_src_compatible -v27
```

Is equivalent to:

```
cl2000 -v28 --c2xlp_src_compatible -v27
```

Therefore, the assembler generates the above warning and ignores the `-v27` switch.

To support some special floating point instructions when a 32-bit floating point unit (FPU) is available, the assembler operates in FPU32 mode. [Section 3.13.5](#) describes the FPU32 mode. This mode is controlled by options as follows:

```
-v28 --float_support=fpu32  C28x object mode--Accept FPU32 instructions
```

To support special floating point instructions that run on the Control Law Accelerator (CLA), the assembler operates in CLA mode. [Section 3.13.6](#) describes the CLA mode. This mode is controlled by options as follows:

```
-v28 --cla_support=cla0     C28x object mode--Accept CLA instructions
```

To support the new Viterbi, Complex Math and CRC Unit (VCU) instructions, the assembler operates in VCU mode. This mode is controlled by options as follows:

```
-v28 --vcu_support=vcu0    C28x object mode--Accept VCU instructions
```

Refer to the *TMS320C28x DSP CPU and Instruction Set Reference Guide* for more details on different object modes and addressing modes supported by the C28x processor.

#### 3.13.1 C27x Object Mode

This mode is used to port C27x code to the C28x and run the C28x processor in C27x object mode. The C28x assembler in this mode is essentially the C27x assembler that supports the following non-C27x instructions. These instructions are used for changing the processor object mode and addressing modes. Refer to the *TMS320C28x DSP CPU And Instruction Set Reference Guide* for more details.

**Table 3-4. Non-TMS320C27x Instructions Supported in the C27x Object Mode**

| Instructions | Description                                                                               |
|--------------|-------------------------------------------------------------------------------------------|
| SETC OBJMODE | Set the OBJMODE bit in the status register. The processor runs in the C28x object mode.   |
| CLRC OBJMODE | Clear the OBJMODE bit in the status register. The processor runs in the C27x object mode. |
| C28OBJ       | Same as SETC OBJMODE                                                                      |
| C27OBJ       | Same as CLRC OBJMODE                                                                      |
| SETC AMODE   | Set the AMODE bit in the status register. The processor supports C2xlp addressing.        |
| CLRC AMODE   | Clear the AMODE bit in the status register. The C28x processor supports C28x addressing.  |
| LPADDR       | Same as SETC AMODE                                                                        |

**Table 3-4. Non-TMS320C27x Instructions Supported in the C27x Object Mode (continued)**

| Instructions | Description                                                        |
|--------------|--------------------------------------------------------------------|
| C28ADDR      | Same as CLRC AMODE                                                 |
| SETC MOM1MAP | Set the MOM1MAP bit in the status register.                        |
| CLRC MOM1MAP | Clear the MOM1MAP bit in the status register.                      |
| SETC CNF     | Set the CNF bit (C2xlp mapping mode bit) in the status register.   |
| CLRC CNF     | Clear the CNF bit (C2xlp mapping mode bit) in the status register. |
| SETC XF      | Set the XF bit in the status register.                             |
| CLRC XF      | Clear the XF bit in the status register.                           |

When operated in this mode, the C28x assembler generates an error if non-C27x compatible syntax or instructions are used. For example the following instructions are illegal in this mode:

```
FLIP  AL          ; C28x instruction not supported in C27x.
MOV   AL, *XAR0++ ; *XAR0++ is illegal addressing for C27x.
```

### 3.13.2 C28x Object Mode

This mode supports all the C28x instructions and generates C28x object code. New users of the C28x processor should use the assembler in this mode. This mode generates an error if old C27x syntax is used. For example, the following instructions are illegal in this mode:

```
MOV   AL, *AR0++ ; *AR0++ is illegal addressing for C28x.
```

### 3.13.3 C28x Object - Accept C27x Syntax Mode

This mode supports all the C28x instructions and also supports the C27x instruction and addressing syntax. This mode generates C28x object code. For example, this mode accepts the instruction syntax `MOV AL, *AR0++` and encodes it as `MOV AL, *XAR0++`. Though this mode accepts C27x syntax, the assembler generates warning if C27x syntax is used to encourage the you as a programmer to change the C27x syntax to C28x syntax. The instruction `MOV AL, *AR0+` generates the following warning:

```
WARNING! at line 1: [W0000] Full XAR register is modified
```

### 3.13.4 C28x Object - Accept C2xlp Syntax Mode

This mode supports all the C28x instructions and generates C28x object code but also supports C2xlp instruction syntax.

The C28x processor includes features and instructions that make the processor as backward compatible to the C2xlp processor as possible. In order to make the C28x processor source code compatible with C2xlp, the assembler accepts C2xlp instructions and encodes them as equivalent C28x instructions.

This mode assumes LP addressing mode compatibility (`AMODE = 1`) and a data page of 128-words. Refer to the *TMS320C28x DSP CPU And Instruction Set Reference Guide* for information on C2xlp instructions and additional details.

The C27x syntax is not supported in this mode and generates an error. Also any incompatible C2xlp instructions cause the assembler to generate an error. For example, the following instructions are illegal in this mode:

```
MOV   AL, *AR0++ ; *AR0++ is illegal addressing for C28x.
TRAP          ; Incompatible C2XLP instruction.
```

In this mode, C28x and C2xlp source code can be freely intermixed within a file as shown below.

```
; C2xlp Source Code
LDP   #VarA
LAACL VarA
LAR   AR0, *, AR2
SAACL *+
. . .
LC   FuncA
. . .
; C28x Source Code using LP Addressing (AMODE = 1)
FuncA:
```

```

MOV     DP, #VarB
MOV     AL, @VarB
MOVL   XAR0, *XAR0++
MOV     *XAR2++, AL
LRET

```

When the C28x assembler is invoked with `--asm_remarks` switch, it performs additional checking for the following cases:

- The C1x/C2x/C2xx/C5x assembler accepts numbers with leading zero as decimal integers, that is 010 is treated as 10 and not as 8. The C28x assembler treats constants with leading zeros as octal numbers. There may be C2xlp assembly code that contains decimal numbers with leading zeros. When these files are assembled with the C28x assembler the results will not be what you expect as the C28x assembler treats such constants as octal numbers. So the assembler when invoked with `--c2xlp_src_compatible --asm_remarks`, checks for such numbers and issues a warning that the constant is parsed as an octal number.

For example, consider the following listing produced using the `--c2xlp_src_compatible --asm_remarks` options:

```

1 00000000 FF20          lacc    #023
"octal.asm", WARNING! at line 1: [W0000] Constant parsed as an octal number
00000001 0013

```

- The C1x/C2x/C2xx/C5 assembler uses a different order of operator precedence expression. In the C1x/C2x/C2xx/C5 assembler, the shift operators (`<<` and `>>`) have higher precedence than the binary `+` and `-` operators. The C28x assembler follows the order of precedence of C language where the above mentioned sequence is reversed. The C28x assembler issues a warning about the precedence used if the following are true:
  - The `--c2xlp_src_compatible --asm_remarks` options are specified.
  - The source code contains any expression involving binary additive operators (`+` and `-`) and the shift operators (`<<` and `>>`).
  - The precedence is not forced by parentheses. For example, consider the following listing produced using the `--c2xlp_src_compatible --asm_remarks` options:

```

1 00000000 FF20          lacc    #(3 + 4 << 2)      ; Warning generated
"pre.asm", WARNING! at line 1: [W9999] The binary + and - operators have higher
precedence than the shift operators
00000001 001C
2 00000002 FF20          lacc    #((3 + 4) << 2)   ; NO warning
00000003 001C

```

### 3.13.5 C28x FPU32 and FPU64 Object Modes

The FPU32 mode is used when the hardware 32-bit floating-point co-processor support is available on the C28x. The FPU32 mode is invoked by specifying the `-v28` and `--float_support=fpu32` options. This mode supports all C28x instructions. The differences are as follows:

- Some special floating point instructions are supported. These are documented in the *TMS320C28x Floating Point Unit and Instruction Set Reference Guide*.
- The FPU32 mode assumes large memory model, and is incompatible with small memory model.
- The assembler in this mode checks for pipeline conflicts. This is because the FPU32 instructions are not pipeline protected. The C28x instructions are pipeline protected, which means that a new instruction cannot read/write its operands until all preceding C28x instructions have finished writing those operands. This is not the case with the FPU32 instructions: an FPU instruction can access its operands while another instruction is writing them, causing race conditions. Thus the assembler has to check for pipeline conflicts and issue warnings/errors as appropriate. The pipeline conflict detection feature is described in [Section 3.19](#).

The FPU64 mode supports a 64-bit version of the floating point co-processor. It is invoked by specifying the `-v28` and `--float_support=fpu64` options. This mode is similar to the FPU32 mode, but enables additional instructions.

### 3.13.6 C28x CLA Object Mode

The CLA mode is used when the hardware Control Law Accelerator support is available on the C28x. This



mode is available by invoking the compiler with the `-v28` and `--cla_support=cla0` options, where `cla0` indicates a CLA type 0 device. The `--cla_support=cla0` option can be specified along with other C28x options, such as those for specifying FPU support. Specifying both FPU and CLA options means that support is available for both types of accelerators. The CLA mode is very similar to the C28x mode (with/without FPU support). The differences are:

- The CLA is similar to a cut-down version of the FPU32 that is optimized to perform math tasks only. Some special floating point instructions are supported. These are documented in *TMS320x28xx, 28xxx DSP Peripherals Reference Guide*.
- The option `--cla_support=cla0` is relevant only for assembly source files. For C/C++ source files, the CLA option is ignored; no CLA instructions are generated by the compiler.
- The CLA pipeline is unprotected, but at this time, the tools do not detect pipeline conflicts for the CLA. You need to write CLA instructions in such a way that there are no pipeline conflicts.
- Assembly files containing CLA instructions can also contain C28x and FPU instructions. However, the CLA instructions should always be in a separate, named section. This section cannot contain any non-CLA instructions. Mixing CLA and non-CLA instructions in the same section is illegal and results in an assembler/linker error.
- The name of the section containing CLA instructions should be unique both within the file, and across different files that are compiled and linked into the same output file. In other words, if section `xyz` in a file contains CLA instructions, then all sections named `xyz` within the file and across files that are linked into the same output file, can only contain CLA instructions.
- When a linker command file is written, care must be taken to put all data referenced by CLA instructions within addresses 0-64K. This is because the CLA data read bus only has a 64K address range.
- A linker output section containing a CLA input section cannot contain any non-CLA input sections.
- The CLA mode does not need any special library support. Any of the C28x libraries suffices.

### 3.14 Source Listings

A source listing shows source statements and the object code they produce. To obtain a listing file, invoke the assembler with the `--asm_listing` option (see [Section 3.3](#)).

Two banner lines, a blank line, and a title line are at the top of each source listing page. Any title supplied by the `.title` directive is printed on the title line. A page number is printed to the right of the title. If you do not use the `.title` directive, the name of the source file is printed. The assembler inserts a blank line below the title line.

Each line in the source file produces at least one line in the listing file. This line shows a source statement number, an SPC value, the object code assembled, and the source statement. and show these in actual listing files.

Each line in the source file produces at least one line in the listing file. This line shows a source statement number, an SPC value, the object code assembled, and the source statement. [Figure 3-2](#) shows these in an actual listing file.

#### Field 1: Source Statement Number

##### Line number

The source statement number is a decimal number. The assembler numbers source lines as it encounters them in the source file; some statements increment the line counter but are not listed. (For example, `.title` statements and statements following a `.nolist` are not listed.) The difference between two consecutive source line numbers indicates the number of intervening statements in the source file that are not listed.

##### Include file letter

A letter preceding the line number indicates the line is assembled from the include file designated by the letter.

##### Nesting level number

A number preceding the line number indicates the nesting level of macro expansions or loop blocks.

#### Field 2: Section Program Counter

This field contains the SPC value, which is hexadecimal. All sections (.text, .data, .bss, and named sections) maintain separate SPCs. Some directives do not affect the SPC and leave this field blank.

### Field 3: Object Code

This field contains the hexadecimal representation of the object code. All machine instructions and directives use this field to list object code. This field also indicates the relocation type associated with an operand for this line of source code. If more than one operand is relocatable, this column indicates the relocation type for the first operand. The characters that can appear in this column and their associated relocation types are listed below:

|   |                              |
|---|------------------------------|
| ! | undefined external reference |
| ' | .text relocatable            |
| + | .sect relocatable            |
| " | .data relocatable            |
| - | .bss, .usect relocatable     |
| % | relocation expression        |

### Field 4: Source Statement Field

This field contains the characters of the source statement as they were scanned by the assembler. The assembler accepts a maximum line length of 200 characters. Spacing in this field is determined by the spacing in the source statement.


Figure 3-2 shows an assembler listing with each of the four fields identified.

**Figure 3-2. Example Assembler Listing**

```

1          add1    .macro    S1, S2, S3, S4
2
3          MOV     AL, S1
4          ADD     AL, S2
5          ADD     AL, S3
6          ADD     AL, S4
7          .endm
8
9          .global c1, c2, c3, c4
10         .global _main
11
12         0001   c1     .set    1
13         0002   c2     .set    2
14         0003   c3     .set    3
15         0004   c4     .set    4
16
17 000000      _main:
18 000000      add1    #c1, #c2, #c3, #c4
1
1 000000 9A01      MOV     AL, #c1
1 000001 9C02      ADD     AL, #c2
1 000002 9C03      ADD     AL, #c3
1 000003 9C04      ADD     AL, #c4
19
20          .end
 
```



### 3.15 Debugging Assembly Source

When you invoke `cl2000 -v28` with `--symdebug:dwarf` (or `-g`) when compiling an assembly file, the assembler provides symbolic debugging information that allows you to step through your assembly code in a debugger rather than using the Disassembly window in Code Composer Studio. This enables you to view source comments and other source-code annotations while debugging.

The `.asmfunc` and `.endasmfunc` (see [Mark Function Boundaries](#)) directives enable you to use C characteristics in assembly code that makes the process of debugging an assembly file more closely resemble debugging a C/C++ source file.

The `.asmfunc` and `.endasmfunc` directives allow you to name certain areas of your code, and make these areas appear in the debugger as C functions. Contiguous sections of assembly code that are not enclosed by the `.asmfunc` and `.endasmfunc` directives are automatically placed in assembler-defined functions named with this syntax:

`$ filename : starting source line : ending source line $`

If you want to view your variables as a user-defined type in C code, the types must be declared and the variables must be defined in a C file. This C file can then be referenced in assembly code using the `.ref` directive (see [Identify Global Symbols](#)).

[Example 3-4](#) shows the `cvar.c` C program that defines a variable, `svar`, as the structure type `X`. The `svar` variable is then referenced in the `addfive.asm` assembly program in [Example 3-5](#) and 5 is added to `svar`'s second data member.

Compile both source files with the `--symdebug:dwarf` option (`-g`) and link them as follows:

```
cl2000 --v28 -symdebug:dwarf cvars.c addfive.asm --run_linker --library=lnk.cmd
--library=rts2800.lib --output_file=addfive.out
```

When you load this program into a symbolic debugger, `addfive` appears as a C function. You can monitor the values in `svar` while stepping through `main` just as you would any regular C variable.

#### Example 3-4. Viewing Assembly Variables as C Types C Program

```
typedef struct
{
    int m1;
    int m2;
} X;

X svar = { 1, 2 };
```

#### Example 3-5. Assembly Program for [Example 3-4](#)

```
-----
; Tell the assembler we're referencing variable "_svar", which is defined in
; another file (cvars.c).
-----
    .ref _svar

-----
; addfive() - Add five to the second data member of _svar
-----
    .text
    .global addfive
addfive: .asmfunc
        MOVZ    DP,#_svar+1    ; load the DP with svar's memory page
        ADD     @_svar+1,#5    ; add 5 to svar.m2
        LRETR                    ; return from function
    .endasmfunc
```

### 3.16 C-Type Symbolic Debugging for Assembly Variables (--cdebug\_asm\_data Option)

When you assemble with the `--cdebug_asm_data` option, the assembler produces the debug information for assembly source debug. The assembler outputs C-type symbolic debugging information for symbols defined in assembly source code using the data directives. This support is for basic C types, structures and arrays. You have the ability to inform the assembler how to interpret an assembly label as a C variable with basic type information.

The assembly data directives have been modified to produce debug information when using `--cdebug_asm_data` in these ways:

- **Data directives for initialized data.** The assembler outputs debugging information for data initialized with the `.byte`, `.field`, `.float`, `.int`, or `.long` directive. For the following, the assembler emits debug information to interpret `int_sym` as a C integer:

```
int_sym    .int    10h
```

More than one initial value is interpreted as an array of the type designated by the directive. This example is interpreted as an integer array of four and the appropriate debug information is produced:

```
int_sym    .int    10h, 11h, 12h, 13h
```

For symbolic information to be produced, you must have a label designated with the data directive. Compare the first and second lines of code shown below:

```
int_sym    .int    10h
           .int    11h --> Will not have debug info.
```

- **Data directives for uninitialized data.** The `.bss` and `.usect` directives accept a type designation as an optional fifth operand. This type operand is used to produce the appropriate debug information for the symbol defined using the `.bss` directive. For example, the following generates similar debug information as the initialized data directive shown above:

```
.bss    int_sym,1,1,0,int
```

The type operand can be one of the following. If a type is not specified no debug information is produced.

|        |       |         |       |       |        |
|--------|-------|---------|-------|-------|--------|
| CHAR   | FLOAT | LDOUBLE | SCHAR | UCHAR | ULONG  |
| DOUBLE | INT   | LONG    | SHORT | UINT  | USHORT |

In the following example, the parameter `int_sym` is treated as an array of four integers:

```
.bss    int_sym,4,1,0,int
```

The size specified must be a multiple of the type specified. If no type operand is specified no warning is issued. The following code will generate a warning since 3 is not a multiple of the size of a long.

```
.bss    double_sym, 3,1,0,long
```

- **Debug information for assembly structures.** The assembler also outputs symbolic information on structures defined in assembly. Here is an example of a structure:

```
structlab .struct
mem1      .int
mem2      .int
struct_len .endstruct
struct1   .tag structlab
           .bss struct1, 2, 1, 0, structlab
```

For the structure example, debug information is produced to treat `struct1` as the C structure:

```
struct struct1{
    int mem1;
    int mem2; };
```

The assembler outputs arrays of structures if the size specified by the `.bss` directive is a multiple of the size of `struct` type. As with uninitialized data directives, if the size specified is not a multiple of the structure size, a warning is generated. This example properly accounts for alignment constraints imposed by the member types:

```
.bss struct1,struct_len * 3, 1, 0, structlab
```

### 3.17 Cross-Reference Listings

A cross-reference listing shows symbols and their definitions. To obtain a cross-reference listing, invoke the assembler with the `--cross_reference` option (see [Section 3.3](#)) or use the `.option` directive with the X operand (see [Select Listing Options](#)). The assembler appends the cross-reference to the end of the source listing. [Example 3-6](#) shows the four fields contained in the cross-reference listing.

#### **Example 3-6. An Assembler Cross-Reference Listing**

| LABEL        | VALUE     | DEFN | REF |
|--------------|-----------|------|-----|
| .TMS320C2800 | 00000001  | 0    |     |
| _func        | 00000000' | 18   |     |
| var1         | 00000000- | 4    | 17  |
| var2         | 00000004- | 5    | 18  |

|                   |                                                                                                                                                                                                                                                                                                    |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Label</b>      | column contains each symbol that was defined or referenced during the assembly.                                                                                                                                                                                                                    |
| <b>Value</b>      | column contains an 8-digit hexadecimal number (which is the value assigned to the symbol) <i>or</i> a name that describes the symbol's attributes. A value may also be preceded by a character that describes the symbol's attributes. <a href="#">Table 3-5</a> lists these characters and names. |
| <b>Definition</b> | (DEFN) column contains the statement number that defines the symbol. This column is blank for undefined symbols.                                                                                                                                                                                   |
| <b>Reference</b>  | (REF) column lists the line numbers of statements that reference the symbol. A blank in this column indicates that the symbol was never used.                                                                                                                                                      |

**Table 3-5. Symbol Attributes**

| Character or Name | Meaning                                    |
|-------------------|--------------------------------------------|
| REF               | External reference (global symbol)         |
| UNDF              | Undefined                                  |
| '                 | Symbol defined in a .text section          |
| "                 | Symbol defined in a .data section          |
| +                 | Symbol defined in a .sect section          |
| -                 | Symbol defined in a .bss or .usect section |

### 3.18 Smart Encoding

To improve efficiency, the assembler reduces instruction size whenever possible. For example, a branch instruction of two words can be changed to a short branch one-word instruction if the offset is 8 bits.

[Table 3-6](#) lists the instruction to be changed and the change that occurs.

**Table 3-6. Smart Encoding for Efficiency**

| This instruction... | Is encoded as...     |
|---------------------|----------------------|
| MOV AX, #8Bit       | MOVB AX, #8Bit       |
| ADD AX, #8BitSigned | ADDB AX, #8BitSigned |
| CMP AX, #8Bit       | CMPB AX, #8Bit       |
| ADD ACC, #8Bit      | ADDB ACC, #8Bit      |
| SUB ACC, #8Bit      | SUBB ACC, #8Bit      |
| AND AX, #8BitMask   | ANDB AX, #8BitMask   |
| OR AX, #8BitMask    | ORB AX, #8BitMask    |
| XOR AX, #8BitMask   | XORB AX, #8BitMask   |
| B 8BitOffset, cond  | SB 8BitOffset, cond  |
| LB 8BitOffset, cond | SB 8BitOffset, cond  |
| MOVH loc, ACC << 0  | MOV loc, AH          |
| MOV loc, ACC << 0   | MOV loc, AL          |
| MOVL XARn, #8Bit    | MOVB XARn, #8Bit     |

The assembler also intuitively changes instruction formats during smart encoding. For example, to push the accumulator value to the stack, you use MOV \*SP++, ACC. Since it would be intuitive to use PUSH ACC for this operation, the assembler accepts PUSH ACC and through smart encoding, changes it to MOV \*SP++, ACC. [Table 3-7](#) shows a list of instructions recognized during intuitive smart encoding and what the instruction is changed to.

**Table 3-7. Smart Encoding Intuitively**

| This instruction...   | Is encoded as...       |
|-----------------------|------------------------|
| MOV P, #0             | MPY P, T, #0           |
| SUB loc, #16BitSigned | ADD loc, #-16BitSigned |
| ADDB SP, #-7Bit       | SUBB SP, #7Bit         |
| ADDB aux, #-7Bit      | SUBB aux, #7Bit        |
| SUBB AX, #8BitSigned  | ADDB AX, #-8BitSigned  |
| PUSH IER              | MOV *SP++, IER         |
| POP IER               | MOV IER, *--SP         |
| PUSH ACC              | MOV *SP++, ACC         |
| POP ACC               | MOV ACC, *--SP         |
| PUSH XARn             | MOV *SP++, XARn        |
| POP XARn              | MOV XARn, *--SP        |
| PUSH #16Bit           | MOV *SP++, #16Bit      |
| MPY ACC, T, #8Bit     | MPYB ACC, T, #8Bit     |

In some cases, you might want a 2-word instruction even when there is an equivalent 1-word instruction available. In such cases, smart encoding for efficiency could be a problem. Therefore, the equivalent instructions in [Table 3-8](#) are provided; these instructions will not be optimized.

**Table 3-8. Instructions That Avoid Smart Encoding**

| <b>This instruction...</b> | <b>Is encoded as...</b> |
|----------------------------|-------------------------|
| MOVW AX, #8Bit             | MOV AX, #8Bit           |
| ADDW AX, #8Bit             | ADD AX, #8Bit           |
| CMPW AX, #8Bit             | CMP AX, #8Bit           |
| ADDW ACC, #8Bit            | ADD ACC, #8Bit          |
| SUBW ACC, #8Bit            | SUB ACC, #8Bit          |
| JMP 8BitOffset, cond       | B 8BitOffset, cond      |

### 3.19 Pipeline Conflict Detection

Pipeline Conflict Detection (PCD) is a feature implemented on the TMS320C28x 5.0 Compiler, for targets with hardware floating point unit (FPU) support only. This is because the FPU instructions are not pipeline protected whereas the C28x instructions are. Beginning with version 6.0, similar protections are provided for targets with support for the Viterbi, Complex Math and CRC Unit (VCU).

#### 3.19.1 Protected and Unprotected Pipeline Instructions

The C28x target with FPU/VCU support has a mix of protected and unprotected pipeline instructions. This necessitates some checks in the compiler and assembler that are not necessary for a C28x target without such support.

By design, a (non-FPU) C28x instruction does not read/write an operand until all previous instructions have finished writing that operand. The hardware stalls until this condition is true. As hardware stalls are employed to preserve operand integrity, the compiler and assembler need not keep track of register reads and writes by instructions in the pipeline. Thus, the C28x instructions are pipeline protected, meaning that an instruction will not attempt to read/write a register while that register is still being written by another instruction.

The situation is different when FPU support is enabled. While the non-FPU instructions are pipeline protected, the FPU instructions aren't. This implies that an FPU instruction could attempt to read/write a register while it is still being written by a previous instruction. This can cause undefined behavior, and the compiler and assembler need to protect against such conflicting register accesses. The same is true for VCU instructions.

#### 3.19.2 Pipeline Conflict Prevention and Detection

The compiler, when generating assembly code from C/C++ programs, ensures that the generated code does not have any pipeline conflicts. It does this by either scheduling non-conflicting instructions between two potentially conflicting instructions, or inserting NOP instructions wherever necessary. For details on the compiler, please see the .

While conflict prevention by the compiler is sufficient for C/C++ test cases, this does not cover manually-written assembly language code. Assembly code can contain instructions that have pipeline conflicts. The assembler needs to detect such conflicts and issue warnings or errors, depending on the severity of the situation. This is what the Pipeline Conflict Detection (PCD) feature in the assembler, is designed to do.

### 3.19.3 Pipeline Conflicts Detected

The assembler detects certain pipeline conflicts, and based on their severity, issues either an error message or a warning. The types of pipeline conflicts detected are listed below, along with the assembler actions in the event of each conflict.

- **Pipeline Conflict:**  
An instruction reads a register when it is being written by another instruction.  
**Assembler Response:**  
The assembler generates an error message and aborts.
- **Pipeline Conflict:**  
Two instructions write the same register in the same cycle.  
**Assembler Response:**  
The assembler generates an error message and aborts.
- **Pipeline Conflict:**  
Instructions FRACF32, I16TOF32, UI16TOF32, F32TOI32, and/or F32TOUI32 are present in the delay slot of a specific type of MOV32 instruction that moves a value from a CPU register or memory location to an FPU register.  
**Assembler Response:**  
The assembler gives an error message and aborts, as the hardware is not able to correctly execute this sequence.
- **Pipeline Conflict:**  
Parallel operations have the same destination register.  
**Assembler Response:**  
The assembler gives a warning.
- **Pipeline Conflict:**  
A read/write happens in the delay slot of a write of the same register.  
**Assembler Response:**  
The assembler gives a warning.
- **Pipeline Conflict:**  
A SAVE operation happens in the delay slot of a pipeline operation.  
**Assembler Response:**  
The assembler gives a warning.
- **Pipeline Conflict:**  
A RESTORE operation happens in the delay slot of a pipeline operation.  
**Assembler Response:**  
The assembler gives a warning.
- **Pipeline Conflict:**  
A SETFLG instruction tries to modify the LUF or LVF flag while certain instructions that modify LUF/LVF (such as ADDF32, SUBF32, EINVF32, EISQRTF32 etc) have pending writes.  
**Assembler Response:**  
The assembler does not check for which instructions have pending writes; on encountering a SETFLG when any write is pending, the assembler issues a detailed warning, asking you to ensure that the SETFLG is not in the delay slot of the specified instructions.

For the actual timing of each FPU instruction, and pipeline modeling, please refer to the *TMS320C28x Floating Point Unit and Instruction Set Reference Guide*. Timing information for VCU instructions can be found in the *TMS320x28xx, 28xxx DSP Peripherals Reference Guide*.



## Assembler Directives

Assembler directives supply data to the program and control the assembly process. Assembler directives enable you to do the following:

- Assemble code and data into specified sections
- Reserve space in memory for uninitialized variables
- Control the appearance of listings
- Initialize memory
- Assemble conditional blocks
- Define global variables
- Specify libraries from which the assembler can obtain macros
- Examine symbolic debugging information

This chapter is divided into two parts: the first part ([Section 4.1](#) through [Section 4.13](#)) describes the directives according to function, and the second part ([Section 4.14](#)) is an alphabetical reference.

| Topic                                                                               | Page      |
|-------------------------------------------------------------------------------------|-----------|
| <b>4.1 Directives Summary .....</b>                                                 | <b>66</b> |
| <b>4.2 Compatibility With the TMS320C1x/C2x/C2xx/C5x Assembler Directives .....</b> | <b>70</b> |
| <b>4.3 Directives That Define Sections .....</b>                                    | <b>70</b> |
| <b>4.4 Directives That Initialize Constants .....</b>                               | <b>72</b> |
| <b>4.5 Directives That Perform Alignment and Reserve Space .....</b>                | <b>73</b> |
| <b>4.6 Directives That Format the Output Listings .....</b>                         | <b>75</b> |
| <b>4.7 Directives That Reference Other Files .....</b>                              | <b>76</b> |
| <b>4.8 Directives That Enable Conditional Assembly .....</b>                        | <b>76</b> |
| <b>4.9 Directives That Define Union or Structure Types .....</b>                    | <b>77</b> |
| <b>4.10 Directives That Define Enumerated Types .....</b>                           | <b>77</b> |
| <b>4.11 Directives That Define Symbols at Assembly Time .....</b>                   | <b>77</b> |
| <b>4.12 Directives That Override the Assembler Mode .....</b>                       | <b>78</b> |
| <b>4.13 Miscellaneous Directives .....</b>                                          | <b>78</b> |
| <b>4.14 Directives Reference .....</b>                                              | <b>79</b> |

## 4.1 Directives Summary

Table 4-1 through Table 4-15 summarize the assembler directives.

Besides the assembler directives documented here, the TMS320C28x software tools support the following directives:

- The assembler uses several directives for macros. Macro directives are discussed in [Chapter 5](#); they are not discussed in this chapter.
- The C compiler uses directives for symbolic debugging. Unlike other directives, symbolic debugging directives are not used in most assembly language programs. [Appendix A](#) discusses these directives; they are not discussed in this chapter.

---

### Labels and Comments Are Not Shown in Syntaxes

**NOTE:** Any source statement that contains a directive can also contain a label and a comment. Labels begin in the first column (only labels and comments can appear in the first column), and comments must be preceded by a semicolon, or an asterisk if the comment is the only element in the line. To improve readability, labels and comments are not shown as part of the directive syntax.

---

**Table 4-1. Directives That Define Sections**

| Mnemonic and Syntax                                                                                                           | Description                                                         | See                          |
|-------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|------------------------------|
| <b>.bss</b> <i>symbol, size in words</i> [, <i>blocking flag</i> ][, <i>alignment flag</i> [, <i>type</i> ]]                  | Reserves <i>size</i> words in the .bss (uninitialized data) section | <a href="#">.bss topic</a>   |
| <b>.clink</b>                                                                                                                 | Enables conditional linking for the current or specified section    | <a href="#">.clink topic</a> |
| <b>.data</b>                                                                                                                  | Assembles into the .data (initialized data) section                 | <a href="#">.data topic</a>  |
| <b>.sect</b> " <i>section name</i> "                                                                                          | Assembles into a named (initialized) section                        | <a href="#">.sect topic</a>  |
| <b>.text</b>                                                                                                                  | Assembles into the .text (executable code) section                  | <a href="#">.text topic</a>  |
| <i>symbol</i> <b>.usect</b> " <i>section name</i> ", <i>size in words</i> [, <i>blocking flag</i> [, <i>alignment flag</i> ]] | Reserves <i>size</i> words in a named (uninitialized) section       | <a href="#">.usect topic</a> |

**Table 4-2. Directives That Initialize Values (Data and Memory)**

| Mnemonic and Syntax                                                                                                                                          | Description                                                                                               | See                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------|
| <b>.byte</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                           | Initializes one or more successive words in the current section                                           | <a href="#">.byte topic</a>    |
| <b>.char</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                           | Initializes one or more successive words in the current section                                           | <a href="#">.char topic</a>    |
| <b>.cstring</b> { <i>expr</i> <sub>1</sub> " <i>string</i> <sub>1</sub> "}[, ... , { <i>expr</i> <sub><i>n</i></sub> " <i>string</i> <sub><i>n</i></sub> "}] | Initializes one or more text strings                                                                      | <a href="#">.string topic</a>  |
| <b>.field</b> <i>value</i> [, <i>size</i> ]                                                                                                                  | Initializes a field of <i>size</i> bits (1-32) with <i>value</i>                                          | <a href="#">.field topic</a>   |
| <b>.float</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                          | Initializes one or more 32-bit, IEEE single-precision, floating-point constants                           | <a href="#">.float topic</a>   |
| <b>.int</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                            | Initializes one or more 16-bit integers                                                                   | <a href="#">.int topic</a>     |
| <b>.long</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                           | Initializes one or more 32-bit integers                                                                   | <a href="#">.long topic</a>    |
| <b>.pstring</b> { <i>expr</i> <sub>1</sub> " <i>string</i> <sub>1</sub> "}[, ... , { <i>expr</i> <sub><i>n</i></sub> " <i>string</i> <sub><i>n</i></sub> "}] | Places 8-bit characters from a character string into the current section.                                 | <a href="#">.pstring topic</a> |
| <b>.string</b> { <i>expr</i> <sub>1</sub> " <i>string</i> <sub>1</sub> "}[, ... , { <i>expr</i> <sub><i>n</i></sub> " <i>string</i> <sub><i>n</i></sub> "}]  | Initializes one or more text strings                                                                      | <a href="#">.string topic</a>  |
| <b>.word</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                           | Initializes one or more 16-bit integers                                                                   | <a href="#">.word topic</a>    |
| <b>.xfloat</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                         | Places the floating-point representation of one or more floating-point constants into the current section | <a href="#">.xfloat topic</a>  |
| <b>.xlong</b> <i>value</i> <sub>1</sub> [, ... , <i>value</i> <sub><i>n</i></sub> ]                                                                          | Places one or more 32-bit values into consecutive words in the current section                            | <a href="#">.xlong topic</a>   |

**Table 4-3. Directives That Perform Alignment and Reserve Space**

| Mnemonic and Syntax                    | Description                                                                                                                       | See                          |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>.align</b> [ <i>size in words</i> ] | Aligns the SPC on a boundary specified by <i>size in words</i> , which must be a power of 2; defaults to 64-byte or page boundary | <a href="#">.align topic</a> |
| <b>.bes</b> <i>size</i>                | Reserves <i>size</i> bits in the current section; a label points to the end of the reserved space                                 | <a href="#">.bes topic</a>   |
| <b>.space</b> <i>size</i>              | Reserves <i>size</i> words in the current section; a label points to the beginning of the reserved space                          | <a href="#">.space topic</a> |

**Table 4-4. Directives That Format the Output Listing**

| Mnemonic and Syntax                                                            | Description                                                                   | See                             |
|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------|---------------------------------|
| <b>.drlist</b>                                                                 | Enables listing of all directive lines (default)                              | <a href="#">.drlist topic</a>   |
| <b>.drnolist</b>                                                               | Suppresses listing of certain directive lines                                 | <a href="#">.drnolist topic</a> |
| <b>.fclist</b>                                                                 | Allows false conditional code block listing (default)                         | <a href="#">.fclist topic</a>   |
| <b>.fcnolist</b>                                                               | Suppresses false conditional code block listing                               | <a href="#">.fcnolist topic</a> |
| <b>.length</b> [ <i>page length</i> ]                                          | Sets the page length of the source listing                                    | <a href="#">.length topic</a>   |
| <b>.list</b>                                                                   | Restarts the source listing                                                   | <a href="#">.list topic</a>     |
| <b>.mlist</b>                                                                  | Allows macro listings and loop blocks (default)                               | <a href="#">.mlist topic</a>    |
| <b>.mnolist</b>                                                                | Suppresses macro listings and loop blocks                                     | <a href="#">.mnolist topic</a>  |
| <b>.nolist</b>                                                                 | Stops the source listing                                                      | <a href="#">.nolist topic</a>   |
| <b>.option</b> <i>option<sub>1</sub></i> [, <i>option<sub>2</sub></i> , . . .] | Selects output listing options; available options are B, L, M, R, T, W, and X | <a href="#">.option topic</a>   |
| <b>.page</b>                                                                   | Ejects a page in the source listing                                           | <a href="#">.page topic</a>     |
| <b>.sslist</b>                                                                 | Allows expanded substitution symbol listing                                   | <a href="#">.sslist topic</a>   |
| <b>.ssnolist</b>                                                               | Suppresses expanded substitution symbol listing (default)                     | <a href="#">.ssnolist topic</a> |
| <b>.tab</b> <i>size</i>                                                        | Sets tab to <i>size</i> characters                                            | <a href="#">.tab topic</a>      |
| <b>.title</b> " <i>string</i> "                                                | Prints a title in the listing page heading                                    | <a href="#">.title topic</a>    |
| <b>.width</b> [ <i>page width</i> ]                                            | Sets the page width of the source listing                                     | <a href="#">.width topic</a>    |

**Table 4-5. Directives That Reference Other Files**

| Mnemonic and Syntax                   | Description                                                        | See                            |
|---------------------------------------|--------------------------------------------------------------------|--------------------------------|
| <b>.copy</b> [" <i>filename</i> "]    | Includes source statements from another file                       | <a href="#">.copy topic</a>    |
| <b>.include</b> [" <i>filename</i> "] | Includes source statements from another file                       | <a href="#">.include topic</a> |
| <b>.mlib</b> [" <i>filename</i> "]    | Specifies a macro library from which to retrieve macro definitions | <a href="#">.mlib topic</a>    |

**Table 4-6. Directives That Effect Symbol Linkage and Visibility**

| Mnemonic and Syntax                                                           | Description                                                                                                 | See                              |
|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|----------------------------------|
| <b>.def</b> <i>symbol<sub>1</sub></i> [, ... , <i>symbol<sub>n</sub></i> ]    | Identifies one or more symbols that are defined in the current module and that can be used in other modules | <a href="#">.def topic</a>       |
| <b>.global</b> <i>symbol<sub>1</sub></i> [, ... , <i>symbol<sub>n</sub></i> ] | Identifies one or more global (external) symbols                                                            | <a href="#">.global topic</a>    |
| <b>.ref</b> <i>symbol<sub>1</sub></i> [, ... , <i>symbol<sub>n</sub></i> ]    | Identifies one or more symbols used in the current module that are defined in another module                | <a href="#">.ref topic</a>       |
| <b>.symdepend</b> <i>dst symbol name</i> [, <i>src symbol name</i> ]          | Creates an artificial reference from a section to a symbol                                                  | <a href="#">.symdepend topic</a> |

**Table 4-7. Directives That Override the Assembly Mode**

| Mnemonic and Syntax | Description                                                         | See                              |
|---------------------|---------------------------------------------------------------------|----------------------------------|
| <b>.c28_amode</b>   | Begins assembling in C28x object mode                               | <a href="#">.c28_amode topic</a> |
| <b>.lp_amode</b>    | Begins assembling in C28x object mode -- accepts C2xLP instructions | <a href="#">.lp_amode topic</a>  |

**Table 4-8. Directives That Enable Conditional Assembly**

| Mnemonic and Syntax                              | Description                                                                                                                                                                 | See                            |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| <b>.break</b> [ <i>well-defined expression</i> ] | Ends .loop assembly if <i>well-defined expression</i> is true. When using the .loop construct, the .break construct is optional.                                            | <a href="#">.break topic</a>   |
| <b>.else</b>                                     | Assembles code block if the .if <i>well-defined expression</i> is false. When using the .if construct, the .else construct is optional.                                     | <a href="#">.else topic</a>    |
| <b>.elseif</b> <i>well-defined expression</i>    | Assembles code block if the .if <i>well-defined expression</i> is false and the .elseif condition is true. When using the .if construct, the .elseif construct is optional. | <a href="#">.elseif topic</a>  |
| <b>.endif</b>                                    | Ends .if code block                                                                                                                                                         | <a href="#">.endif topic</a>   |
| <b>.endloop</b>                                  | Ends .loop code block                                                                                                                                                       | <a href="#">.endloop topic</a> |
| <b>.if</b> <i>well-defined expression</i>        | Assembles code block if the <i>well-defined expression</i> is true                                                                                                          | <a href="#">.if topic</a>      |
| <b>.loop</b> [ <i>well-defined expression</i> ]  | Begins repeatable assembly of a code block; the loop count is determined by the <i>well-defined expression</i> .                                                            | <a href="#">.loop topic</a>    |

**Table 4-9. Directives That Define Union or Structure Types**

| Mnemonic and Syntax | Description                                                                               | See                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>.cstruct</b>     | Acts like .struct, but adds padding and alignment like that which is done to C structures | <a href="#">.cstruct topic</a>                                                                    |
| <b>.cunion</b>      | Acts like .union, but adds padding and alignment like that which is done to C unions      | <a href="#">.cunion topic</a>                                                                     |
| <b>.emember</b>     | Sets up C-like enumerated types in assembly code                                          | <a href="#">Section 4.10</a>                                                                      |
| <b>.endenum</b>     | Sets up C-like enumerated types in assembly code                                          | <a href="#">Section 4.10</a>                                                                      |
| <b>.endstruct</b>   | Ends a structure definition                                                               | <a href="#">.cstruct topic</a> ,<br><a href="#">.struct topic</a>                                 |
| <b>.endunion</b>    | Ends a union definition                                                                   | <a href="#">.cunion topic</a> ,<br><a href="#">.union topic</a>                                   |
| <b>.enum</b>        | Sets up C-like enumerated types in assembly code                                          | <a href="#">Section 4.10</a>                                                                      |
| <b>.union</b>       | Begins a union definition                                                                 | <a href="#">.union topic</a>                                                                      |
| <b>.struct</b>      | Begins structure definition                                                               | <a href="#">.struct topic</a>                                                                     |
| <b>.tag</b>         | Assigns structure attributes to a label                                                   | <a href="#">.cstruct topic</a> ,<br><a href="#">.struct topic</a><br><a href="#">.union topic</a> |

**Table 4-10. Directives That Define Symbols at Assembly Time**

| Mnemonic and Syntax                                                         | Description                                                    | See                             |
|-----------------------------------------------------------------------------|----------------------------------------------------------------|---------------------------------|
| <b>.asg</b> [" <i>character string</i> "], <i>substitution symbol</i>       | Assigns a character string to <i>substitution symbol</i>       | <a href="#">.asg topic</a>      |
| <b>.eval</b> <i>well-defined expression</i> ,<br><i>substitution symbol</i> | Performs arithmetic on a numeric <i>substitution symbol</i>    | <a href="#">.eval topic</a>     |
| <b>.label</b> <i>symbol</i>                                                 | Defines a load-time relocatable label in a section             | <a href="#">.label topic</a>    |
| <b>.newblock</b>                                                            | Undefines local labels                                         | <a href="#">.newblock topic</a> |
| <i>symbol</i> <b>.set</b> <i>value</i>                                      | Equates <i>value</i> with <i>symbol</i>                        | <a href="#">.set topic</a>      |
| <b>.unasg</b> <i>symbol</i>                                                 | Turns off assignment of <i>symbol</i> as a substitution symbol | <a href="#">.unasg topic</a>    |
| <b>.undefine</b> <i>symbol</i>                                              | Turns off assignment of <i>symbol</i> as a substitution symbol | <a href="#">.unasg topic</a>    |

**Table 4-11. Directives That Create or Effect Macros**

| Mnemonic and Syntax                                                                                 | Description                                                                                                      | See                          |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------------------------------|
| <b>.endm</b>                                                                                        | End macro definition                                                                                             | <a href="#">.endm topic</a>  |
| <b>.loop</b> [ <i>well-defined expression</i> ]                                                     | Begins repeatable assembly of a code block; the loop count is determined by the <i>well-defined expression</i> . | <a href="#">.loop topic</a>  |
| <i>macname</i> <b>.macro</b> [ <i>parameter<sub>1</sub></i> [, ... , <i>parameter<sub>n</sub></i> ] | Define macro by <i>macname</i>                                                                                   | <a href="#">.macro topic</a> |
| <b>.mexit</b>                                                                                       | Go to .endm                                                                                                      | <a href="#">Section 5.2</a>  |
| <b>.mlib</b> <i>filename</i>                                                                        | Identify library containing macro definitions                                                                    | <a href="#">.mlib topic</a>  |
| <b>.var</b>                                                                                         | Adds a local substitution symbol to a macro's parameter list                                                     | <a href="#">.var topic</a>   |

**Table 4-12. Directives That Control Diagnostics**

| Mnemonic and Syntax        | Description                                                                   | See                         |
|----------------------------|-------------------------------------------------------------------------------|-----------------------------|
| <b>.emsg</b> <i>string</i> | Sends user-defined error messages to the output device; produces no .obj file | <a href="#">.emsg topic</a> |
| <b>.mmsg</b> <i>string</i> | Sends user-defined messages to the output device                              | <a href="#">.mmsg topic</a> |
| <b>.wmsg</b> <i>string</i> | Sends user-defined warning messages to the output device                      | <a href="#">.wmsg topic</a> |

**Table 4-13. Directives That Perform Assembly Source Debug**

| Mnemonic and Syntax | Description                                                          | See                               |
|---------------------|----------------------------------------------------------------------|-----------------------------------|
| <b>.asmfunc</b>     | Identifies the beginning of a block of code that contains a function | <a href="#">.asmfunc topic</a>    |
| <b>.endasmfunc</b>  | Identifies the end of a block of code that contains a function       | <a href="#">.endasmfunc topic</a> |

**Table 4-14. Directives That Are Used by the Absolute Lister**

| Mnemonic and Syntax | Description                                    | See                       |
|---------------------|------------------------------------------------|---------------------------|
| <b>.setsect</b>     | Produced by absolute lister; sets a section    | <a href="#">Chapter 8</a> |
| <b>.setsym</b>      | Produced by the absolute lister; sets a symbol | <a href="#">Chapter 8</a> |

**Table 4-15. Directives That Perform Miscellaneous Functions**

| Mnemonic and Syntax                                                                 | Description                                 | See                           |
|-------------------------------------------------------------------------------------|---------------------------------------------|-------------------------------|
| <b>.cdecls</b> [ <i>options</i> ,]" <i>filename</i> "[, " <i>filename2</i> "[, ...] | Share C headers between C and assembly code | <a href="#">.cdecls topic</a> |
| <b>.end</b>                                                                         | Ends program                                | <a href="#">.end topic</a>    |
| <b>.sblock</b>                                                                      | Designates section for blocking             | <a href="#">.sblock topic</a> |

In addition to the assembly directives that you can use in your code, the compiler produces several directives when it creates assembly code. These directives are to be used only by the compiler; do not attempt to use these directives.

- DWARF directives listed in [Section A.1](#)
- COFF/STABS directives listed in [Section A.2](#)
- The **.template** directive is used for early template instantiation. It encodes information about a template that has yet to be instantiated. This is a COFF C++ directive.
- The **.compiler\_opts** directive indicates that the assembly code was produced by the compiler, and which build model options were used for this file.

## 4.2 Compatibility With the TMS320C1x/C2x/C2xx/C5x Assembler Directives

This section explains how the TMS320C28x assembler directives differ from the TMS320C1x/C2x/C2xx/C5x assembler directives.

- The C28x `.long` and `.float` directives automatically align the SPC on an even word boundary, while the C1x/C2x/C2xx/C5x assembler directives do not.
- Without arguments, the `.align` directive for the C28x and the C1x/C2x/C2xx/C5x assemblers both align the SPC at the next page boundary. However, the C28x `.align` directive also accepts a constant argument, which must be a power of 2, and this argument causes alignment of the SPC on that word boundary. The `.align` directive for the C1x/C2x/C2xx/C5x assembler does not accept this argument.
- The `.field` directive for the C28x handles values of 1 to 32 bits, while the C1x/C2x/C2xx/C5x assembler handles values of 1 to 16 bits. With the C28x assembler, objects that are 16 bits or larger start on a word boundary and are placed with the least significant bits at the lower address.
- The C28x `.bss` and `.usect` directives have an additional flag called the alignment flag, which specifies alignment on an even word boundary. The C1x/C2x/C2xx/C5x `.bss` and `.usect` directives do not use this flag.
- The `.string` directive for the C28x initializes one character per word; the C1x/C2x/C2xx/C5x assembler directive `.string`, packs two characters per word. The C28x `.pstring` directive packs two characters per word.
- The following directives are valid with the C28x assembler but are not supported by the C1x/C2x/C2xx/C5x assembler:

| Directive             | Usage                                                      |
|-----------------------|------------------------------------------------------------|
| <code>.pstring</code> | Same as <code>.string</code> but packs two characters/word |
| <code>.xfloat</code>  | Same as <code>.float</code> without automatic alignment    |
| <code>.xlong</code>   | Same as <code>.long</code> without automatic alignment     |

- The `.mmregs` and `.port` directives are supported by the C1x/C2x/C2xx/C5x assembler. The C28x assembler when invoked with the `--c2xlp_src_compatible` option, ignores these directives and issues a warning that the directives are ignored. The C28x assembler does not accept these directives.

## 4.3 Directives That Define Sections

These directives associate portions of an assembly language program with the appropriate sections:

- The **.bss** directive reserves space in the `.bss` section for uninitialized variables.
- The **.clink** directive enables conditional linking by telling the linker to leave the named section out of the final object module output of the linker if there are no references found to any symbol in the section. The `.clink` directive can be applied to initialized sections.
- The **.data** directive identifies portions of code in the `.data` section. The `.data` section usually contains initialized data.
- The **.sect** directive defines an initialized named section and associates subsequent code or data with that section. A section defined with `.sect` can contain code or data.
- The **.text** directive identifies portions of code in the `.text` section. The `.text` section usually contains executable code.
- The **.usect** directive reserves space in an uninitialized named section. The `.usect` directive is similar to the `.bss` directive, but it allows you to reserve space separately from the `.bss` section.

Chapter 2 discusses these sections in detail.

Example 4-1 shows how you can use sections directives to associate code and data with the proper sections. This is an output listing; column 1 shows line numbers, and column 2 shows the SPC values. (Each section has its own program counter, or SPC.) When code is first placed in a section, its SPC equals 0. When you resume assembling into a section after other code is assembled, the section's SPC resumes counting as if there had been no intervening code.

The directives in [Example 4-1](#) perform the following tasks:

|                 |                                                                      |
|-----------------|----------------------------------------------------------------------|
| <b>.text</b>    | initializes words with the values 1, 2, 3, 4, 5, 6, 7, and 8.        |
| <b>.data</b>    | initializes words with the values 9, 10, 11, 12, 13, 14, 15, and 16. |
| <b>var_defs</b> | initializes words with the values 17 and 18.                         |
| <b>.bss</b>     | reserves 19 words.                                                   |
| <b>xy</b>       | reserves 20 words.                                                   |

The `.bss` and `.usect` directives do not end the current section or begin new sections; they reserve the specified amount of space, and then the assembler resumes assembling code or data into the current section.

### Example 4-1. Sections Directives

```

1          *****
2          *      Start assembling into the .text section      *
3          *****
4 000000          .text
5 000000 0001          .word   1, 2
   000001 0002
6 000002 0003          .word   3, 4
   000003 0004
7
8          *****
9          *      Start assembling into the .data section      *
10         *****
11 000000          .data
12 000000 0009          .word   9, 10
   000001 000A
13 000002 000B          .word  11, 12
   000003 000C
14
15         *****
16         *      Start assembling into a named,              *
17         *      initialized section, var_defs                *
18         *****
19 000000          .sect   "var_defs"
20 000000 0011          .word  17, 18
   000001 0012
21
22         *****
23         *      Resume assembling into the .data section    *
24         *****
25 000004          .data
26 000004 000D          .word  13, 14
   000005 000E
27 000000          .bss   sym, 19   ; Reserve space in .bss
28 000006 000F          .word  15, 16   ; Still in .data
   000007 0010
29
30         *****
31         *      Resume assembling into the .text section    *
32         *****
33 000004          .text
34 000004 0005          .word   5, 6
   000005 0006
35 000000          usym   .usect  "xy", 20   ; Reserve space in xy
36 000006 0007          .word   7, 8     ; Still in .text
   000007 0008

```

## 4.4 Directives That Initialize Constants


Several directives assemble values for the current section:

- The **.byte** and **.char** directives place one or more 8-bit values into consecutive words of the current section. These directives are similar to **.long** and **.word**, except that the width of each value is restricted to eight bits.
- The **.field** directive places a single value into a specified number of bits in the current word. With **.field**, you can pack multiple fields into a single word; the assembler does not increment the SPC until a word is filled.

Figure 4-1 shows how fields are packed into a word. Using the following assembled code, notice that the SPC does not change (the fields are packed into the same word):

```
1 000000 0003      .field 3, 3
2 000000 0008      .field 8, 6
3 000000 0010      .field 16, 5
```

Figure 4-1. The **.field** Directive

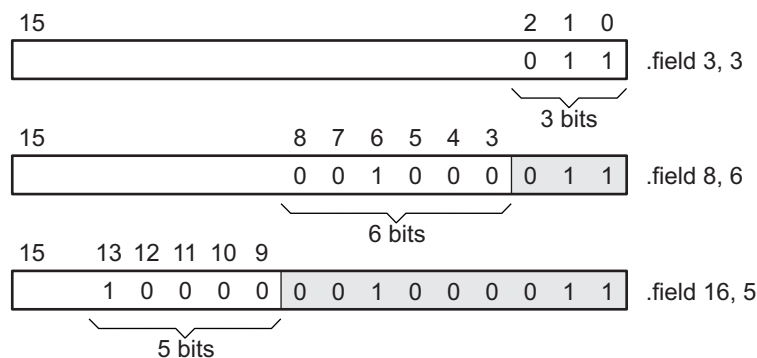

- The **.float** and **.xfloat** directives calculate the single-precision (32-bit) IEEE floating-point representation of a single floating-point value and store it in a word in the current section that is aligned to a word boundary.
- The **.int** and **.word** directives place one or more 16-bit values into consecutive 16-bit fields (words) in the current section. The **.int** and **.word** directives automatically align to a word boundary.
- The **.long** and **.xlong** directives place one or more 32-bit values into consecutive 32-bit fields (words) in the current section. The **.long** directive automatically aligns to a word boundary.
- The **.string**, **.cstring**, and **.pstring** directives place 8-bit characters from one or more character strings into the current section. The **.string** and **.cstring** directives are similar to **.byte**, placing an 8-bit character in each consecutive word of the current section. The **.cstring** directive adds a NUL character needed by C; the **.string** directive does not add a NUL character. With the **.pstring** directive, the data is packed so that each word contains two 8-bit bytes.

### Directives That Initialize Constants When Used in a **.struct/endstruct** Sequence


**NOTE:** The **.byte**, **.char**, **.int**, **.long**, **.word**, **.string**, **.pstring**, **.float**, and **.field** directives do not initialize memory when they are part of a **.struct/ .endstruct** sequence; rather, they define a member's size. For more information, see the [.struct/.endstruct directives](#).

Figure 4-2 compares the **.byte**, **.word**, and **.string** directives. Using the following assembled code:

```
1 000000 00AB      .byte 0ABh
2 000001 CDEF      .word 0CDEFh
3 000002 CDEF      .long 089ABCDEFh
   000003 89AB
4 000004 0068      .string "help"
   000005 0065
   000006 006C
   000007 0070
```



Figure 4-2. Initialization Directives

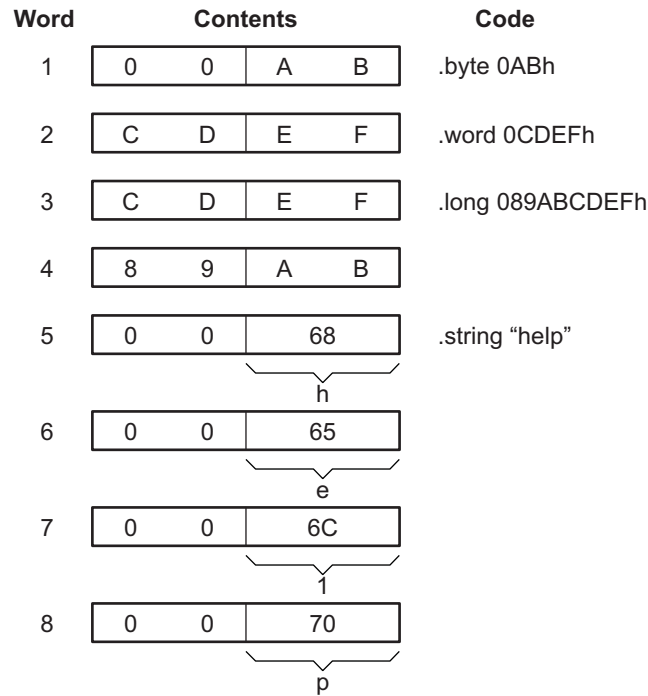

#### 4.5 Directives That Perform Alignment and Reserve Space

These directives align the section program counter (SPC) or reserve space in a section:

- The **.align** directive aligns the SPC at the next word boundary. This directive is useful with the **.field** directive when you do not want to pack two adjacent fields in the same word.

Figure 4-3 demonstrates the **.align** directive. Using the following assembled code:


```

1 000000 0002      .field 2,3
2 000000 005A      .field 11,8
3                  .align 2
4 000002 0065      .string "errorcnt"
   000003 0072
   000004 0072
   000005 006F
   000006 0072
   000007 0063
   000008 006E
   000009 0074
5
6 000040 0004      .align
                   .byte 4


```

**Figure 4-3. The .align Directive**

(a) Result of .align 2

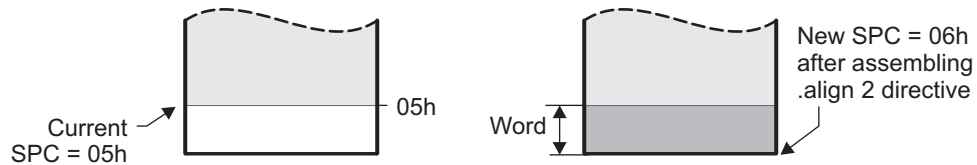

(b) Result of .align without an argument

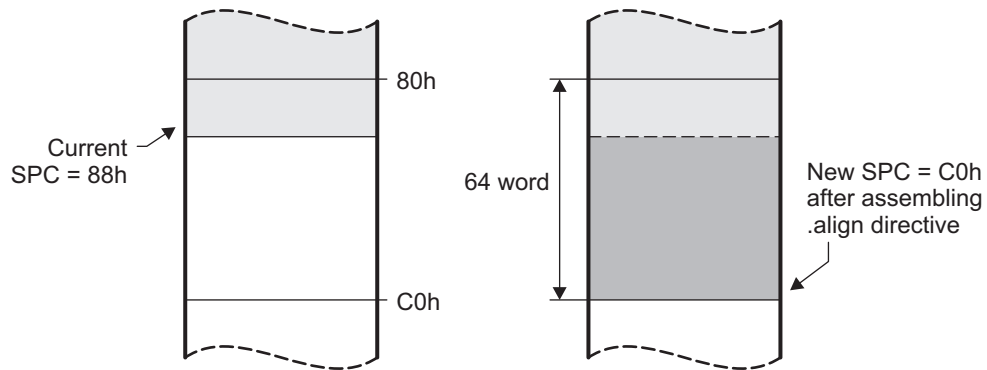

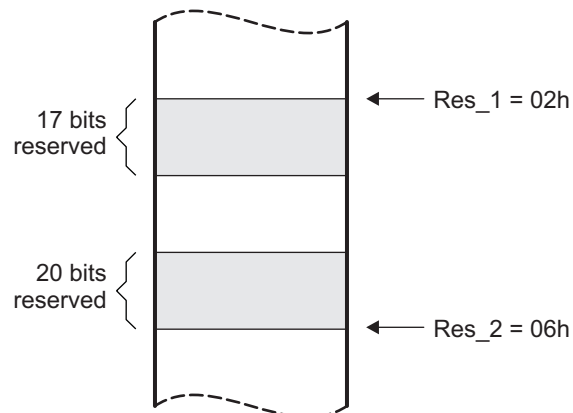
- The **.bes** and **.space** directives reserve a specified number of bits in the current section. The assembler fills these reserved bits with 0s.
  - When you use a label with **.space**, it points to the *first* word that contains reserved bits.
  - When you use a label with **.bes**, it points to the *last* word that contains reserved bits.

Figure 4-4 shows how the **.space** and **.bes** directives work for the following assembled code:

```

1
2
3 000000 0100          .word  100h, 200h
   000001 0200
4 000002          Res_1  .space  17
5 000004 000F          .word  15
6 000006          Res_2  .bes   20
7 000007 00BA          .byte  0BAh
    
```

Res\_1 points to the first word in the space reserved by **.space**. Res\_2 points to the last word in the space reserved by **.bes**.

**Figure 4-4. The .space and .bes Directives**


## 4.6 Directives That Format the Output Listings

These directives format the listing file:

- The **.drlist** directive causes printing of the directive lines to the listing; the **.drnolist** directive turns it off for certain directives. You can use the **.drnolist** directive to suppress the printing of the following directives. You can use the **.drlist** directive to turn the listing on again.

|                     |                        |                      |                        |                     |
|---------------------|------------------------|----------------------|------------------------|---------------------|
| <code>.asg</code>   | <code>.eval</code>     | <code>.length</code> | <code>.mnlolist</code> | <code>.var</code>   |
| <code>.break</code> | <code>.fclist</code>   | <code>.mllist</code> | <code>.ssllist</code>  | <code>.width</code> |
| <code>.emsg</code>  | <code>.fcnolist</code> | <code>.mmsg</code>   | <code>.ssnolist</code> | <code>.wmsg</code>  |

- The source code listing includes false conditional blocks that do not generate code. The **.fclist** and **.fcnolist** directives turn this listing on and off. You can use the **.fclist** directive to list false conditional blocks exactly as they appear in the source code. You can use the **.fcnolist** directive to list only the conditional blocks that are actually assembled.
- The **.length** directive controls the page length of the listing file. You can use this directive to adjust listings for various output devices.
- The **.list** and **.nolist** directives turn the output listing on and off. You can use the **.nolist** directive to prevent the assembler from printing selected source statements in the listing file. Use the **.list** directive to turn the listing on again.
- The source code listing includes macro expansions and loop blocks. The **.mllist** and **.mnlolist** directives turn this listing on and off. You can use the **.mllist** directive to print all macro expansions and loop blocks to the listing, and the **.mnlolist** directive to suppress this listing.
- The **.option** directive controls certain features in the listing file. This directive has the following operands:

|          |                                                                                                                                                                                                           |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> | turns on listing of all directives and data, and subsequent expansions, macros, and blocks.                                                                                                               |
| <b>B</b> | limits the listing of <code>.byte</code> and <code>.char</code> directives to one line.                                                                                                                   |
| <b>D</b> | turns off the listing of certain directives (same effect as <code>.drnolist</code> ).                                                                                                                     |
| <b>L</b> | limits the listing of <code>.long</code> directives to one line.                                                                                                                                          |
| <b>M</b> | turns off macro expansions in the listing.                                                                                                                                                                |
| <b>N</b> | turns off listing (performs <code>.nolist</code> ).                                                                                                                                                       |
| <b>O</b> | turns on listing (performs <code>.list</code> ).                                                                                                                                                          |
| <b>R</b> | resets the B, L, M, T, and W directives (turns off the limits of B, L, T, and W).                                                                                                                         |
| <b>T</b> | limits the listing of <code>.string</code> directives to one line.                                                                                                                                        |
| <b>W</b> | limits the listing of <code>.word</code> and <code>.int</code> directives to one line.                                                                                                                    |
| <b>X</b> | produces a cross-reference listing of symbols. You can also obtain a cross-reference listing by invoking the assembler with the <code>--cross_reference</code> option (see <a href="#">Section 3.3</a> ). |

- The **.page** directive causes a page eject in the output listing.
- The source code listing includes substitution symbol expansions. The **.ssllist** and **.ssnolist** directives turn this listing on and off. You can use the **.ssllist** directive to print all substitution symbol expansions to the listing, and the **.ssnolist** directive to suppress this listing. These directives are useful for debugging the expansion of substitution symbols.
- The **.tab** directive defines tab size.
- The **.title** directive supplies a title that the assembler prints at the top of each page.
- The **.width** directive controls the page width of the listing file. You can use this directive to adjust listings for various output devices.

## 4.7 Directives That Reference Other Files

These directives supply information for or about other files that can be used in the assembly of the current file:

- The **.copy** and **.include** directives tell the assembler to begin reading source statements from another file. When the assembler finishes reading the source statements in the copy/include file, it resumes reading source statements from the current file. The statements read from a copied file are printed in the listing file; the statements read from an included file are *not* printed in the listing file.
- The **.def** directive identifies a symbol that is defined in the current module and that can be used in another module. The assembler includes the symbol in the symbol table.
- The **.global** directive declares a symbol external so that it is available to other modules at link time. (For more information about global symbols, see [Section 2.7.1](#)). The **.global** directive does double duty, acting as a **.def** for defined symbols and as a **.ref** for undefined symbols. The linker resolves an undefined global symbol reference only if the symbol is used in the program. The **.global** directive declares a 16-bit symbol.
- The **.mlib** directive supplies the assembler with the name of an archive library that contains macro definitions. When the assembler encounters a macro that is not defined in the current module, it searches for it in the macro library specified with **.mlib**.
- The **.ref** directive identifies a symbol that is used in the current module but is defined in another module. The assembler marks the symbol as an undefined external symbol and enters it in the object symbol table so the linker can resolve its definition. The **.ref** directive forces the linker to resolve a symbol reference.
- The **.symdepend** directive creates an artificial reference from the section defining the source symbol name to the destination symbol. The **.symdepend** directive prevents the linker from removing the section containing the destination symbol if the source symbol section is included in the output module.

## 4.8 Directives That Enable Conditional Assembly

Conditional assembly directives enable you to instruct the assembler to assemble certain sections of code according to a true or false evaluation of an expression. Two sets of directives allow you to assemble conditional blocks of code:

- The **.if/elseif/else/endif** directives tell the assembler to conditionally assemble a block of code according to the evaluation of an expression.
 

|                                                  |                                                                                                                                   |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>.if</b> <i>well-defined expression</i>        | marks the beginning of a conditional block and assembles code if the <i>well-defined expression</i> is true.                      |
| <b>[.elseif</b> <i>well-defined expression</i> ] | marks a block of code to be assembled if the <i>well-defined expression</i> is false and the <b>.elseif</b> condition is true.    |
| <b>.else</b>                                     | marks a block of code to be assembled if the <i>well-defined expression</i> is false and any <b>.elseif</b> conditions are false. |
| <b>.endif</b>                                    | marks the end of a conditional block and terminates the block.                                                                    |
- The **.loop/.break/.endloop** directives tell the assembler to repeatedly assemble a block of code according to the evaluation of an expression.
 

|                                                  |                                                                                                                                                                                             |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>.loop</b> [ <i>well-defined expression</i> ]  | marks the beginning of a repeatable block of code. The optional expression evaluates to the loop count.                                                                                     |
| <b>.break</b> [ <i>well-defined expression</i> ] | tells the assembler to assemble repeatedly when the <i>well-defined expression</i> is false and to go to the code immediately after <b>.endloop</b> when the expression is true or omitted. |
| <b>.endloop</b>                                  | marks the end of a repeatable block.                                                                                                                                                        |

The assembler supports several relational operators that are useful for conditional expressions. For more information about relational operators, see [Section 3.10.4](#).

## 4.9 Directives That Define Union or Structure Types

These directives set up specialized types for later use with the `.tag` directive, allowing you to use symbolic names to refer to portions of a complex object. The types created are analogous to the `struct` and `union` types of the C language.

The `.struct`, `.union`, `.cstruct`, and `.cunion` directives group related data into an aggregate structure which is more easily accessed. These directives do not allocate space for any object. Objects must be separately allocated, and the `.tag` directive must be used to assign the type to the object.

The `.cstruct` and `.cunion` directives guarantee that the data structure will have the same alignment and padding as if the structure were defined in analogous C code. This allows structures to be shared between C and assembly code. See [Chapter 12](#). For `.struct` and `.union`, element offset calculation is left up to the assembler, so the layout may be different than `.cstruct` and `.cunion`.

## 4.10 Directives That Define Enumerated Types

These directives set up specialized types for later use in expressions allowing you to use symbolic names to refer to compile-time constants. The types created are analogous to the `enum` type of the C language. This allows enumerated types to be shared between C and assembly code. See [Chapter 12](#).

See [Section 12.2.10](#) for an example of using `.enum`.

## 4.11 Directives That Define Symbols at Assembly Time

Assembly-time symbol directives equate meaningful symbol names to constant values or strings.

- The **`.asg`** directive assigns a character string to a substitution symbol. The value is stored in the substitution symbol table. When the assembler encounters a substitution symbol, it replaces the symbol with its character string value. Substitution symbols can be redefined.

```
.asg "10, 20, 30, 40", coefficients
    ; Assign string to substitution symbol.
.byte coefficients
    ; Place the symbol values 10, 20, 30, and 40
    ; into consecutive bytes in current section.
```

- The **`.eval`** directive evaluates a well-defined expression, translates the results into a character string, and assigns the character string to a substitution symbol. This directive is most useful for manipulating counters:

```
.asg 1, x ; x = 1
.loop ; Begin conditional loop.
.byte x*10h ; Store value into current section.
.break x = 4 ; Break loop if x = 4.
.eval x+1, x ; Increment x by 1.
.endloop ; End conditional loop.
```

- The **`.define`** directive assigns a character string to a substitution symbol. The value is stored in the substitution symbol table. When the assembler encounters a substitution symbol, it replaces the symbol with its character string value. Substitution symbols created with `.define` cannot be redefined.

- The **`.label`** directive defines a special symbol that refers to the load-time address within the current section. This is useful when a section loads at one address but runs at a different address. For example, you may want to load a block of performance-critical code into slower off-chip memory to save space and move the code to high-speed on-chip memory to run. See the [.label](#) topic for an example using a load-time address label.

- The **`.set`** directive sets a constant value to a symbol. The symbol is stored in the symbol table and cannot be redefined; for example:

```
bval .set 0100h ; Set bval = 0100h
    .long bval, bval*2, bval+12
    ; Store the values 0100h, 0200h, and 010Ch
    ; into consecutive words in current section.
```

The `.set` directive produces no object code.

- The **`.unasg`** directive turns off substitution symbol assignment made with `.asg`.
- The **`.undefine`** directive turns off substitution symbol assignment made with `.define`.
- The **`.var`** directive allows you to use substitution symbols as local variables within a macro.

## 4.12 Directives That Override the Assembler Mode

These directives override the global syntax checking modes discussed in [Section 3.13](#). These directives are not valid with the C27x Object Mode (-v27 option).

- The **.c28\_amode** directive sets the assembler mode to C28x Object Mode (-v28). The instructions after this directive are assembled in C28x Object Mode regardless of the option used in the command line.
- The **.lp\_amode** directive sets the assembler mode to C28x Object Mode - Accept C2xlp instruction syntax (--c2xlp\_src\_compatible). The instructions after this directives are assembled as if the --c2xlp\_src\_compatible options is specified on the command line.

## 4.13 Miscellaneous Directives

These directives enable miscellaneous functions or features:

- The **.asmfunc** and **.endasmfunc** directives mark function boundaries. These directives are used with the compiler --symdebug:dwarf (-g) option to generate debug information for assembly functions.
- The **.cdecls** directive enables programmers in mixed assembly and C/C++ environments to share C headers containing declarations and prototypes between C and assembly code.
- The **.end** directive terminates assembly. If you use the .end directive, it should be the last source statement of a program. This directive has the same effect as an end-of-file character.
- The **.newblock** directive resets local labels. Local labels are symbols of the form \$n, where n is a decimal digit, or of the form NAME?, where you specify NAME. They are defined when they appear in the label field. Local labels are temporary labels that can be used as operands for jump instructions. The .newblock directive limits the scope of local labels by resetting them after they are used. See [Section 3.9.2](#) for information on local labels.
- The **.sblock** directive designates sections for blocking. Only initialized sections can be specified for blocking.

These three directives enable you to define your own error and warning messages:

- The **.emsg** directive sends error messages to the standard output device. The .emsg directive generates errors in the same manner as the assembler, incrementing the error count and preventing the assembler from producing an object file.
- The **.mmsg** directive sends assembly-time messages to the standard output device. The .mmsg directive functions in the same manner as the .emsg and .wmsg directives but does not set the error count or the warning count. It does not affect the creation of the object file.
- The **.wmsg** directive sends warning messages to the standard output device. The .wmsg directive functions in the same manner as the .emsg directive but increments the warning count rather than the error count. It does not affect the creation of the object file.

For more information about using the error and warning directives in macros, see [Section 5.7](#).

## 4.14 Directives Reference

The remainder of this chapter is a reference. Generally, the directives are organized alphabetically, one directive per topic. Related directives (such as `.if/.else/.endif`), however, are presented together in one topic.

### **.align**

#### ***Align SPC on the Next Boundary***

#### **Syntax**

**.align** [*size in words*]

#### **Description**

The **.align** directive aligns the section program counter (SPC) on the next boundary, depending on the *size in words* parameter. The *size* can be any power of 2, although only certain values are useful for alignment. An operand of 64 aligns the SPC on the next page boundary, and this is the default if no *size in words* is given. The assembler assembles words containing null values (0) up to the next *size in words* boundary:

|    |                                       |
|----|---------------------------------------|
| 1  | aligns SPC to byte boundary           |
| 2  | aligns SPC to long word/even boundary |
| 64 | aligns SPC to page boundary           |

Using the `.align` directive has two effects:

- The assembler aligns the SPC on an x-word boundary *within* the current section.
- The assembler sets a flag that forces the linker to align the section so that individual alignments remain intact when a section is loaded into memory.

#### **Example**

This example shows several types of alignment, including `.align 2`, `.align 4`, and a default `.align`.

```

1 000000 0004          .byte      4
2                          .align    2
3 000002 0045          .string   "Errorcnt"
  000003 0072
  000004 0072
  000005 006F
  000006 0072
  000007 0063
  000008 006E
  000009 0074
4                          .align
5 000040 0003          .field    3,3
6 000040 002B          .field    5,4
7                          .align    2
8 000042 0003          .field    3,3
9                          .align    8
10 000048 0005         .field    5,4
11                          .align
12 000080 0004         .byte      4

```

---

**.asg/.define/.eval**      **Assign a Substitution Symbol**


---

**Syntax**

**.asg** " *character string* " , *substitution symbol*

**.define** " *character string* " , *substitution symbol*

**.eval** *well-defined expression* , *substitution symbol*

**Description**

The **.asg** and **.define** directives assign character strings to substitution symbols. Substitution symbols are stored in the substitution symbol table. The **.asg** directive can be used in many of the same ways as the **.set** directive, but while **.set** assigns a constant value (which cannot be redefined) to a symbol, **.asg** assigns a character string (which can be redefined) to a substitution symbol.

- The assembler assigns the *character string* to the substitution symbol.
- The *substitution symbol* must be a valid symbol name. The substitution symbol is up to 128 characters long and must begin with a letter. Remaining characters of the symbol can be a combination of alphanumeric characters, the underscore ( \_ ), and the dollar sign ( \$ ).

The **.define** directive functions in the same manner as the **.asg** directive, except that **.define** disallows creation of a substitution symbol that has the same name as a register symbol or mnemonic. It does not create a new symbol name space in the assembler, rather it uses the existing substitution symbol name space. The **.define** directive is used to prevent corruption of the assembly environment when converting C/C++ headers. See [Chapter 12](#) for more information about using C/C++ headers in assembly source.

The **.eval** directive performs arithmetic on substitution symbols, which are stored in the substitution symbol table. This directive evaluates the *well-defined expression* and assigns the string value of the result to the substitution symbol. The **.eval** directive is especially useful as a counter in **.loop/.endloop** blocks.

- The *well-defined expression* is an alphanumeric expression in which all symbols have been previously defined in the current source module, so that the result is an absolute.
- The *substitution symbol* must be a valid symbol name. The substitution symbol is up to 128 characters long and must begin with a letter. Remaining characters of the symbol can be a combination of alphanumeric characters, the underscore ( \_ ), and the dollar sign ( \$ ).

See the [.unasg/.undefine](#) topic for information on turning off a substitution symbol.



**Example**

This example shows how `.asg` and `.eval` can be used.

```

1          .sslist
2          .asg   XAR6, FP
3 00000000 0964      ADD    ACC, #100
4 00000001 7786      NOP    *FP++
#
5 00000002 7786      NOP    *XAR6++
6
7          .asg   0, x
8          .loop  5
9          .eval  x+1, x
10         .word  x
11        .endloop
1          .eval  x+1, x
#          .eval  0+1, x
1          .word  x
#          .word  1
1          .eval  x+1, x
#          .eval  1+1, x
1          .word  x
#          .word  2
1          .eval  x+1, x
#          .eval  2+1, x
1          .word  x
#          .word  3
1          .eval  x+1, x
#          .eval  3+1, x
1          .word  x
#          .word  4
1          .eval  x+1, x
#          .eval  4+1, x
1          .word  x
#          .word  5

```



## **.bss** *Reserve Space in the .bss Section*

**Syntax** `.bss symbol, size in words[, blocking flag[, alignment flag[, type]]]`

**Description**

The **.bss** directive reserves space for variables in the .bss section. This directive is usually used to allocate space in RAM.

- The *symbol* is a required parameter. It defines a label that points to the first location reserved by the directive. The symbol name must correspond to the variable that you are reserving space for.
- The *size in words* is a required parameter; it must be an absolute expression. The assembler allocates size words in the .bss section. There is no default size.
- The *blocking flag* is an optional parameter. If you specify a value greater than 0 for this parameter, the assembler allocates size in words contiguously. This means that the allocated space does not cross a page boundary unless its size is greater than a page, in which case the object starts on a page boundary.
- The *alignment* is an optional parameter. It causes the assembler to allocate size in words on long word boundaries.
- The *type* is an optional parameter. Designating a type causes the assembler to produce the appropriate debug information for the symbol. See Section 3.15 for more information.

The assembler follows two rules when it allocates space in the .bss section:

**Rule 1** Whenever a hole is left in memory (as shown in [Figure 4-5](#)), the .bss directive attempts to fill it. When a .bss directive is assembled, the assembler searches its list of holes left by previous .bss directives and tries to allocate the current block into one of the holes. (This is the standard procedure regardless of whether the blocking flag has been specified.)

**Rule 2** If the assembler does not find a hole large enough to contain the block, it checks to see whether the blocking option is requested.


- If you do not request blocking, the memory is allocated at the current SPC.
- If you request blocking, the assembler checks to see whether there is enough space between the current SPC and the page boundary. If there is not enough space, the assembler creates another hole and allocates the space on the next page.

The blocking option allows you to reserve up to 64 words in the .bss section and to ensure that they fit on one page of memory. (Of course, you can reserve more than 64 words at a time, but they cannot fit on a single page.) The following example code reserves two blocks of space in the .bss section.

```
memptr:   .bss    A,32,1
memptr1:  .bss    B,35,1
```

Each block must be contained within the boundaries of a single page; after the first block is allocated, however, the second block cannot fit on the current page. As [Figure 4-5](#) shows, the second block is allocated on the next page.

**Figure 4-5. Allocating .bss Blocks Within a Page**

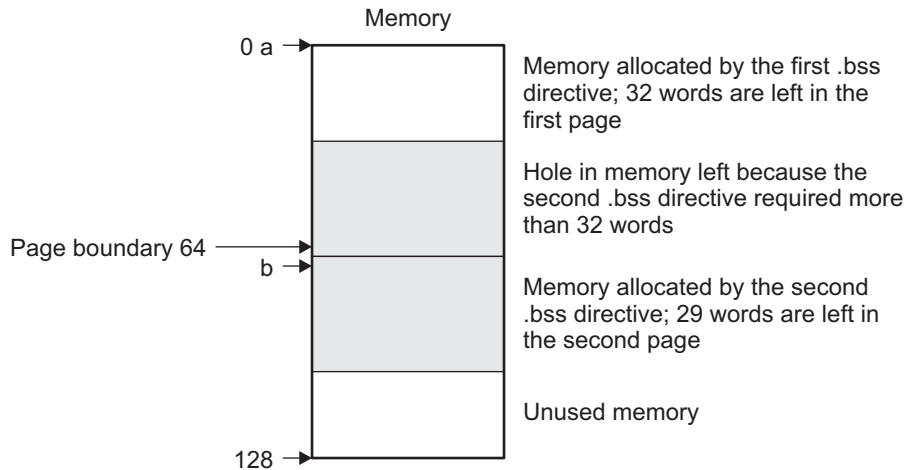

For more information about sections, see [Chapter 2](#).

**Example**

In this example, the .bss directive allocates space for two variables, TEMP and ARRAY. The symbol TEMP points to four words of uninitialized space (at .bss SPC = 0). The symbol ARRAY points to 100 words of uninitialized space (at .bss SPC = 040h); this space must be allocated contiguously within a page. Symbols declared with the .bss directive can be referenced in the same manner as other symbols, and they can also be declared external.

```

1          *****
2          ** Start assembling into .text section **
3          *****
4 000000          .text
5 000000 2BAC          MOV    T, #0
6
7          *****
8          ** Allocate 4 words in .bss          **
9          *****
10 000000          .bss   Var_1, 2, 0, 1
11
12          *****
13          ** Still in .text                    **
14          *****
15 000001 08AC          ADD    T, #56h
   000002 0056
16 000003 3573          MPY    ACC, T, #73h
17
18
19
20
21 000040          .bss   ARRAY, 100, 1
22
23
24
25 000004 F800-          MOV    DP, #Var_1
26 000005 1E00-          MOVL   @Var_1, ACC
27          *****
28          ** Declare external .bss symbol      **
29          *****
30          .global ARRAY
31          .end

```

**.byte/.char****Initialize Byte****Syntax**

```
.byte value1[, ... , valuen ]
```

```
.char value1[, ... , valuen ]
```

**Description**

The **.byte** and **.char** directives place one or more values into consecutive words of the current section. Each byte is placed in a word by itself; the eight MSBs are filled with 0s. A *value* can be one of the following:

- An expression that the assembler evaluates and treats as an 8-bit signed number
- A character string enclosed in double quotes. Each character in a string represents a separate value, and values are stored in consecutive bytes. The entire string *must* be enclosed in quotes.

Values are not packed or sign-extended; each byte occupies the eight least significant bits of a full 16-bit word. The assembler truncates values greater than eight bits. .

If you use a label, it points to the location of the first byte that is initialized.

When you use these directives in a **.struct/.endstruct** sequence, they define a member's size; they do not initialize memory. For more information, see the [.struct/.endstruct/.tag](#) topic.

**Example**

In this example, 8-bit values (10, -1, abc, and a) are placed into consecutive words in memory. The label STRX has the value 100h, which is the location of the first initialized word.

```

1 000000                                .space   100h * 16
2 000100 000A STRX                       .byte    10, -1, "abc", 'a'
   000101 00FF
   000102 0061
   000103 0062
   000104 0063
   000105 0061
3 000106 000A                             .char    10, -1, "abc", 'a'
   000107 00FF
   000108 0061
   000109 0062
   00010a 0063
   00010b 0061

```



## **.cdecls** *Share C Headers Between C and Assembly Code*

### Syntax

#### Single Line:

```
.cdecls [options ,] " filename " [, " filename2 " [...]]
```

### Syntax

#### Multiple Lines:

```
.cdecls [options]
%{
/*-----*/
/* C/C++ code - Typically a list of #includes and a few defines */
/*-----*/
%}
```

### Description

The **.cdecls** directive allows programmers in mixed assembly and C/C++ environments to share C headers containing declarations and prototypes between the C and assembly code. Any legal C/C++ can be used in a **.cdecls** block and the C/C++ declarations cause suitable assembly to be generated automatically, allowing you to reference the C/C++ constructs in assembly code; such as calling functions, allocating space, and accessing structure members; using the equivalent assembly mechanisms. While function and variable definitions are ignored, most common C/C++ elements are converted to assembly, for instance: enumerations, (non-function-like) macros, function and variable prototypes, structures, and unions.

The **.cdecls** options control whether the code is treated as C or C++ code; and how the **.cdecls** block and converted code are presented. Options must be separated by commas; they can appear in any order:

|               |                                                                                                                                                                       |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>C</b>      | Treat the code in the <b>.cdecls</b> block as C source code (default).                                                                                                |
| <b>CPP</b>    | Treat the code in the <b>.cdecls</b> block as C++ source code. This is the opposite of the C option.                                                                  |
| <b>NOLIST</b> | Do not include the converted assembly code in any listing file generated for the containing assembly file (default).                                                  |
| <b>LIST</b>   | Include the converted assembly code in any listing file generated for the containing assembly file. This is the opposite of the NOLIST option.                        |
| <b>NOWARN</b> | Do not emit warnings on STDERR about C/C++ constructs that cannot be converted while parsing the <b>.cdecls</b> source block (default).                               |
| <b>WARN</b>   | Generate warnings on STDERR about C/C++ constructs that cannot be converted while parsing the <b>.cdecls</b> source block. This is the opposite of the NOWARN option. |

In the single-line format, the options are followed by one or more filenames to include. The filenames and options are separated by commas. Each file listed acts as if **#include "filename"** was specified in the multiple-line format.

In the multiple-line format, the line following **.cdecls** must contain the opening **.cdecls** block indicator **%{**. Everything after the **%{**, up to the closing block indicator **%}**, is treated as C/C++ source and processed. Ordinary assembler processing then resumes on the line following the closing **%}**.

The text within **%{** and **%}** is passed to the C/C++ compiler to be converted into assembly language. Much of C language syntax, including function and variable definitions as well as function-like macros, is not supported and is ignored during the conversion. However, all of what traditionally appears in C header files is supported, including function and variable prototypes; structure and union declarations; non-function-like macros; enumerations; and **#define**'s.

The resulting assembly language is included in the assembly file at the point of the `.cdecls` directive. If the `LIST` option is used, the converted assembly statements are printed in the listing file.

The assembly resulting from the `.cdecls` directive is treated similarly to a `.include` file. Therefore the `.cdecls` directive can be nested within a file being copied or included. The assembler limits nesting to ten levels; the host operating system may set additional restrictions. The assembler precedes the line numbers of copied files with a letter code to identify the level of copying. An `A` indicates the first copied file, `B` indicates a second copied file, etc.

The `.cdecls` directive can appear anywhere in an assembly source file, and can occur multiple times within a file. However, the C/C++ environment created by one `.cdecls` is **not** inherited by a later `.cdecls`; the C/C++ environment starts new for each `.cdecls`.

See [Chapter 12](#) for more information on setting up and using the `.cdecls` directive with C header files.

### Example

In this example, the `.cdecls` directive is used call the C header.h file.

#### C header file:

```
#define WANT_ID 10
#define NAME "John\n"

extern int a_variable;
extern float cvt_integer(int src);

struct myCstruct { int member_a; float member_b; };

enum status_enum { OK = 1, FAILED = 256, RUNNING = 0 };
```

#### Source file:

```
.cdecls C,LIST,"myheader.h"

size: .int $sizeof(myCstruct)
aoffset: .int myCstruct.member_a
boffset: .int myCstruct.member_b
okvalue: .int status_enum.OK
failval: .int status_enum.FAILED
        .if $$defined(WANT_ID)
id      .cstring NAME
        .endif
```

#### Listing File:

```
1          .cdecls C,LIST,"myheader.h"
A 1          ; -----
A 2          ; Assembly Generated from C/C++ Source Code
A 3          ; -----
A 4
A 5          ; ===== MACRO DEFINITIONS =====
A 6              .define "1",__OPTIMIZE_FOR_SPACE
A 7              .define "1",__ASM_HEADER__
A 8              .define "1",__edg_front_end__
A 9              .define "5001000",__COMPILER_VERSION__
A 10             .define "0",__TI_STRICT_ANSI_MODE__
A 11             .define "" "14:53:42"",__TIME__
A 12             .define "" "I"",__TI_COMPILER_VERSION_QUAL__
A 13             .define "unsigned long",__SIZE_T_TYPE__
A 14             .define "long",__PTRDIFF_T_TYPE__
A 15             .define "1",__TMS320C2000__
A 16             .define "1",__TMS320C28X
A 17             .define "1",__TMS320C2000
A 18             .define "1",__TMS320C28X__
A 19             .define "1",__STDC__
A 20             .define "1",__signed_chars__
A 21             .define "0",__GNUC_MINOR__
A 22             .define "1",__TMS320C28XX
A 23             .define "5001000",__TI_COMPILER_VERSION__
```



```

A 24          .define "1",__TMS320C28XX__
A 25          .define "1",__little_endian__
A 26          .define "199409L",__STDC_VERSION__
A 27          .define "" "EDG gcc 3.0 mode""",__VERSION__
A 28          .define "" "John\n""",NAME
A 29          .define "unsigned int",__WCHAR_T_TYPE__
A 30          .define "1",__TI_RUNTIME_RTS__
A 31          .define "3",__GNUC__
A 32          .define "10",WANT_ID
A 33          .define "" "Sep 7 2007""",__DATE__
A 34          .define "7250",__TI_COMPILER_VERSION_QUAL_ID__
A 35
A 36          ; ===== TYPE DEFINITIONS =====
A 37          status_enum      .enum
A 38          0001 OK           .emember 1
A 39          0100 FAILED      .emember 256
A 40          0000 RUNNING     .emember 0
A 41          .endenum
A 42
A 43          myCstruct        .struct 0,2          ; struct size=(4 bytes|64 bits), alignment=2
A 44          0000 member_a    .field 16          ; int member_a - offset 0 bytes, size (1
bytes|16 bits)
A 45          0001            .field 16          ; padding
A 46          0002 member_b    .field 32          ; float member_b - offset 2 bytes, size (2
bytes|32 bits)
A 47          0004            .endstruct          ; final size=(4 bytes|64 bits)
A 48
A 49          ; ===== EXTERNAL FUNCTIONS =====
A 50          .global _cvt_integer
A 51
A 52          ; ===== EXTERNAL VARIABLES =====
A 53          .global _a_variable
          2 00000000 0004 size: .int $sizeof(myCstruct)
          3 00000001 0000 aoffset: .int myCstruct.member_a
          4 00000002 0002 boffset: .int myCstruct.member_b
          5 00000003 0001 okvalue: .int status_enum.OK
          6 00000004 0100 failval: .int status_enum.FAILED
          7          .if $defined(WANT_ID)
          8 00000005 004A id .cstring NAME
          00000006 006F
          00000007 0068
          00000008 006E
          00000009 000A
          0000000a 0000
          9          .endif

```

---

**.clink** *Conditionally Leave Section Out of Object Module Output*


---

**Syntax** `.clink[" section name"]`
**Description** The **.clink** directive enables conditional linking by telling the linker to leave a section out of the final object module output of the linker if there are no references found to any symbol in that section. The **.clink** directive can be applied to initialized sections.

The **.clink** directive applies to the current initialized section. It tells the linker to leave the section out of the final object module output of the linker if there are no references found in a linked section to any symbol defined in the specified section.

A section in which the entry point of a C program is defined cannot be marked as a conditionally linked section.

**Example** In this example, the Vars and Counts sections are set for conditional linking.

```

1 000000          .sect   "Vars"
2                ; Vars section is conditionally linked
3                .clink
4
5 000000 001A X:    .long   01Ah
   000001 0000
6 000002 001A Y:    .word   01Ah
7 000003 001A Z:    .word   01Ah
8                ; Counts section is conditionally linked
9                .clink
10
11 000004 001A XCount: .word   01Ah
12 000005 001A YCount: .word   01Ah
13 000006 001A ZCount: .word   01Ah
14                ; By default, .text in unconditionally linked
15 000000          .text
16
17 000000 97C6          MOV     *XAR6, AH
18                ; These references to symbol X cause the Vars
19                ; section to be linked into the COFF output
20 000001 8500+        MOV     ACC, @X
21 000002 3100        MOV     P, #0
22 000003 0FAB        Cmpl   ACC, P

```

**.copy/.include****Copy Source File****Syntax**

```
.copy "filename"
.include "filename"
```

**Description**

The **.copy** and **.include** directives tell the assembler to read source statements from a different file. The statements that are assembled from a copy file are printed in the assembly listing. The statements that are assembled from an included file are *not* printed in the assembly listing, regardless of the number of **.list/.nolist** directives assembled.

When a **.copy** or **.include** directive is assembled, the assembler:

1. Stops assembling statements in the current source file
2. Assembles the statements in the copied/included file
3. Resumes assembling statements in the main source file, starting with the statement that follows the **.copy** or **.include** directive

The *filename* is a required parameter that names a source file. It is enclosed in double quotes and must follow operating system conventions.

You can specify a full pathname (for example, /320tools/file1.asm). If you do not specify a full pathname, the assembler searches for the file in:

1. The directory that contains the current source file
2. Any directories named with the **--include\_path** assembler option
3. Any directories specified by the **C2000\_A\_DIR** environment variable
4. Any directories specified by the **C2000\_C\_DIR** environment variable

For more information about the **--include\_path** option and **C2000\_A\_DIR**, see [Section 3.4](#). For more information about **C2000\_C\_DIR**, see the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.

The **.copy** and **.include** directives can be nested within a file being copied or included. The assembler limits nesting to 32 levels; the host operating system may set additional restrictions. The assembler precedes the line numbers of copied files with a letter code to identify the level of copying. A indicates the first copied file, B indicates a second copied file, etc.

**Example 1**

In this example, the **.copy** directive is used to read and assemble source statements from other files; then, the assembler resumes assembling into the current file.

The original file, **copy.asm**, contains a **.copy** statement copying the file **byte.asm**. When **copy.asm** assembles, the assembler copies **byte.asm** into its place in the listing (note listing below). The copy file **byte.asm** contains a **.copy** statement for a second file, **word.asm**.

When it encounters the **.copy** statement for **word.asm**, the assembler switches to **word.asm** to continue copying and assembling. Then the assembler returns to its place in **byte.asm** to continue copying and assembling. After completing assembly of **byte.asm**, the assembler returns to **copy.asm** to assemble its remaining statement.

| <b>copy.asm<br/>(source file)</b>                                             | <b>byte.asm<br/>(first copy file)</b>                                                         | <b>word.asm<br/>(second copy file)</b>      |
|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|---------------------------------------------|
| <pre>.space 29 .copy "byte.asm" ** Back in original file .string "done"</pre> | <pre>** In byte.asm .byte 32,1+ 'A' .copy "word.asm" ** Back in byte.asm .byte 67h + 3q</pre> | <pre>** In word.asm .word 0ABCDh, 56q</pre> |

**Listing file:**

```

1 000000          .space 29
2                .copy "byte.asm"
1                ** In byte.asm
2 000002 0005    byte 5
3                .copy "word.asm"
1                ** In word.asm
2 000003 ABCD    .word 0ABCDh
4                * Back in byte.asm
5 000004 0006    .byte 6
3
4                **Back in original file
5 000005 646F    .string "done"
000006 6E65

```

**Example 2**

In this example, the `.include` directive is used to read and assemble source statements from other files; then, the assembler resumes assembling into the current file. The mechanism is similar to the `.copy` directive, except that statements are not printed in the listing file.

| <b>include.asm<br/>(source file)</b>                                                | <b>byte2.asm<br/>(first copy file)</b>                                                                | <b>word2.asm<br/>(second copy file)</b>        |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|------------------------------------------------|
| <pre> .space 29 .include "byte2.asm" ** Back in original file .string "done" </pre> | <pre> ** In byte2.asm .byte 32,1+ 'A' .include "word2.asm" ** Back in byte2.asm .byte 67h + 3q </pre> | <pre> ** In word2.asm .word 0ABCDh, 56q </pre> |

**Listing file:**

```

1 000000          .space 29
2                .include "byte2.asm"
3
4                ** Back in original file
5 000007 0064    .string "done"
000008 006F
000009 006E
00000a 0065

```

---

**.cstruct/.cunion/.endstruct/.endunion/.tag** *Declare C Structure Type*


---

**Syntax**

```
[stag] .cstruct|.cunion [expr]
[mem0] element [expr0]
[mem1] element [expr1]
.
.
.
[memn] .tag stag [exprn]
[memN] element [exprN]
[size] .endstruct|.endunion
label .tag stag
```

**Description**

The **.cstruct** and **.cunion** directives have been added to support ease of sharing of common data structures between assembly and C code. The **.cstruct** and **.cunion** directives can be used exactly like the existing **.struct** and **.union** directives except that they are guaranteed to perform data layout matching the layout used by the C compiler for C struct and union data types.

In particular, the **.cstruct** and **.cunion** directives force the same alignment and padding as used by the C compiler when such types are nested within compound data structures.

The **.endstruct** directive terminates the structure definition. The **.endunion** directive terminates the union definition.

The **.tag** directive gives structure characteristics to a *label*, simplifying the symbolic representation and providing the ability to define structures that contain other structures. The **.tag** directive does not allocate memory. The structure tag (*stag*) of a **.tag** directive must have been previously defined.

Following are descriptions of the parameters used with the **.struct**, **.endstruct**, and **.tag** directives:

- The *stag* is the structure's tag. Its value is associated with the beginning of the structure. If no *stag* is present, the assembler puts the structure members in the global symbol table with the value of their absolute offset from the top of the structure. A **.stag** is optional for **.struct**, but is required for **.tag**.
- The *element* is one of the following descriptors: **.byte**, **.char**, **.int**, **.long**, **.word**, **.string**, **.pstring**, **.float**, and **.field**. All of these except **.tag** are typical directives that initialize memory. Following a **.struct** directive, these directives describe the structure element's size. They do not allocate memory. A **.tag** directive is a special case because *stag* must be used (as in the definition of *stag*).
- The *expr* is an optional expression indicating the beginning offset of the structure. The default starting point for a structure is 0.
- The *expr<sub>n/N</sub>* is an optional expression for the number of elements described. This value defaults to 1. A **.string** element is considered to be one byte in size, and a **.field** element is one bit.
- The *mem<sub>n/N</sub>* is an optional label for a member of the structure. This label is absolute and equates to the present offset from the beginning of the structure. A label for a structure member cannot be declared global.
- The *size* is an optional label for the total size of the structure.

**Example**

This example illustrates a structure in C that will be accessed in assembly code.

```
;typedef struct MYSTR1
;{ long l0; /* offset 0 */
; short s0; /* offset 2 */
;} MYSTR1; /* size 4, alignment 2 */
;
;typedef struct MYSTR2
```

```

;{ MYSTR1 m1;      /* offset 0 */
;  short s1;      /* offset 4 */
;} MYSTR2;        /* size 6, alignment 2 */
;
; The structure will get the following offsets once the C compiler lays out the structure
; elements according to C standard rules:
;
; offsetof(MYSTR1, l0) = 0
; offsetof(MYSTR1, s0) = 2
; sizeof(MYSTR1)      = 4
;
; offsetof(MYSTR2, m1) = 0
; offsetof(MYSTR2, s1) = 4
; sizeof(MYSTR2)      = 6
;
; Attempts to replicate this structure in assembly using .struct/.union directives will not
; create the correct offsets because the assembler tries to use the most compact
; arrangement:

```

```

MYSTR1      .struct
l0          .long           ; bytes 0 and 1
s0          .short          ; byte 2
M1_LEN     .endstruct      ; size 4, alignment 2

MYSTR2      .struct
m1          .tag MYSTR1     ; bytes 0-3
s1          .short          ; byte 4
M2_LEN     .endstruct      ; size 6, alignment 2

```

```

.sect "data1"
.word MYSTR1.l0
.word MYSTR1.s0
.word M1_LEN

```

```

.sect "data2"
.word MYSTR2.m1
.word MYSTR2.s1
.word M2_LEN

```

```

; The .cstruct/.cunion directives calculate the offsets in the same manner as the C
; compiler. The resulting assembly structure can be used to access the elements of the
; C structure. Compare the difference in the offsets of those structures defined via
; .struct above and the offsets for the C code.

```

```

CMYSTR1     .cstruct
l0          .long
s0          .short
MC1_LEN    .endstruct

CMYSTR2     .cstruct
m1          .tag CMYSTR1
s1          .short
MC2_LEN    .endstruct

.sect "data3"
.word CMYSTR1.l0, MYSTR1.l0
.word CMYSTR1.s0, MYSTR1.s0
.word MC1_LEN, M1_LEN

.sect "data4"
.word CMYSTR2.m1, MYSTR2.m1
.word CMYSTR2.s1, MYSTR2.s1
.word MC2_LEN, M2_LEN

```

## **.data** *Assemble Into the .data Section*

### **Syntax**

**.data**

### **Description**

The **.data** directive tells the assembler to begin assembling source code into the **.data** section; **.data** becomes the current section. The **.data** section is normally used to contain tables of data or preinitialized variables.

For more information about sections, see [Chapter 2](#).

### **Example**

In this example, code is assembled into the **.data** and **.text** sections.

```

1          *****
2          **   Reserve space in .data.   **
3          *****
4 000000          .data
5 000000          .space          0CCh
6          *****
7          **   Assemble into .text.   **
8          *****
9 000000          .text
10 0000 0000 INDEX .set          0
11 000000 9A00          MOV          AL,#INDEX
12          *****
13          **   Assemble into .data.   **
14          *****
15 00000c          Table: .data
16 00000d FFFF          .word   -1   ; Assemble 16-bit constant into .data.
17 00000e 00FF          .byte   0FFh ; Assemble 8-bit constant into .data.
18          *****
19          **   Assemble into .text.   **
20          *****
21 000001          .text
22 000001 08A9"          ADD          AL,Table
23 000002 000C
24          *****
25          **   Resume assembling into the .data   **
26          **   section at address 0Fh.   **
27          *****
27 00000f          .data

```

**.drlist/.drnolist**      **Control Listing of Directives**


---

**Syntax**

**.drlist**  
**.drnolist**

**Description**

Two directives enable you to control the printing of assembler directives to the listing file:

The **.drlist** directive enables the printing of all directives to the listing file.

The **.drnolist** directive suppresses the printing of the following directives to the listing file. The **.drnolist** directive has no affect within macros.

- |           |             |             |
|-----------|-------------|-------------|
| • .asg    | • .fcnolist | • .ssnolist |
| • .break  | • .mlist    | • .var      |
| • .emsg   | • .mmsg     | • .wmsg     |
| • .eval   | • .mnolist  |             |
| • .fclist | • .sslist   |             |

By default, the assembler acts as if the **.drlist** directive had been specified.

**Example**

This example shows how **.drnolist** inhibits the listing of the specified directives.

**Source file:**

```
.asg 0, x
.loop 2
.eval x+1, x
.endloop

.drnolist

.asg 1, x
.loop 3
.eval x+1, x
.endloop
```

**Listing file:**

```
1 .asg 0, x
2 .loop 2
3 .eval x+1, x
4 .endloop
1 .eval 0+1, x
1 .eval 1+1, x
5
6 .drnolist
7
9 .loop 3
10 .eval x+1, x
11 .endloop
```



## **.emsg/.mmsg/.wmsg** *Define Messages*

### Syntax

```
.emsg string
.mmsg string
.wmsg string
```

### Description

These directives allow you to define your own error and warning messages. When you use these directives, the assembler tracks the number of errors and warnings it encounters and prints these numbers on the last line of the listing file.

The **.emsg** directive sends an error message to the standard output device in the same manner as the assembler. It increments the error count and prevents the assembler from producing an object file.

The **.mmsg** directive sends an assembly-time message to the standard output device in the same manner as the **.emsg** and **.wmsg** directives. It does not, however, set the error or warning counts, and it does not prevent the assembler from producing an object file.

The **.wmsg** directive sends a warning message to the standard output device in the same manner as the **.emsg** directive. It increments the warning count rather than the error count, however. It does not prevent the assembler from producing an object file.

### Example

In this example, the message ERROR -- MISSING PARAMETER is sent to the standard output device.

#### Source file:

```

.global      PARAM
MSG_EX      .macro parml
             .if $symlen(parml) = 0
             .emsg "ERROR -- MISSING PARAMETER"
             .else
             ADD AL, @parml
             .endif
             .endm

MSG_EX PARAM

MSG_EX
```

#### Listing file:

```

1             .global PARAM
2             MSG_EX .macro parml
3             .if $symlen(parml) = 0
4             .emsg "ERROR -- MISSING PARAMETER"
5             .else
6             ADD AL, @parml
7             .endif
8             .endm
9
10            000000      MSG_EX PARAM
1             .if $symlen(parml) = 0
1             .emsg "ERROR -- MISSING PARAMETER"
1             .else
1             000000 9400! ADD AL, @PARAM
1             .endif
11
12            000001      MSG_EX
1             .if $symlen(parml) = 0
1             .emsg "ERROR -- MISSING PARAMETER"
***** USER ERROR ***** - : ERROR -- MISSING PARAMETER
1             .else
1             ADD AL, @parml
1             .endif

1 Error, No Warnings
```

In addition, the following messages are sent to standard output by the assembler:

```
*** ERROR!   line 12:  ***** USER ERROR ***** - : ERROR -- MISSING PARAMETER
               .emsg   "ERROR -- MISSING PARAMETER"   ]]
```

```
1 Assembly Error, No Assembly Warnings
Errors in source - Assembler Aborted
```

## **.end**

### **End Assembly**

#### **Syntax**

**.end**

#### **Description**

The **.end** directive is optional and terminates assembly. The assembler ignores any source statements that follow a **.end** directive. If you use the **.end** directive, it must be the last source statement of a program.

This directive has the same effect as an end-of-file character. You can use **.end** when you are debugging and you want to stop assembling at a specific point in your code.

---

#### **Ending a Macro**

**NOTE:** Do not use the **.end** directive to terminate a macro; use the **.endm** macro directive instead.

---

#### **Example**

This example shows how the **.end** directive terminates assembly. If any source statements follow the **.end** directive, the assembler ignores them.

##### **Source file:**

```
START:  .space 300
TEMP    .set   15
        .bss  LOC1, 48h
        ABS  ACC
        ADD  ACC, #TEMP
        MOV  @LOC1, ACC
        .end
        .byte 4
        .word CCCh
```

##### **Listing file:**

```
1 000000          START:  .space 300
2          000F  TEMP    .set   15
3 000000          .bss  LOC1, 48h
4 000013 FF56          ABS  ACC
5 000014 090F          ADD  ACC, #TEMP
6 000015 9600-        MOV  @LOC1, ACC
7          .end
```

---

**.fclist/.fcnolist**      **Control Listing of False Conditional Blocks**


---

**Syntax**

**.fclist**  
**.fcnolist**

**Description**

Two directives enable you to control the listing of false conditional blocks:

The **.fclist** directive allows the listing of false conditional blocks (conditional blocks that do not produce code).

The **.fcnolist** directive suppresses the listing of false conditional blocks until a **.fclist** directive is encountered. With **.fcnolist**, only code in conditional blocks that are actually assembled appears in the listing. The **.if**, **.elseif**, **.else**, and **.endif** directives do not appear.

By default, all conditional blocks are listed; the assembler acts as if the **.fclist** directive had been used.

**Example**

This example shows the assembly language and listing files for code with and without the conditional blocks listed.

**Source file:**

```
AAA    .set 1
BBB    .set 0
       .fclist
       .if  AAA
ADD    ACC, #1024
       .else
ADD    ACC, #1024*4
       .endif
       .fcnolist
       .if  AAA
ADD    ACC, #1024
       .else
ADD    ACC, #1024*10
       .endif
```

**Listing file:**

```
1      0001  AAA    .set 1
2      0000  BBB    .set 0
3                      .fclist
4
5                      .if  AAA
6 000000 FF10      ADD    ACC, #1024
   000001 0400
7                      .else
8                      ADD    ACC, #1024*4
9                      .endif
10
11                     .fcnolist
12
14 000002 FF10      ADD    ACC, #1024
   000003 0400
```

**.field**

**Initialize Field**

**Syntax**

`.field value[, size in bits]`

**Description**

The `.field` directive initializes a multiple-bit field within a single word (16 bits) of memory. This directive has two operands:

- The *value* is a required parameter; it is an expression that is evaluated and placed in the field. The value must be absolute.
- The *size in bits* is an optional parameter; it specifies a number from 1 to 32, which is the number of bits in the field. If you do not specify a size, the assembler assumes the size is 16 bits. If you specify a size in bits of 16 or more, the field starts on a word boundary. If you specify a value that cannot fit in *size in bits*, the assembler truncates the value and issues a warning message. For example, `.field 3,1` causes the assembler to truncate the value 3 to 1; the assembler also prints the message:

```
*** WARNING! line 21: W0001: Field value truncated to 1
    .field 3, 1
```

Successive `.field` directives pack values into the specified number of bits starting at the current word. Fields are packed starting at the least significant part of the word, moving toward the most significant part as more fields are added. If the assembler encounters a field size that does not fit into the current word, it writes out the word, increments the SPC, and begins packing fields into the next word. You can use the `.align` directive with an operand of 1 to force the next `.field` directive to begin packing into a new word.

You can use the `.align` directive to force the next `.field` directive to begin packing into a new word.

If you use a label, it points to the word that contains the specified field.

When you use `.field` in a `.struct/.endstruct` sequence, `.field` defines a member's size; it does not initialize memory. For more information, see the [.struct/.endstruct/.tag](#) topic.

**Example**

This example shows how fields are packed into a word. The SPC does not change until a word is filled and the next word is begun. [Figure 4-6](#) shows how the directives in this example affect memory.

```
1          *****
2          **   Initialize a 14-bit field.   **
3          *****
4 000000 0ABC          .field 0ABCh, 14
5
6          *****
7          **   Initialize a 5-bit field   **
8          **           in a new word.     **
9          *****
10 000001 000A L_F:   .field 0Ah, 5
11
12          *****
13          **   Initialize a 4-bit field   **
14          **           in the same word.  **
15          *****
16 000001 018A X:    .field 0Ch, 4
17
18          *****
19          **   22-bit relocatable field   **
20          **           in the next 2 words. **
21          *****
22 000002 0001'      .field X
23
24          *****
25          **   Initialize a 32-bit field   **
26          *****
27 000003 4321          .field 04321h, 32
    000004 0000
```





## **.global/.def/.ref/.globl** *Identify Global Symbols*

### Syntax

```
.global symbol1[, ... , symboln]
.def symbol1[, ... , symboln]
.ref symbol1[, ... , symboln]
.globl symbol1[, ..., symboln]
```

### Description

Three directives identify global symbols that are defined externally or can be referenced externally:

The **.def** directive identifies a symbol that is defined in the current module and can be accessed by other files. The assembler places this symbol in the symbol table.

The **.ref** directive identifies a symbol that is used in the current module but is defined in another module. The linker resolves this symbol's definition at link time.

The **.global** directive acts as a **.ref** or a **.def**, as needed.

The **.globl** directive is provided for backward compatibility for C2xlp source code. It is accepted only when the `--c2xlp_src_compatible` option is used. The use of **.globl** is discouraged.

A global *symbol* is defined in the same manner as any other symbol; that is, it appears as a label or is defined by the **.set**, **.equ**, **.bss**, or **.usect** directive. As with all symbols, if a global symbol is defined more than once, the linker issues a multiple-definition error. The **.ref** directive always creates a symbol table entry for a symbol, whether the module uses the symbol or not; **.global**, however, creates an entry only if the module actually uses the symbol.

A symbol can be declared global for either of two reasons:

- If the symbol is *not defined in the current module* (which includes macro, copy, and include files), the **.global** or **.ref** directive tells the assembler that the symbol is defined in an external module. This prevents the assembler from issuing an unresolved reference error. At link time, the linker looks for the symbol's definition in other modules.
- If the symbol is *defined in the current module*, the **.global** or **.def** directive declares that the symbol and its definition can be used externally by other modules. These types of references are resolved at link time.

### Example

This example shows four files. The `file1.lst` and `file2.lst` refer to each other for all symbols used; `file3.lst` and `file4.lst` are similarly related.

The **file1.lst** and **file3.lst** files are equivalent. Both files define the symbol `INIT` and make it available to other modules; both files use the external symbols `X`, `Y`, and `Z`. Also, `file1.lst` uses the **.global** directive to identify these global symbols; `file3.lst` uses **.ref** and **.def** to identify the symbols.

The **file2.lst** and **file4.lst** files are equivalent. Both files define the symbols `X`, `Y`, and `Z` and make them available to other modules; both files use the external symbol `INIT`. Also, `file2.lst` uses the **.global** directive to identify these global symbols; `file4.lst` uses **.ref** and **.def** to identify the symbols.

#### **file1.lst**

```
1           ; Global symbol defined in this file
2           .global INIT
3           ; Global symbols defined in file2.lst
4           .global X, Y, Z
5 000000    INIT:
6 000000 0956    ADD    ACC, #56h
7
8 000001 0000!    .word  X
9           ;
10          ;
```

```

11          ;      .
12          .end

```

**file2.lst**

```

1          ; Global symbols defined in this file
2          .global X, Y, Z
3          ; Global symbol defined in file1.lst
4          .global INIT
5          0001 X:      .set    1
6          0002 Y:      .set    2
7          0003 Z:      .set    3
8 000000 0000!      .word   INIT
9          ;      .
10         ;      .
11         ;      .
12         .end

```

**file3.lst**

```

1          ; Global symbol defined in this file
2          .def     INIT
3          ; Global symbols defined in file4.lst
4          .ref    X, Y, Z
5 000000      INIT:
6 000000 0956      ADD     ACC, #56h
7
8 000001 0000!      .word   X
9          ;      .
10         ;      .
11         ;      .
12         .end

```

**file4.lst**

```

1          ; Global symbols defined in this file
2          .def    X, Y, Z
3          ; Global symbol defined in file3.lst
4          .ref    INIT
5          0001 X:      .set    1
6          0002 Y:      .set    2
7          0003 Z:      .set    3
8 000000 0000!      .word   INIT
9          ;      .
10         ;      .
11         ;      .
12         .end

```



## **.if/.elseif/.else/.endif Assemble Conditional Blocks**

**Syntax**

```

    .if well-defined expression
    [.elseif well-defined expression]
    [.else]
    .endif
  
```

**Description** Four directives provide conditional assembly:

The **.if** directive marks the beginning of a conditional block. The *well-defined expression* is a required parameter.

- If the expression evaluates to true (nonzero), the assembler assembles the code that follows the expression (up to a **.elseif**, **.else**, or **.endif**).
- If the expression evaluates to false (0), the assembler assembles code that follows a **.elseif** (if present), **.else** (if present), or **.endif** (if no **.elseif** or **.else** is present).

The **.elseif** directive identifies a block of code to be assembled when the **.if** expression is false (0) and the **.elseif** expression is true (nonzero). When the **.elseif** expression is false, the assembler continues to the next **.elseif** (if present), **.else** (if present), or **.endif** (if no **.elseif** or **.else** is present). The **.elseif** directive is optional in the conditional block, and more than one **.elseif** can be used. If an expression is false and there is no **.elseif** statement, the assembler continues with the code that follows a **.else** (if present) or a **.endif**.

The **.else** directive identifies a block of code that the assembler assembles when the **.if** expression and all **.elseif** expressions are false (0). The **.else** directive is optional in the conditional block; if an expression is false and there is no **.else** statement, the assembler continues with the code that follows the **.endif**.

The **.endif** directive terminates a conditional block.

The **.elseif** and **.else** directives can be used in the same conditional assembly block, and the **.elseif** directive can be used more than once within a conditional assembly block.

See [Section 3.10.4](#) for information about relational operators.

**Example** This example shows conditional assembly:

```

1          0001 SYM1  .set   1
2          0002 SYM2  .set   2
3          0003 SYM3  .set   3
4          0004 SYM4  .set   4
5
6          If_4:  .if     SYM4 = SYM2 * SYM2
7 000000 0004    .byte   SYM4      ; Equal values
8          .else
9          .byte   SYM2 * SYM2 ; Unequal values
10         .endif
11
12         If_5:  .if     SYM1 <= 10
13 000001 000A    .byte   10      ; Less than / equal
14         .else
15         .byte   SYM1      ; Greater than
16         .endif
17
18         If_6:  .if     SYM3 * SYM2 != SYM4 + SYM2
19          .byte   SYM3 * SYM2 ; Unequal value
20          .else
21 000002 0008    .byte   SYM4 + SYM4 ; Equal values
22          .endif
23
24         If_7:  .if     SYM1 = 2
25          .byte   SYM1
26          .elseif  SYM2 + SYM3 = 5
27 000003 0005    .byte   SYM2 + SYM3
28          .endif
  
```

**.int/.word**
**Initialize 16-Bit Integers**
**Syntax**

```
.int value1[, ... , valuen ]
.word value1[, ... , valuen ]
```

**Description**

The **.int** and **.word** directives place one or more values into consecutive words in the current section. Each value is placed in a 16-bit word by itself and is aligned on a word boundary. A *value* can be either:

- An expression that the assembler evaluates and treats as a 16-bit signed or unsigned number
- A character string enclosed in double quotes. Each character in a string represents a separate value and is stored alone in the least significant eight bits of a 16-bit field, which is padded with 0s.

A value can be either an absolute or a relocatable expression. If an expression is relocatable, the assembler generates a relocation entry that refers to the appropriate symbol; the linker can then correctly patch (relocate) the reference. This allows you to initialize memory with pointers to variables or labels.

If you use a label with these directives, it points to the first word that is initialized.

When you use these directives in a **.struct/.endstruct** sequence, they define a member's size; they do not initialize memory. See the [.struct/.endstruct/tag](#) topic.

**Example 1**

This example uses the **.int** directive to initialize words.

```
1 000000          .space 73h
2 000000          .bss  PAGE, 128
3 000080          .bss  SYMPTR, 3
4 000008 FF20  INST: MOV    ACC, #056h
   000009 0056
5 00000a 000A          .int 10, SYMPTR, -1, 35 + 'a', INST
   00000b 0080-
   00000c FFFF
   00000d 0084
   00000e 0008'
```

**Example 2**

In this example, the **.word** directive is used to initialize words. The symbol **WORDX** points to the first word that is reserved.

```
1 000000 0C80  WORDX: .word 3200, 1 + 'AB', -0AFh, 'X'
   000001 4242
   000002 FF51
   000003 0058
```

---

**.label** *Create a Load-Time Address Label*


---

**Syntax** `.label symbol`

**Description** The **.label** directive defines a special *symbol* that refers to the load-time address rather than the run-time address within the current section. Most sections created by the assembler have relocatable addresses. The assembler assembles each section as if it started at 0, and the linker relocates it to the address at which it loads and runs.

For some applications, it is desirable to have a section load at one address and run at a *different* address. For example, you may want to load a block of performance-critical code into slower memory to save space and then move the code to high-speed memory to run it. Such a section is assigned two addresses at link time: a load address and a run address. All labels defined in the section are relocated to refer to the run-time address so that references to the section (such as branches) are correct when the code runs.

The **.label** directive creates a special label that refers to the *load-time* address. This function is useful primarily to designate where the section was loaded for purposes of the code that relocates the section.

**Example** This example shows the use of a load-time address label.

```
sect ".examp"
    .label examp_load ; load address of section
start:                ; run address of section
    <code>
finish:               ; run address of section end
    .label examp_end ; load address of section end
```

See [Section 7.5.5](#) for more information about assigning run-time and load-time addresses in the linker.

**.length/.width**
**Set Listing Page Size**
**Syntax**
**.length** [*page length*]

**.width** [*page width*]

**Description**

Two directives allow you to control the size of the output listing file.

The **.length** directive sets the page length of the output listing file. It affects the current and following pages. You can reset the page length with another **.length** directive.

- Default length: 60 lines. If you do not use the **.length** directive or if you use the **.length** directive without specifying the *page length*, the output listing length defaults to 60 lines.
- Minimum length: 1 line
- Maximum length: 32 767 lines

The **.width** directive sets the page width of the output listing file. It affects the next line assembled and the lines following. You can reset the page width with another **.width** directive.

- Default width: 132 characters. If you do not use the **.width** directive or if you use the **.width** directive without specifying a *page width*, the output listing width defaults to 132 characters.
- Minimum width: 80 characters
- Maximum width: 200 characters

The width refers to a full line in a listing file; the line counter value, SPC value, and object code are counted as part of the width of a line. Comments and other portions of a source statement that extend beyond the page width are truncated in the listing.

The assembler does not list the **.width** and **.length** directives.

**Example**

The following example shows how to change the page length and width.

```
*****
**          Page length = 65 lines          **
**          Page width = 85 characters      **
*****
          .length      65
          .width       85

*****
**          Page length = 55 lines          **
**          Page width = 100 characters     **
*****
          .length      55
          .width       100
```

**.list/.nolist** *Start/Stop Source Listing*
**Syntax**

```
.list
.nolist
```

**Description**

Two directives enable you to control the printing of the source listing:

The **.list** directive allows the printing of the source listing.

The **.nolist** directive suppresses the source listing output until a **.list** directive is encountered. The **.nolist** directive can be used to reduce assembly time and the source listing size. It can be used in macro definitions to suppress the listing of the macro expansion.

The assembler does not print the **.list** or **.nolist** directives or the source statements that appear after a **.nolist** directive. However, it continues to increment the line counter. You can nest the **.list/.nolist** directives; each **.nolist** needs a matching **.list** to restore the listing.

By default, the source listing is printed to the listing file; the assembler acts as if the **.list** directive had been used. However, if you do not request a listing file when you invoke the assembler by including the **--asm\_listing** option on the command line (see [Section 3.3](#)), the assembler ignores the **.list** directive.

**Example**

This example shows how the **.copy** directive inserts source statements from another file. The first time **.copy** is encountered, the assembler lists the copied source lines in the listing file. The second time **.copy** is encountered, the assembler does not list the copied source lines, because a **.nolist** directive was assembled. The **.nolist**, the second **.copy**, and the **.list** directives do not appear in the listing file. Also the line counter is incremented, even when source statements are not listed.

**Source file:**

| copy.asm<br>(source file)                                                                                                         | copy2.asm<br>(copy file)                     |
|-----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| <pre>.copy "copy2.asm" ** Back in original file NOP .nolist .copy "copy2.asm" .list ** Back in original file .string "done"</pre> | <pre>** In copy2.asm .word 32, 1 + 'A'</pre> |

**Listing file:**

```
1          .copy    "copy2.asm"
1          *In copy2.asm (copy file)
2 000000 0020      .word 32, 1 + 'A'
000001 0042
2          * Back in original file
3 000002 7700      NOP
7          * Back in original file
8 000005 0044      .string "Done"
000006 006F
000007 006E
000008 0065
```

**.long/.xlong**
**Initialize 32-Bit Integer**
**Syntax**

```
.long value1[, ... , valuen]
```

```
.xlong value1[, ... , valuen]
```

**Description**

The **.long** and **.xlong** directives place one or more 32-bit values into consecutive words in the current section. The most significant word is stored first. The **.long** directive aligns the result on the long-word boundary, while **.xlong** does not.

A value can be either an absolute or a relocatable expression. If an expression is relocatable, the assembler generates a relocation entry that refers to the appropriate symbol; the linker can then correctly patch (relocate) the reference. This allows you to initialize memory with pointers to variables or labels.

If you use a label with these directives, it points to the first word that is initialized.

When you use **.long** in a **.struct/.endstruct** sequence, **.long** defines a member's size; it does not initialize memory. See the [.struct/.endstruct/tag topic](#).

**Example**

This example shows how the **.long** and **.xlong** directives initialize double words.

```

1 000000 ABCD DAT1:  .long  0ABCDh, 'A' + 100h, 'g', 'o'
   000001 0000
   000002 0141
   000003 0000
   000004 0067
   000005 0000
   000006 006F
   000007 0000
2 000008 0000'      .xlong  DAT1, 0AABBCCDDh
   000009 0000
   00000a CCDD
   00000b AABB
3 00000c          DAT2:
```

## **.loop/.endloop/.break Assemble Code Block Repeatedly**

**Syntax**

```

    .loop [well-defined expression]
    .break [well-defined expression]
    .endloop
  
```

**Description** Three directives allow you to repeatedly assemble a block of code:

The **.loop** directive begins a repeatable block of code. The optional expression evaluates to the loop count (the number of loops to be performed). If there is no *well-defined expression*, the loop count defaults to 1024, unless the assembler first encounters a **.break** directive with an expression that is true (nonzero) or omitted.

The **.break** directive, along with its expression, is optional. This means that when you use the **.loop** construct, you do not have to use the **.break** construct. The **.break** directive terminates a repeatable block of code only if the *well-defined expression* is true (nonzero) or omitted, and the assembler breaks the loop and assembles the code after the **.endloop** directive. If the expression is false (evaluates to 0), the loop continues.

The **.endloop** directive terminates a repeatable block of code; it executes when the **.break** directive is true (nonzero) or when the number of loops performed equals the loop count given by **.loop**.

**Example** This example illustrates how these directives can be used with the **.eval** directive. The code in the first six lines expands to the code immediately following those six lines.

```

    1          .eval      0,x
    2          COEF .loop
    3          .word      x*100
    4          .eval      x+1, x
    5          .break     x = 6
    6          .endloop
1 000000 0000 .word      0*100
1          .eval      0+1, x
1          .break     1 = 6
1 000001 0064 .word      1*100
1          .eval      1+1, x
1          .break     2 = 6
1 000002 00C8 .word      2*100
1          .eval      2+1, x
1          .break     3 = 6
1 000003 012C .word      3*100
1          .eval      3+1, x
1          .break     4 = 6
1 000004 0190 .word      4*100
1          .eval      4+1, x
1          .break     5 = 6
1 000005 01F4 .word      5*100
1          .eval      5+1, x
1          .break     6 = 6
  
```

**.macro/.endm**
**Define Macro**


---

**Syntax**

```

macname .macro [parameter1 [, ... , parametern]
           model statements or macro directives
           .endm
  
```

**Description**

The **.macro** and **.endm** directives are used to define macros.

You can define a macro anywhere in your program, but you must define the macro before you can use it. Macros can be defined at the beginning of a source file, in an `.include/.copy` file, or in a macro library.

|                         |                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <i>macname</i>          | names the macro. You must place the name in the source statement's label field.                                            |
| <b>.macro</b>           | identifies the source statement as the first line of a macro definition. You must place <b>.macro</b> in the opcode field. |
| [ <i>parameters</i> ]   | are optional substitution symbols that appear as operands for the <b>.macro</b> directive.                                 |
| <i>model statements</i> | are instructions or assembler directives that are executed each time the macro is called.                                  |
| <i>macro directives</i> | are used to control macro expansion.                                                                                       |
| <b>.endm</b>            | marks the end of the macro definition.                                                                                     |

Macros are explained in further detail in [Chapter 5](#).



## **.mlib** *Define Macro Library*

**Syntax** `.mlib "filename"`

**Description** The `.mlib` directive provides the assembler with the *filename* of a macro library. A macro library is a collection of files that contain macro definitions. The macro definition files are bound into a single file (called a library or archive) by the archiver.

Each file in a macro library contains one macro definition that corresponds to the name of the file. The *filename* of a macro library member must be the same as the macro name, and its extension must be `.asm`. The filename must follow host operating system conventions; it can be enclosed in double quotes. You can specify a full pathname (for example, `c:\320tools\macs.lib`). If you do not specify a full pathname, the assembler searches for the file in the following locations in the order given:

1. The directory that contains the current source file
2. Any directories named with the `--include_path` assembler option
3. Any directories specified by the `C2000_A_DIR` environment variable
4. Any directories specified by the `C2000_C_DIR` environment variable

See [Section 3.4](#) for more information about the `--include_path` option.

When the assembler encounters a `.mlib` directive, it opens the library specified by the *filename* and creates a table of the library's contents. The assembler enters the names of the individual library members into the opcode table as library entries. This redefines any existing opcodes or macros that have the same name. If one of these macros is called, the assembler extracts the entry from the library and loads it into the macro table. The assembler expands the library entry in the same way it expands other macros, but it does not place the source code into the listing. Only macros that are actually called from the library are extracted, and they are extracted only once.

See [Chapter 5](#) for more information on macros and macro libraries.

**Example** The code creates a macro library that defines two macros, `inc1.asm` and `dec1.asm`. The file `inc1.asm` contains the definition of `inc1` and `dec1.asm` contains the definition of `dec1`.

| <code>inc1.asm</code>                                                 | <code>dec1.asm</code>                                                 |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------|
| <pre>* Macro for incrementing incl .macro A     ADD A, #1 .endm</pre> | <pre>* Macro for decrementing decl .macro A     SUB A, #1 .endm</pre> |

Use the archiver to create a macro library:

```
ar2000 -a mac incl.asm decl.asm
```

Now you can use the `.mlib` directive to reference the macro library and define the `inc1.asm` and `dec1.asm` macros:

```

1          .mlib    "mac.lib"
2
3          * Macro call
4 000000    incl    AL
1 000000 9C01    ADD    AL,#1
5
6          * Macro call
7 000001    decl    AR1
1 000001 08A9    SUB    AR1,#1
   000002 FFFF
```

**.mlist/.mnoist**      **Start/Stop Macro Expansion Listing**


---

**Syntax**

**.mlist**  
**.mnoist**

**Description**

Two directives enable you to control the listing of macro and repeatable block expansions in the listing file:

The **.mlist** directive allows macro and .loop/.endloop block expansions in the listing file.

The **.mnoist** directive suppresses macro and .loop/.endloop block expansions in the listing file.

By default, the assembler behaves as if the **.mlist** directive had been specified.

See [Chapter 5](#) for more information on macros and macro libraries. See the [.loop/.break/.endloop](#) topic for information on conditional blocks.

**Example**

This example defines a macro named STR\_3. The first time the macro is called, the macro expansion is listed (by default). The second time the macro is called, the macro expansion is not listed, because a **.mnoist** directive was assembled. The third time the macro is called, the macro expansion is again listed because a **.mlist** directive was assembled.

```

1          STR_3 .macro   P1, P2, P3
2          .string ":p1:", ":p2:", ":p3:"
3          .endm
4
5 000000          STR_3 "as", "I", "am"
1 000000 003A          .string ":p1:", ":p2:", ":p3:"
000001 0070
000002 0031
000003 003A
000004 003A
000005 0070
000006 0032
000007 003A
000008 003A
000009 0070
00000a 0033
00000b 003A
6 00000c 003A          .string ":p1:", ":p2:", ":p3:"
00000d 0070
00000e 0031
00000f 003A
000010 003A
000011 0070
000012 0032
000013 003A
000014 003A
000015 0070
000016 0033
000017 003A
7
8          .mnoist
9 000018          STR_3 "as", "I", "am"
10         .mlist
11 000024          STR_3 "as", "I", "am"
1 000024 003A          .string ":p1:", ":p2:", ":p3:"
000025 0070
000026 0031
000027 003A
000028 003A
000029 0070
00002a 0032
00002b 003A
00002c 003A
00002d 0070
00002e 0033
00002f 003A

```

```

12 000030 003A      .string ":p1:", ":p2:", ":p3:"
    000031 0070
    000032 0031
    000033 003A
    000034 003A
    000035 0070
    000036 0032
    000037 003A
    000038 003A
    000039 0070
    00003a 0033
    00003b 003A
13

```

## **.newblock**

### **Terminate Local Symbol Block**

#### **Syntax**

**.newblock**

#### **Description**

The **.newblock** directive undefines any local labels currently defined. Local labels, by nature, are temporary; the **.newblock** directive resets them and terminates their scope.

A local label is a label in the form  $\$n$ , where  $n$  is a single decimal digit, or  $name?$ , where  $name$  is a legal symbol name. Unlike other labels, local labels are intended to be used locally, cannot be used in expressions, and do not qualify for branch expansion if used with a branch. They can be used only as operands in 8-bit jump instructions. Local labels are not included in the symbol table.

After a local label has been defined and (perhaps) used, you should use the **.newblock** directive to reset it. The **.text**, **.data**, and **.sect** directives also reset local labels. Local labels that are defined within an include file are not valid outside of the include file.

See [Section 3.9.2](#) for more information on the use of local labels.

#### **Example**

This example shows how the local label  $\$1$  is declared, reset, and then declared again.

```

1      .ref      ADDRA, ADDRb, ADDRc
2      0076 B      .set      76h
3
4 00000000 F800!   MOV      DP, #ADDRA
5
6 00000001 8500! LABEL1: MOV    ACC, @ADDRA
7 00000002 1976   SUB     ACC, #B
8 00000003 6403   B      $1, LT
9 00000004 9600!   MOV    @ADDRb, ACC
10 00000005 6F02   B      $2, UNC
11
12 00000006 8500! $1   MOV    ACC, @ADDRA
13 00000007 8100! $2   ADD    ACC, @ADDRc
14      .newblock      ; Undefine $1 to use again.
15
16 00000008 6402   B      $1, LT
17 00000009 9600!   MOV    @ADDRc, ACC
18 0000000a 7700 $1   NOP

```

**.option** *Select Listing Options*

**Syntax** `.option option1[, option2, . . .]`

**Description** The **.option** directive selects options for the assembler output listing. The *options* must be separated by commas; each option selects a listing feature. These are valid options:

- A** turns on listing of all directives and data, and subsequent expansions, macros, and blocks.
- B** limits the listing of `.byte` and `.char` directives to one line.
- D** turns off the listing of certain directives (same effect as `.drnolist`).
- L** limits the listing of `.long` directives to one line.
- M** turns off macro expansions in the listing.
- N** turns off listing (performs `.nolist`).
- O** turns on listing (performs `.list`).
- R** resets any B, L, M, T, and W (turns off the limits of B, L, M, T, and W).
- T** limits the listing of `.string` directives to one line.
- W** limits the listing of `.word` and `.int` directives to one line.
- X** produces a cross-reference listing of symbols. You can also obtain a cross-reference listing by invoking the assembler with the `--cross_reference` option (see [Section 3.3](#)).

Options *are not* case sensitive.

**Example** This example shows how to limit the listings of the `.byte`, `.long`, `.word`, and `.string` directives to one line each.

```

1          *****
2          ** Limit the listing of .byte, .long, **
3          ** .word, and .string directives to 1 **
4          **           to 1 line each.           **
5          *****
6          .option B, W, L, T
7 000000 00BD      .byte   -'C', 0B0h, 5
8 000004 CCDD      .long    0AABCCDDh, 536 + 'A'
9 000008 15AA      .word    5546, 78h
10 00000a 0045     .string  "Extended Registers"
11          *****
12          **      Reset the listing options.      **
13          *****
14          .option R
15 00001c 00BD     .byte   -'C', 0B0h, 5
16          00001d 00B0
17          00001e 0005
18          000020 CCDD      .long    0AABCCDDh, 536 + 'A'
19          000021 AABB
20          000022 0259
21          000023 0000
22          000024 15AA      .word    5546, 78h
23          000025 0078
24          000026 0045     .string  "Extended Registers"
25          000027 0078
26          000028 0074
27          000029 0065
28          00002a 006E
29          00002b 0064
30          00002c 0065
31          00002d 0064
32          00002e 0020
33          00002f 0052
34          000030 0065
35          000031 0067
36          000032 0069
37          000033 0073

```

```
000034 0074
000035 0065
000036 0072
000037 0073
```

---

**.page** *Eject Page in Listing*


---

**Syntax** `.page`
**Description** The **.page** directive produces a page eject in the listing file. The **.page** directive is not printed in the source listing, but the assembler increments the line counter when it encounters the **.page** directive. Using the **.page** directive to divide the source listing into logical divisions improves program readability.

**Example** This example shows how the **.page** directive causes the assembler to begin a new page of the source listing.

**Source file:**

```
Source file (generic)
    .title    "**** Page Directive Example ****"
;
;
;
;
    .page
```

**Listing file:**

```
TMS320C000 COFF Assembler      Version x.xx      Day      Time      Year
Copyright (c) 1996-2009 Texas Instruments Incorporated
**** Page Directive Example ****                                PAGE    1

    2          ;          .
    3          ;          .
    4          ;          .

TMS320C2000 COFF Assembler      Version x.xx      Day      Time      Year
Copyright (c) 1996-2009 Texas Instruments Incorporated
**** Page Directive Example ****                                PAGE    2
```

```
No Errors, No Warnings
```

---

**.sblock** *Specify Blocking for an Initialized Section*


---

**Syntax** `.sblock["]section name["],["]section name["],...`
**Description** The **.sblock** directive designates sections for blocking. Blocking is an address alignment mechanism similar to page alignment, but weaker. A blocked section does not cross a page boundary (64 words) if it is smaller than a page, and it starts on a page boundary if it is larger than a page. This directive allows specification of blocking for initialized sections only, not for uninitialized sections declared with **.usect** or the **.bss** directives. The *section names* may optionally be enclosed in quotation marks.

**Example** This example designates the **.text** and **.data** sections for blocking.

```
1 *****
2 ** Specify blocking for the .text      **
3 ** and .data sections.                **
4 *****
5     .sblock    .text, .data
```

## **.sect** *Assemble Into Named Section*

**Syntax** `.sect " section name "`

**Description** The `.sect` directive defines a named section that can be used like the default `.text` and `.data` sections. The `.sect` directive tells the assembler to begin assembling source code into the named section.

The *section name* identifies the section. The section name must be enclosed in double quotes. A section name can contain a subsection name in the form *section name : subsection name*.

See [Chapter 2](#) for more information about sections.

**Example** This example defines two special-purpose sections, `Sym_Defs` and `Vars`, and assembles code into them.

```

1          ** Begin assembling into .text section. **
2 000000   .text
3 000000 FF20   MOV    ACC, #78h ; Assembled into .text
   000001 0078
4 000002 0936   ADD    ACC, #36h ; Assembled into .text
5
6          ** Begin assembling into Sym_Defs section. **
7 000000   .sect  "Sym_Defs"
8 000000 CCCD   .float  0. ; Assembled into Sym_Defs
   000001 3D4C
9 000002 00AA X:   .word  0AAh ; Assembled into Sym_Defs
10 000003 FF10   ADD    ACC, #X ; Assembled into Sym_Defs
   000004 0002+
11
12         ** Begin assembling into Vars section. **
13 000000   .sect  "Vars"
14         0010 WORD_LEN .set   16
15         0020 DWORD_LEN .set  WORD_LEN * 2
16         0008 BYTE_LEN  .set  WORD_LEN / 2
17         0053 STR       .set   53h
18
19         ** Resume assembling into .text section. **
20 000003   .text
21 000003 0942   ADD    ACC, #42h ; Assembled into .text
22 000004 0003   .byte  3, 4 ; Assembled into .text
   000005 0004
23
24         ** Resume assembling into Vars section. **
25 000000   .sect  "Vars"
26 000000 000D   .field 13, WORD_LEN
27 000001 000A   .field 0Ah, BYTE_LEN
28 000002 0008   .field 10q, DWORD_LEN
   000003 0000
29

```

## **.set** *Define Assembly-Time Constant*

**Syntax** *symbol .set value*

**Description** The **.set** directive equates a constant value to a symbol. The symbol can then be used in place of a value in assembly source. This allows you to equate meaningful names with constants and other values.

- The *symbol* is a label that must appear in the label field.
- The *value* must be a well-defined expression, that is, all symbols in the expression must be previously defined in the current source module.

Undefined external symbols and symbols that are defined later in the module cannot be used in the expression. If the expression is relocatable, the symbol to which it is assigned is also relocatable.

The value of the expression appears in the object field of the listing. This value is not part of the actual object code and is not written to the output file.

Symbols defined with **.set** can be made externally visible with the **.def** or **.global** directive (see the [.global/.def/.ref topic](#)). In this way, you can define global absolute constants.

### **Example**

This example shows how symbols can be assigned with **.set**.

```

1          *****
2          ** Equate symbol AUX_R1 to register AR1 **
3          ** and use it instead of the register. **
4          *****
5          0001 AUX_R1 .set   AR1
6          000000 28C1      MOV    *AUX_R1, #56h
7          000001 0056
8
9          *****
10         ** Set symbol index to an integer expr. **
11         ** and use it as an immediate operand. **
12         *****
13         0035 INDEX .set   100/2 +3
14         000002 0935      ADD    ACC, #INDEX
15
16         *****
17         ** Set symbol SYMTAB to a relocatable expr. **
18         ** and use it as a relocatable operand. **
19         *****
20         000003 000A LABEL .word  10
21         0004' SYMTAB .set   LABEL + 1
22
23         *****
24         ** Set symbol NSYMS equal to the symbol **
25         ** INDEX and use it as you would INDEX. **
26         *****
27         0035 NSYMS .set   INDEX
28         000004 0035      .word  NSYMS

```

**.space/.bes**
**Reserve Space**
**Syntax**

```
[label] .space size in bits
```

```
[label] .bes size in bits
```

**Description**

The **.space** and **.bes** directives reserve the number of bits given by *size in bits* in the current section and fill them with 0s. The section program counter is incremented to point to the word following the reserved space.

When you use a label with the **.space** directive, it points to the *first* word reserved. When you use a label with the **.bes** directive, it points to the *last* reserved.

**Example**

This example shows how memory is reserved with the **.space** and **.bes** directives.

```

1          *****
2          ** Begin assembling into .text section. **
3          *****
4 000000          .text
5          *****
6          ** Reserve 0F0 bits (15 words in the      **
7          ** .text section.                        **
8          *****
9 000000          .space 0F0h
10 00000f 0100          .word 100h, 200h
    000010 0200
11          *****
12          ** Begin assembling into .data section. **
13          *****
14 000000          .data
15 000000 0049          .string "In .data"
    000001 006E
    000002 0020
    000003 002E
    000004 0064
    000005 0061
    000006 0074
    000007 0061
16          *****
17          ** Reserve 100 bits in the .data section; **
18          ** RES_1 points to the first word that  **
19          ** contains reserved bits.              **
20          *****
21 000008          RES_1: .space 100
22 00000f 000F          .word 15
23          *****
24          ** Reserve 20 bits in the .data section; **
25          ** RES_2 points to the last word that  **
26          ** contains reserved bits.              **
27          *****
28 000011          RES_2: .bes 20
29 000012 0036          .word 36h
30 000013 0011"          .word RES_
    
```



---

**.sslist/.ssnolist**      **Control Listing of Substitution Symbols**


---

**Syntax**

**.sslist**  
**.ssnolist**

**Description**

Two directives allow you to control substitution symbol expansion in the listing file:

The **.sslist** directive allows substitution symbol expansion in the listing file. The expanded line appears below the actual source line.

The **.ssnolist** directive suppresses substitution symbol expansion in the listing file.

By default, all substitution symbol expansion in the listing file is suppressed; the assembler acts as if the **.ssnolist** directive had been used.

Lines with the pound (#) character denote expanded substitution symbols.

**Example**

This example shows code that, by default, suppresses the listing of substitution symbol expansion, and it shows the **.sslist** directive assembled, instructing the assembler to list substitution symbol code expansion.

```

1 00000000          .bss   ADDR, 1
2 00000001          .bss   ADDR, 1
3 00000002          .bss   ADDR, 1
4 00000003          .bss   ADDR, 1
5
6                ADD2   .macro parm1, parm2
7                    MOV   ACC, @parm1
8                    ADD   ACC, @parm2
9                    MOV   @parm2, ACC
10                   .endm
11
12 00000000          ADD2   ADDR, ADDR
1 00000000 8500-     MOV   ACC, @ADDR
1 00000001 8101-     ADD   ACC, @ADDR
1 00000002 9601-     MOV   @ADDR, ACC
13
14
15 00000003          ADD2   ADDR, ADDR
# 00000003 8502-     MOV   ACC, @parm1
#                    MOV   ACC, @ADDR
1 00000004 8103-     ADD   ACC, @parm2
#                    ADD   ACC, @ADDR
1 00000005 9603-     MOV   @parm2, AC

```

## **.string/.cstring/.pstring** *Initialize Text*

### Syntax

**.string** {*expr*<sub>1</sub> | "*string*<sub>1</sub>"} [, ... , {*expr*<sub>*n*</sub> | "*string*<sub>*n*</sub>"} ]

**.cstring** {*expr*<sub>1</sub> | "*string*<sub>1</sub>"} [, ... , {*expr*<sub>*n*</sub> | "*string*<sub>*n*</sub>"} ]

**.pstring** {*expr*<sub>1</sub> | "*string*<sub>1</sub>"} [, ... , {*expr*<sub>*n*</sub> | "*string*<sub>*n*</sub>"} ]

### Description

The **.string**, **.cstring**, and **.pstring** directives place 8-bit characters from a character string into the current section. With the **.string** directive, each 8-bit character has its own 16-bit word, but with the **.pstring** directive, the data is packed so that each word contains two 8-bit bytes. The *expr* or *string* can be one of the following:

- An expression that the assembler evaluates and treats as an 16-bit signed number.
- A character string enclosed in double quotes. Each character in a string represents a separate byte. The entire string *must* be enclosed in quotes.

The **.cstring** directive adds a NUL character needed by C; the **.string** directive does not add a NUL character. In addition, **.cstring** interprets C escapes (`\\` `\a` `\b` `\f` `\n` `\r` `\t` `\v` `\<octal>`).

With **.pstring**, values are packed into words starting with the most significant byte of the word. Any unused space is padded with null bytes.

The assembler truncates any values that are greater than eight bits. Operands must fit on a single source statement line.

If you use a label, it points to the location of the first word that is initialized.

When you use **.string**, **.cstring**, and **.pstring** in a **.struct/.endstruct** sequence, the directive only defines a member's size; it does not initialize memory. For more information, see the [.struct/.endstruct/.tag](#) topic.

### Example

In this example, 8-bit values are placed into consecutive words in the current section.

```

1 000000 0041 Str_Ptr: .string "ABCD"
   000001 0042
   000002 0043
   000003 0044
2
3 000004 0041          .string 41h, 42h, 43h, 44h
   000005 0042
   000006 0043
   000007 0044
4
5 000008 4175          .pstring "Austin", "Houston"
   000009 7374
   00000a 696E
   00000b 486F
   00000c 7573
   00000d 746F
   00000e 6E00
6
7 00000f 0030          .string 36 + 12
    
```

---

**.struct/.endstruct/.tag Declare Structure Type**


---

|               |                                    |                         |                                     |
|---------------|------------------------------------|-------------------------|-------------------------------------|
| <b>Syntax</b> | [ <i>stag</i> ]                    | <b>.struct</b>          | [ <i>expr</i> ]                     |
|               | [ <i>mem</i> <sub>0</sub> ]        | <i>element</i>          | [ <i>expr</i> <sub>0</sub> ]        |
|               | [ <i>mem</i> <sub>1</sub> ]        | <i>element</i>          | [ <i>expr</i> <sub>1</sub> ]        |
|               | .                                  | .                       | .                                   |
|               | .                                  | .                       | .                                   |
|               | .                                  | .                       | .                                   |
|               | [ <i>mem</i> <sub><i>n</i></sub> ] | <b>.tag</b> <i>stag</i> | [ <i>expr</i> <sub><i>n</i></sub> ] |
|               | .                                  | .                       | .                                   |
|               | .                                  | .                       | .                                   |
|               | .                                  | .                       | .                                   |
|               | [ <i>mem</i> <sub><i>N</i></sub> ] | <i>element</i>          | [ <i>expr</i> <sub><i>N</i></sub> ] |
|               | [ <i>size</i> ]                    | <b>.endstruct</b>       |                                     |
|               | <i>label</i>                       | <b>.tag</b>             | <i>stag</i>                         |

**Description**

The **.struct** directive assigns symbolic offsets to the elements of a data structure definition. This allows you to group similar data elements together and let the assembler calculate the element offset. This is similar to a C structure or a Pascal record. The **.struct** directive does not allocate memory; it merely creates a symbolic template that can be used repeatedly.

The **.endstruct** directive terminates the structure definition.

The **.tag** directive gives structure characteristics to a *label*, simplifying the symbolic representation and providing the ability to define structures that contain other structures. The **.tag** directive does not allocate memory. The structure tag (*stag*) of a **.tag** directive must have been previously defined.

Following are descriptions of the parameters used with the **.struct**, **.endstruct**, and **.tag** directives:

- The *stag* is the structure's tag. Its value is associated with the beginning of the structure. If no *stag* is present, the assembler puts the structure members in the global symbol table with the value of their absolute offset from the top of the structure. A *stag* is optional for **.struct**, but is required for **.tag**.
- The *expr* is an optional expression indicating the beginning offset of the structure. The default starting point for a structure is 0.
- The *mem*<sub>*n*</sub> is an optional label for a member of the structure. This label is absolute and equates to the present offset from the beginning of the structure. A label for a structure member cannot be declared global.
- The *element* is one of the following descriptors: **.byte**, **.char**, **.int**, **.long**, **.word**, **.string**, **.pstring**, **.float**, **.field**, and **.tag**. All of these except **.tag** are typical directives that initialize memory. Following a **.struct** directive, these directives describe the structure element's size. They do not allocate memory. The **.tag** directive is a special case because *stag* must be used (as in the definition of *stag*).
- The *expr*<sub>*n*</sub> is an optional expression for the number of elements described. This value defaults to 1. A **.string** element is considered to be one byte in size, and a **.field** element is one bit.
- The *size* is an optional label for the total size of the structure.

---

**Directives That Can Appear in a .struct/.endstruct Sequence**

**NOTE:** The only directives that can appear in a **.struct/.endstruct** sequence are element descriptors, conditional assembly directives, and the **.align** directive, which aligns the member offsets on word boundaries. Empty structures are illegal.

---

The following examples show various uses of the .struct, .tag, and .endstruct directives.

**Example 1**

```

REAL_REC  .struct                ; stag
NOM       .int                   ; member1 = 0
DEN       .int                   ; member2 = 1

REAL_LEN  .endstruct             ; real_len = 4
          ADD  ACC, @(REAL + REAL_REC.DEN) ;access structure element
          .bss REAL, REAL_LEN     ; allocate mem rec

```

**Example 2**

```

CPLX_REC  .struct
REALI     .tag REAL_REC          ; stag
IMAGI     .tag REAL_REC          ; member1 = 0
CPLX_LEN  .endstruct            ; rec_len = 4

COMPLEX   .tag CPLX_REC          ; assign structure attrib
          ADD  ACC, COMPLEX.REALI ; access structure
          ADD  ACC, COMPLEX.IMAGI
          .bss COMPLEX, CPLX_LEN  ; allocate space

```

**Example 3**

```

          .struct                ; no stag puts mems into
X         .int                   ; global symbol table
Y         .int                   ;create 3 dim templates
Z         .int
          .endstruct

```

**Example 4**

```

BIT_REC   .struct                ; stag
STREAM    .string 64
BIT7      .field 7               ; bits1 = 64
BIT9      .field 9               ; bits2 = 64
BIT10     .field 10              ; bits3 = 65
X_INT     .int                   ; x_int = 67
BIT_LEN   .endstruct            ; length = 68

BITS      .tag BIT_REC
          ADD  AC, @BITS.BIT7     ; move into acc
          AND  ACC, #007Fh        ; mask off garbage bits
          .bss BITS, BIT_REC

```

---

**.symdepend** *Effect Symbol Linkage and Visibility*

---

**Syntax**

**.symdepend** *dst symbol name*[, *src symbol name*]

**Description**

The **.symdepend** directive creates an artificial reference from the section defining *src symbol name* to the symbol *dst symbol name*. This prevents the linker from removing the section containing *dst symbol name* if the section defining *src symbol name* is included in the output module. If *src symbol name* is not specified, a reference from the current section is created.

A global *symbol* is defined in the same manner as any other symbol; that is, it appears as a label or is defined by the `.set`, `.equ`, `.bss`, or `.usect` directive. As with all symbols, if a global symbol is defined more than once, the linker issues a multiple-definition error. The `.symdepend` directive creates an entry only if the module actually uses the symbol.

If the symbol is *defined in the current module*, the `.symdepend` directive declares that the symbol and its definition can be used externally by other modules. These types of references are resolved at link time.

**.tab** *Define Tab Size*
**Syntax** `.tab size`
**Description** The `.tab` directive defines the tab size. Tabs encountered in the source input are translated to `size` character spaces in the listing. The default tab size is eight spaces.

**Example** In this example, each of the lines of code following a `.tab` statement consists of a single tab character followed by an NOP instruction.

**Source file:**

```

; default tab size
NOP
NOP
NOP
.tab 4
NOP
NOP
NOP
.tab 16
NOP
NOP
NOP

```

**Listing file:**

```

1          ; default tab size
2 000000 7700      NOP
3 000001 7700      NOP
4 000002 7700      NOP
5
7 000003 7700      NOP
8 000004 7700      NOP
9 000005 7700      NOP
10
12 000006 7700      NOP
13 000007 7700      NOP
14 000008 7700      NOP

```

## **.text** *Assemble Into the .text Section*

### Syntax

**.text**

### Description

The **.text** directive tells the assembler to begin assembling into the **.text** section, which usually contains executable code. The section program counter is set to 0 if nothing has yet been assembled into the **.text** section. If code has already been assembled into the **.text** section, the section program counter is restored to its previous value in the section.

The **.text** section is the default section. Therefore, at the beginning of an assembly, the assembler assembles code into the **.text** section unless you use a **.data** or **.sect** directive to specify a different section.

For more information about sections, see [Chapter 2](#).

### Example

This example assembles code into the **.text** and **.data** sections. The **.data** section contains integer constants and the **.text** section contains character strings.

```

1          *****
2          ** Begin assembling into .data section. **
3          *****
4 000000          .data
5 000000 000A          .byte  0Ah, 0Bh
   000001 000B
6
7          *****
8          ** Begin assembling into .text section. **
9          *****
10 000000          .text
11 000000 0041  START:  .string "A", "B", "C"
   000001 0042
   000002 0043
12 000003 0058  END:    .string "X", "Y", "Z"
   000004 0059
   000005 005A
13
14 000006 8100'          ADD     ACC, @START
15 000007 8103'          ADD     ACC, @END
16
17          *****
18          ** Resume assembling into .data section.**
19          *****
20 000002          .data
21 000002 000C          .byte  0Ch, 0Dh
   000003 000D
22          *****
23          ** Resume assembling into .text section.**
24          *****
25 000008          .text
26 000008 0051          .string "Quit"
   000009 0075
   00000a 0069
   00000b 0074

```

**.title**
**Define Page Title**
**Syntax**
**.title "string"**
**Description**

The **.title** directive supplies a title that is printed in the heading on each listing page. The source statement itself is not printed, but the line counter is incremented.

The *string* is a quote-enclosed title of up to 64 characters. If you supply more than 64 characters, the assembler truncates the string and issues a warning:

```
*** WARNING! line x: W0001: String is too long - will be truncated
```

The assembler prints the title on the page that follows the directive and on subsequent pages until another **.title** directive is processed. If you want a title on the first page, the first source statement must contain a **.title** directive.

**Example**

In this example, one title is printed on the first page and a different title is printed on succeeding pages.

**Source file:**

```

        .title  "**** Fast Fourier Transforms ****"
;
;
;
;
        .title  "**** Floating-Point Routines ****"
        .page

```

**Listing file:**

```

TMS320C2000 COFF Assembler   Version x.xx           Day   Time   Year
Copyright (c) 1996-2009 Texas Instruments Incorporated
**** Fast Fourier Transforms ****                                PAGE   1
      2                ;           .
      3                ;           .
      4                ;           .
TMS320C2000 COFF Assembler   Version x.xx           Day   Time   Year
Copyright (c) 1996-2009 Texas Instruments Incorporated
**** Floating-Point Routines ****                                PAGE   2

```

No Errors, No Warnings



## **.union/.endunion/.tag** *Declare Union Type*

### Syntax

```

[stag]   .union   [expr]
[mem0] element [expr0]
[mem1] element [expr1]
.        .        .
.        .        .
.        .        .
[memn]  .tag stag [exprn]
.        .        .
.        .        .
[memN]  element [exprN]
[size]   .endunion
label    .tag     stag

```

### Description

The **.union** directive assigns symbolic offsets to the elements of alternate data structure definitions to be allocated in the same memory space. This enables you to define several alternate structures and then let the assembler calculate the element offset. This is similar to a C union. The **.union** directive does not allocate any memory; it merely creates a symbolic template that can be used repeatedly.

A **.struct** definition can contain a **.union** definition, and **.structs** and **.unions** can be nested.

The **.endunion** directive terminates the union definition.

The **.tag** directive gives structure or union characteristics to a *label*, simplifying the symbolic representation and providing the ability to define structures or unions that contain other structures or unions. The **.tag** directive does not allocate memory. The structure or union tag of a **.tag** directive must have been previously defined.

Following are descriptions of the parameters used with the **.struct**, **.endstruct**, and **.tag** directives:

- The *utag* is the union's tag. Its value is associated with the beginning of the union. If no *utag* is present, the assembler puts the union members in the global symbol table with the value of their absolute offset from the top of the union. In this case, each member must have a unique name.
- The *expr* is an optional expression indicating the beginning offset of the union. Unions default to start at 0. This parameter can only be used with a top-level union. It cannot be used when defining a nested union.
- The *mem<sub>n/N</sub>* is an optional label for a member of the union. This label is absolute and equates to the present offset from the beginning of the union. A label for a union member cannot be declared global.
- The *element* is one of the following descriptors: **.byte**, **.char**, **.int**, **.long**, **.word**, **.double**, **.half**, **.short**, **.string**, **.float**, and **.field**. An element can also be a complete declaration of a nested structure or union, or a structure or union declared by its tag. Following a **.union** directive, these directives describe the element's size. They do not allocate memory.
- The *expr<sub>n/N</sub>* is an optional expression for the number of elements described. This value defaults to 1. A **.string** element is considered to be one byte in size, and a **.field** element is one bit.
- The *size* is an optional label for the total size of the union.

### Directives That Can Appear in a .union/.endunion Sequence

**NOTE:** The only directives that can appear in a .union/.endunion sequence are element descriptors, structure and union tags, and conditional assembly directives. Empty structures are illegal.

These examples show unions with and without tags.

#### Example 1

```

1
2
3
4
5
6
7
8
9
10
11
12
13
00000000
00000001 0000
        xample      .global employid
        .union      ; utag
0000 ival          .int          ; member1 = int
0000 fval          .float         ; member2 = float
0000 sval          .string        ; member3 = string
0002 real_len     .endunion
        .bss employid, real_len ; allocate memory
        employid .tag xample      ; name an instance
00000000 08A1-    ADD AR1, #employid.ival
00000001 0000
```

#### Example 2

```

1
2
3
4
5
6
0000 x          .union          ; utag
0000 y          .long           ; member 1= long
0000 z          .float          ; member 2 = float
0000 size_u     .int            ; member 3 = int
0002 size_u     .endunion      ; size_u = 2
```

**.usect****Reserve Uninitialized Space****Syntax**

*symbol* **.usect** " *section name*", *size in words*[, *blocking flag*[, *alignment flag*[, *type*] ] ]

**Description**

The **.usect** directive reserves space for variables in an uninitialized, named section. This directive is similar to the **.bss** directive; both simply reserve space for data and that space has no contents. However, **.usect** defines additional sections that can be placed anywhere in memory, independently of the **.bss** section.

- The *symbol* points to the first location reserved by this invocation of the **.usect** directive. The symbol corresponds to the name of the variable for which you are reserving space.
- The *section name* must be enclosed in double quotes. This parameter names the uninitialized section. A section name can contain a subsection name in the form *section name* : *subsection name*.
- The *size in words* is an expression that defines the number of words that are reserved in *section name*.
- The *blocking flag* is an optional parameter. If you specify a value greater than 0 for this parameter, the assembler allocates size in words contiguously. This means that the allocated space does not cross a page boundary (64 words) unless its size is greater than a page, in which case the object starts on a page boundary.
- The *alignment* is an optional parameter. It causes the assembler to allocate size in words on long word boundaries.
- The *type* is an optional parameter. Designating a *type* causes the assembler to produce the appropriate debug information for the symbol. See [Section 3.16](#) for more information.

Initialized sections directives (**.text**, **.data**, and **.sect**) end the current section and tell the assembler to begin assembling into another section. A **.usect** or **.bss** directive encountered in the current section is simply assembled, and assembly continues in the current section.

Variables that can be located contiguously in memory can be defined in the same specified section; to do so, repeat the **.usect** directive with the same section name and the subsequent symbol (variable name).

For more information about sections, see [Chapter 2](#).

**Example**


This example uses the **.usect** directive to define two uninitialized, named sections, **var1** and **var2**. The symbol **ptr** points to the first word reserved in the **var1** section. The symbol **array** points to the first word in a block of 100 words reserved in **var1**, and **dflag** points to the first word in a block of 50 words in **var1**. The symbol **vec** points to the first word reserved in the **var2** section.

Figure 4-8 shows how this example reserves space in two uninitialized sections, var1 and var2.

```

1          *****
2          **   Assemble into .text section.   **
3          *****
4 000000          .text
5 000000 9A03      MOV     AL, #03h
6
7          *****
8          **   Reserve 1 word in var1.       **
9          *****
10 000000      ptr  .usect "var1", 1
11
12          *****
13          **   Reserve 100 words in var1.    **
14          *****
15 000001      array .usect "var1", 100
16
17 000001 9C03      ADD     AL, #03h ; Still in .text
18
19          *****
20          **   Reserve 50 words in var1.     **
21          *****
22 000065      dflag .usect "var1", 50
23
24 000002 08A9      ADD     AL, #dflag ; Still in .text
25 000003 0065-
26
27          *****
28          **   Reserve 100 words in var2.    **
29          *****
30 000000      vec  .usect "var2", 100
31
32 000004 08A9      ADD     AL, #vec  ; Still in .text
33 000005 0000-
34
35          *****
36          **   Declare an external .usect symbol **
37          *****
38          .global array
    
```

**Figure 4-8. The .usect Directive**

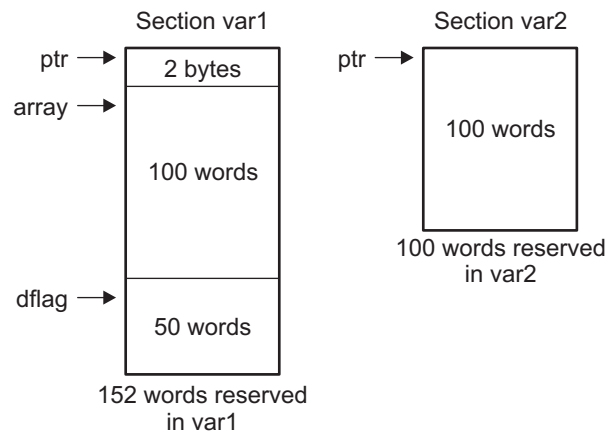

---

**.unasg/.undefine**      **Turn Off Substitution Symbol**


---

**Syntax**

```
.unasg symbol
.undefine symbol
```

**Description**

The **.unasg** and **.undefine** directives remove the definition of a substitution symbol created using **.asg** or **.define**. The named *symbol* will be removed from the substitution symbol table from the point of the **.undefine** or **.unasg** to the end of the assembly file.

These directives can be used to remove from the assembly environment any C/C++ macros that may cause a problem. See [Chapter 12](#) for more information about using C/C++ headers in assembly source.

---

**.var**      **Use Substitution Symbols as Local Variables**


---

**Syntax**

```
.var sym1 [, sym2 , ... , symn ]
```

**Description**

The **.var** directive allows you to use substitution symbols as local variables within a macro. With this directive, you can define up to 32 local macro substitution symbols (including parameters) per macro.

The **.var** directive creates temporary substitution symbols with the initial value of the null string. These symbols are not passed in as parameters, and they are lost after expansion.

See [Chapter 5](#) for information on macros.



## Macro Description

The TMS320C28x assembler supports a macro language that enables you to create your own instructions. This is especially useful when a program executes a particular task several times. The macro language lets you:

- Define your own macros and redefine existing macros
- Simplify long or complicated assembly code
- Access macro libraries created with the archiver
- Define conditional and repeatable blocks within a macro
- Manipulate strings within a macro
- Control expansion listing

| Topic                                                          | Page       |
|----------------------------------------------------------------|------------|
| <b>5.1 Using Macros .....</b>                                  | <b>136</b> |
| <b>5.2 Defining Macros .....</b>                               | <b>136</b> |
| <b>5.3 Macro Parameters/Substitution Symbols .....</b>         | <b>138</b> |
| <b>5.4 Macro Libraries .....</b>                               | <b>143</b> |
| <b>5.5 Using Conditional Assembly in Macros .....</b>          | <b>144</b> |
| <b>5.6 Using Labels in Macros .....</b>                        | <b>146</b> |
| <b>5.7 Producing Messages in Macros .....</b>                  | <b>147</b> |
| <b>5.8 Using Directives to Format the Output Listing .....</b> | <b>148</b> |
| <b>5.9 Using Recursive and Nested Macros .....</b>             | <b>149</b> |
| <b>5.10 Macro Directives Summary .....</b>                     | <b>150</b> |

## 5.1 Using Macros

Programs often contain routines that are executed several times. Instead of repeating the source statements for a routine, you can define the routine as a macro, then call the macro in the places where you would normally repeat the routine. This simplifies and shortens your source program.

If you want to call a macro several times but with different data each time, you can assign parameters within a macro. This enables you to pass different information to the macro each time you call it. The macro language supports a special symbol called a *substitution symbol*, which is used for macro parameters. See [Section 5.3](#) for more information.

Using a macro is a 3-step process.

- Step 1. **Define the macro.** You must define macros before you can use them in your program. There are two methods for defining macros:
  - (a) Macros can be defined at the beginning of a *source file* or in a copy/include file. See [Section 5.2, Defining Macros](#), for more information.
  - (b) Macros can also be defined in a *macro library*. A macro library is a collection of files in archive format created by the archiver. Each member of the archive file (macro library) may contain one macro definition corresponding to the member name. You can access a macro library by using the `.mlib` directive. For more information, see [Section 5.4](#).
- Step 2. **Call the macro.** After you have defined a macro, call it by using the macro name as a mnemonic in the source program. This is referred to as a *macro call*.
- Step 3. **Expand the macro.** The assembler expands your macros when the source program calls them. During expansion, the assembler passes arguments by variable to the macro parameters, replaces the macro call statement with the macro definition, then assembles the source code. By default, the macro expansions are printed in the listing file. You can turn off expansion listing by using the `.mnoist` directive. For more information, see [Section 5.8](#).

When the assembler encounters a macro definition, it places the macro name in the opcode table. This redefines any previously defined macro, library entry, directive, or instruction mnemonic that has the same name as the macro. This allows you to expand the functions of directives and instructions, as well as to add new instructions.

## 5.2 Defining Macros

You can define a macro anywhere in your program, but you must define the macro before you can use it. Macros can be defined at the beginning of a source file or in a `.copy/.include` file (see [Copy Source File](#)); they can also be defined in a macro library. For more information about macro libraries, see [Section 5.4](#).

Macro definitions can be nested, and they can call other macros, but all elements of the macro must be defined in the same file. Nested macros are discussed in [Section 5.9](#).

A macro definition is a series of source statements in the following format:

```

macname  .macro  [parameter1] [, ... , parametern]
           model statements or macro directives
           [.mexit]
           .endm
  
```

|                                                                  |                                                                                                                                                                                                                                                                                             |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>macname</i>                                                   | names the macro. You must place the name in the source statement's label field. Only the first 128 characters of a macro name are significant. The assembler places the macro name in the internal opcode table, replacing any instruction or previous macro definition with the same name. |
| <b>.macro</b>                                                    | is the directive that identifies the source statement as the first line of a macro definition. You must place <code>.macro</code> in the opcode field.                                                                                                                                      |
| <i>parameter</i> <sub>1</sub> ,<br><i>parameter</i> <sub>n</sub> | are optional substitution symbols that appear as operands for the <code>.macro</code> directive. Parameters are discussed in <a href="#">Section 5.3</a> .                                                                                                                                  |



|                         |                                                                                                                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>model statements</i> | are instructions or assembler directives that are executed each time the macro is called.                                                                                                                |
| <i>macro directives</i> | are used to control macro expansion.                                                                                                                                                                     |
| <b>.mexit</b>           | is a directive that functions as a <i>goto .endm</i> . The <i>.mexit</i> directive is useful when error testing confirms that macro expansion fails and completing the rest of the macro is unnecessary. |
| <b>.endm</b>            | is the directive that terminates the macro definition.                                                                                                                                                   |

If you want to include comments with your macro definition but *do not* want those comments to appear in the macro expansion, use an exclamation point to precede your comments. If you *do* want your comments to appear in the macro expansion, use an asterisk or semicolon. See [Section 5.7](#) for more information about macro comments.

[Example 5-1](#) shows the definition, call, and expansion of a macro.

### **Example 5-1. Macro Definition, Call, and Expansion**

```

1          * add3 arg1, arg2, arg3
2          * arg3 = arg1 + arg2 + arg3
3
4          add3      .macro P1, P2, P3, ADDR
5
6                      MOV   ACC, P1
7                      ADD   ACC, P2
8                      ADD   ACC, P3
9                      ADD   ACC, ADDR
10         .endm
11
12         .global ABC, def, ghi, adr
13
14 000000      add3 @abc, @def, @ghi, @adr
1
1      000000 E000!      MOV   ACC, @abc
1      000001 A000!      ADD   ACC, @def
1      000002 A000!      ADD   ACC, @ghi
1      000003 A000!      ADD   ACC, @adr
15

```

### 5.3 Macro Parameters/Substitution Symbols

If you want to call a macro several times with different data each time, you can assign parameters within the macro. The macro language supports a special symbol, called a *substitution symbol*, which is used for macro parameters.

Macro parameters are substitution symbols that represent a character string. These symbols can also be used outside of macros to equate a character string to a symbol name (see [Section 3.9.6](#)).

Valid substitution symbols can be up to 128 characters long and *must begin with a letter*. The remainder of the symbol can be a combination of alphanumeric characters, underscores, and dollar signs.

Substitution symbols used as macro parameters are local to the macro they are defined in. You can define up to 32 local substitution symbols (including substitution symbols defined with the `.var` directive) per macro. For more information about the `.var` directive, see [Section 5.3.6](#).

During macro expansion, the assembler passes arguments by variable to the macro parameters. The character-string equivalent of each argument is assigned to the corresponding parameter. Parameters without corresponding arguments are set to the null string. If the number of arguments exceeds the number of parameters, the last parameter is assigned the character-string equivalent of all remaining arguments.

If you pass a list of arguments to one parameter or if you pass a comma or semicolon to a parameter, you must surround these terms with quotation marks.

At assembly time, the assembler replaces the macro parameter/substitution symbol with its corresponding character string, then translates the source code into object code.

[Example 5-2](#) shows the expansion of a macro with varying numbers of arguments.

#### Example 5-2. Calling a Macro With Varying Numbers of Arguments

##### Macro definition:

```
Parms .macro a,b,c
; a = :a:
; b = :b:
; c = :c:
.endm
```

##### Calling the macro:

|                      |                         |
|----------------------|-------------------------|
| Parms 100,label      | Parms 100,label,x,y     |
| ; a = 100            | ; a = 100               |
| ; b = label          | ; b = label             |
| ; c = " "            | ; c = x,y               |
| Parms 100, , x       | Parms "100,200,300",x,y |
| ; a = 100            | ; a = 100,200,300       |
| ; b = " "            | ; b = x                 |
| ; c = x              | ; c = y                 |
| Parms ""string"",x,y |                         |
| ; a = "string"       |                         |
| ; b = x              |                         |
| ; c = y              |                         |

### 5.3.1 Directives That Define Substitution Symbols

You can manipulate substitution symbols with the **.asg** and **.eval** directives.

- The **.asg** directive assigns a character string to a substitution symbol.  
For the **.asg** directive, the quotation marks are optional. If there are no quotation marks, the assembler reads characters up to the first comma and removes leading and trailing blanks. In either case, a character string is read and assigned to the *substitution symbol*. The syntax of the **.asg** directive is:

```
.asg["]character string["], substitution symbol
```

[Example 5-3](#) shows character strings being assigned to substitution symbols.

#### Example 5-3. The **.asg** Directive

```
.asg "A4", RETVAL ; return value
```

- The **.eval** directive performs arithmetic on numeric substitution symbols.  
The **.eval** directive evaluates the *expression* and assigns the string value of the result to the *substitution symbol*. If the expression is not well defined, the assembler generates an error and assigns the null string to the symbol. The syntax of the **.eval** directive is:

```
.eval well-defined expression , substitution symbol
```

[Example 5-4](#) shows arithmetic being performed on substitution symbols.

#### Example 5-4. The **.eval** Directive

```
.asg 1,counter
.loop 100
.word counter
.eval counter + 1,counter
.endloop
```

In [Example 5-4](#), the **.asg** directive could be replaced with the **.eval** directive (**.eval 1, counter**) without changing the output. In simple cases like this, you can use **.eval** and **.asg** interchangeably. However, you must use **.eval** if you want to calculate a *value* from an expression. While **.asg** only assigns a character string to a substitution symbol, **.eval** evaluates an expression and then assigns the character string equivalent to a substitution symbol.

See [Assign a Substitution Symbol](#) for more information about the **.asg** and **.eval** assembler directives.

### 5.3.2 Built-In Substitution Symbol Functions

The following built-in substitution symbol functions enable you to make decisions on the basis of the string value of substitution symbols. These functions always return a value, and they can be used in expressions. Built-in substitution symbol functions are especially useful in conditional assembly expressions. Parameters of these functions are substitution symbols or character-string constants.

In the function definitions shown in [Table 5-1](#), *a* and *b* are parameters that represent substitution symbols or character-string constants. The term *string* refers to the string value of the parameter. The symbol *ch* represents a character constant.

**Table 5-1. Substitution Symbol Functions and Return Values**

| Function                                   | Return Value                                                                                                                                                                                                                           |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>\$symlen</b> ( <i>a</i> )               | Length of string <i>a</i>                                                                                                                                                                                                              |
| <b>\$symcmp</b> ( <i>a,b</i> )             | < 0 if <i>a</i> < <i>b</i> ; 0 if <i>a</i> = <i>b</i> ; > 0 if <i>a</i> > <i>b</i>                                                                                                                                                     |
| <b>\$firstch</b> ( <i>a,ch</i> )           | Index of the first occurrence of character constant <i>ch</i> in string <i>a</i>                                                                                                                                                       |
| <b>\$lastch</b> ( <i>a,ch</i> )            | Index of the last occurrence of character constant <i>ch</i> in string <i>a</i>                                                                                                                                                        |
| <b>\$isdefed</b> ( <i>a</i> )              | 1 if string <i>a</i> is defined in the symbol table<br>0 if string <i>a</i> is not defined in the symbol table                                                                                                                         |
| <b>\$ismember</b> ( <i>a,b</i> )           | Top member of list <i>b</i> is assigned to string <i>a</i><br>0 if <i>b</i> is a null string                                                                                                                                           |
| <b>\$iscons</b> ( <i>a</i> )               | 1 if string <i>a</i> is a binary constant<br>2 if string <i>a</i> is an octal constant<br>3 if string <i>a</i> is a hexadecimal constant<br>4 if string <i>a</i> is a character constant<br>5 if string <i>a</i> is a decimal constant |
| <b>\$isname</b> ( <i>a</i> )               | 1 if string <i>a</i> is a valid symbol name<br>0 if string <i>a</i> is not a valid symbol name                                                                                                                                         |
| <b>\$isreg</b> ( <i>a</i> ) <sup>(1)</sup> | 1 if string <i>a</i> is a valid predefined register name<br>0 if string <i>a</i> is not a valid predefined register name                                                                                                               |

<sup>(1)</sup> For more information about predefined register names, see [Section 3.9.5](#).

[Example 5-5](#) shows built-in substitution symbol functions.

#### Example 5-5. Using Built-In Substitution Symbol Functions

```

1      global   x, label
2      .asg    label, ADDR          ; ADDR = label
3      .if     ($symcmp(ADDR,"label") = 0) ; evaluates to true
4 000000 8000! SUB ACC, @ADDR
5      .endif
6      .asg    "x, y, z", list      ; list = x, y, z
7      .if     ($ismember(ADDR, list)) ; ADDR = x list = y,z
8 000001 8000! SUB ACC, @ADDR
9      .endif
    
```

### 5.3.3 Recursive Substitution Symbols

When the assembler encounters a substitution symbol, it attempts to substitute the corresponding character string. If that string is also a substitution symbol, the assembler performs substitution again. The assembler continues doing this until it encounters a token that is not a substitution symbol or until it encounters a substitution symbol that it has already encountered during this evaluation.

In [Example 5-6](#), the x is substituted for z; z is substituted for y; and y is substituted for x. The assembler recognizes this as infinite recursion and ceases substitution.

#### Example 5-6. Recursive Substitution

```

1          .global x
2          .asg  "x", z  ; declare z and assign z = "x"
3          .asg  "z", y  ; declare y and assign y = "z"
4          .asg  "y", x  ; declare x and assign x = "y"
5 000000 FF10      ADD  ACC, x
6          000001 0000!
```

### 5.3.4 Forced Substitution

In some cases, substitution symbols are not recognizable to the assembler. The forced substitution operator, which is a set of colons surrounding the symbol, enables you to force the substitution of a symbol's character string. Simply enclose a symbol with colons to force the substitution. Do not include any spaces between the colons and the symbol.

The syntax for the forced substitution operator is:

```
:symbol:
```

The assembler expands substitution symbols surrounded by colons before expanding other substitution symbols.

You can use the forced substitution operator only inside macros, and you cannot nest a forced substitution operator within another forced substitution operator.

[Example 5-7](#) shows how the forced substitution operator is used.

#### Example 5-7. Using the Forced Substitution Operator

```

force     .macro    x
          .loop     8
PORT:x:   .set      x*4
          .eval     x+1, x
          .endloop
          .endm

          .global   portbase
          force

PORT0     .set      0
PORT1     .set      4
.
.
.
PORT7     .set      28
```

### 5.3.5 Accessing Individual Characters of Subscripted Substitution Symbols

In a macro, you can access the individual characters (substrings) of a substitution symbol with subscripted substitution symbols. You must use the forced substitution operator for clarity.

You can access substrings in two ways:

- `:symbol (well-defined expression)`:  
This method of subscripting evaluates to a character string with one character.
- `:symbol (well-defined expression1, well-defined expression2)`:  
In this method, expression<sub>1</sub> represents the substring's starting position, and expression<sub>2</sub> represents the substring's length. You can specify exactly where to begin subscripting and the exact length of the resulting character string. *The index of substring characters begins with 1, not 0.*

[Example 5-8](#) and [Example 5-9](#) show built-in substitution symbol functions used with subscripted substitution symbols.

In [Example 5-8](#), subscripted substitution symbols redefine the STW instruction so that it handles immediates. In [Example 5-9](#), the subscripted substitution symbol is used to find a substring strg1 beginning at position start in the string strg2. The position of the substring strg1 is assigned to the substitution symbol pos.

#### Example 5-8. Using Subscripted Substitution Symbols to Redefine an Instruction

```

ADDX      .macro      ABC
          .var        TMP
          .asg        :ABC(1): , TMP
          .if         $symcmp(TMP, "#") = 0
          ADD        ACC, ABC
          .else
          .emsg      "Bad Macro Parameter"
          .endif
          .endm

ADDX      #100                ;macro call
  
```

#### Example 5-9. Using Subscripted Substitution Symbols to Find Substrings

```

substr    .macro      start,strg1,strg2,pos
          .var        len1,len2,i,tmp
          .if         $symlen(start) = 0
          .eval      1,start
          .endif
          .eval      0,pos
          .eval      start,i
          .eval      $symlen(strg1),len1
          .eval      $symlen(strg2),len2
          .loop
          .break    i = (len2 - len1 + 1)
          .asg      ":strg2(i,len1):",tmp
          .if         $symcmp(strg1,tmp) = 0
          .eval      i,pos
          .break
          .else
          .eval      i + 1,i
          .endif
          .endloop
          .endm

          .asg      0,pos
          .asg      "ar1 ar2 ar3 ar4",regs
          substr    1,"ar2",regs,pos
          .word     pos
  
```

### 5.3.6 Substitution Symbols as Local Variables in Macros

If you want to use substitution symbols as local variables within a macro, you can use the `.var` directive to define up to 32 local macro substitution symbols (including parameters) per macro. The `.var` directive creates temporary substitution symbols with the initial value of the null string. These symbols are not passed in as parameters, and they are lost after expansion.

```
.var sym1 [,sym2 , ... ,symn ]
```

The `.var` directive is used in [Example 5-8](#) and [Example 5-9](#).

## 5.4 Macro Libraries

One way to define macros is by creating a macro library. A macro library is a collection of files that contain macro definitions. You must use the archiver to collect these files, or members, into a single file (called an archive). Each member of a macro library contains one macro definition. The files in a macro library must be unassembled source files. The macro name and the member name must be the same, and the macro filename's extension must be `.asm`. For example:

| Macro Name | Filename in Macro Library |
|------------|---------------------------|
| simple     | simple.asm                |
| add3       | add3.asm                  |

You can access the macro library by using the `.mlib` assembler directive (described in [Define Macro Library](#)). The syntax is:

```
.mlib filename
```

When the assembler encounters the `.mlib` directive, it opens the library named by filename and creates a table of the library's contents. The assembler enters the names of the individual members within the library into the opcode tables as library entries; this redefines any existing opcodes or macros that have the same name. If one of these macros is called, the assembler extracts the entry from the library and loads it into the macro table.

The assembler expands the library entry in the same way it expands other macros. See [Section 5.1](#) for how the assembler expands macros. You can control the listing of library entry expansions with the `.mlist` directive. For more information about the `.mlist` directive, see [Section 5.8](#) and [Start/Stop Macro Expansion Listing](#). Only macros that are actually called from the library are extracted, and they are extracted only once.

You can use the archiver to create a macro library by including the desired files in an archive. A macro library is no different from any other archive, except that the assembler expects the macro library to contain macro definitions. The assembler expects *only* macro definitions in a macro library; putting object code or miscellaneous source files into the library may produce undesirable results. For information about creating a macro library archive, see [Section 6.1](#).

## 5.5 Using Conditional Assembly in Macros

The conditional assembly directives are **.if/.elseif/.else/.endif** and **.loop/.break/.endloop**. They can be nested within each other up to 32 levels deep. The format of a conditional block is:

```
.if well-defined expression
[.elseif well-defined expression]
[.else]
.endif
```

The **.elseif** and **.else** directives are optional in conditional assembly. The **.elseif** directive can be used more than once within a conditional assembly code block. When **.elseif** and **.else** are omitted and when the **.if** expression is false (0), the assembler continues to the code following the **.endif** directive. See [Assemble Conditional Blocks](#) for more information on the **.if/.elseif/.else/.endif** directives.

The **.loop/.break/.endloop** directives enable you to assemble a code block repeatedly. The format of a repeatable block is:

```
.loop [well-defined expression]
[.break [well-defined expression]]
.endloop
```

The **.loop** directive's optional *well-defined expression* evaluates to the loop count (the number of loops to be performed). If the expression is omitted, the loop count defaults to 1024 unless the assembler encounters a **.break** directive with an expression that is true (nonzero). See [Assemble Conditional Blocks Repeatedly](#) for more information on the **.loop/.break/.endloop** directives.

The **.break** directive and its expression are optional in repetitive assembly. If the expression evaluates to false, the loop continues. The assembler breaks the loop when the **.break** expression evaluates to true or when the **.break** expression is omitted. When the loop is broken, the assembler continues with the code after the **.endloop** directive.

For more information, see [Section 4.8](#).

[Example 5-10](#), [Example 5-11](#), and [Example 5-12](#) show the **.loop/.break/.endloop** directives, properly nested conditional assembly directives, and built-in substitution symbol functions used in a conditional assembly code block.

### Example 5-10. The **.loop/.break/.endloop** Directives

```
.asg 1,x
.loop

.break (x == 10) ; if x == 10, quit loop/break with expression

.eval x+1,x
.endloop
```



**Example 5-11. Nested Conditional Assembly Directives**

```

.asg    1,x
.loop

.if     (x == 10) ; if x == 10, quit loop
.break (x == 10) ; force break
.endif

.eval  x+1,x
.endloop

```

**Example 5-12. Built-In Substitution Symbol Functions in a Conditional Assembly Code Block**

```

MACK3 .macro    src1, src2, sum, k
;      sum = sum + k * (src1 * src2)

      .if     k = 0
MOV    T,#src1
MPY    ACC,T,#src2
MOV    DP,#sum
ADD    @sum,AL
      .else
MOV    T,#src1
MPY    ACC,T,#k
MOV    T,AL
MPY    ACC,T,#src2
MOV    DP,#sum
ADD    @sum,AL
      .endif

      .endm

.global A0, A1, A2

MACK3 A0,A1,A2,0
MACK3 A0,A1,A2,100

```

## 5.6 Using Labels in Macros

All labels in an assembly language program must be unique. This includes labels in macros. If a macro is expanded more than once, its labels are defined more than once. *Defining a label more than once is illegal.* The macro language provides a method of defining labels in macros so that the labels are unique. Simply follow each label with a question mark, and the assembler replaces the question mark with a period followed by a unique number. When the macro is expanded, *you do not see the unique number in the listing file.* Your label appears with the question mark as it did in the macro definition. You cannot declare this label as global. The syntax for a unique label is:

*label ?*

[Example 5-13](#) shows unique label generation in a macro. The maximum label length is shortened to allow for the unique suffix. For example, if the macro is expanded fewer than 10 times, the maximum label length is 126 characters. If the macro is expanded from 10 to 99 times, the maximum label length is 125. The label with its unique suffix is shown in the cross-listing file. To obtain a cross-listing file, invoke the assembler with the `--cross_reference` option (see [Section 3.3](#)).

### Example 5-13. Unique Labels in a Macro

|                                  |          |         |            |        |
|----------------------------------|----------|---------|------------|--------|
| 1                                |          |         |            |        |
| 2                                | min      | .macro  | x, y, z    |        |
| 3                                |          |         |            |        |
| 4                                |          | MOV     | z, y       |        |
| 5                                |          | CMP     | x, y       |        |
| 6                                |          | B       | l?,GT      |        |
| 7                                |          | MOV     | z, x       |        |
| 8                                | l?       |         |            |        |
| 9                                |          | .endm   |            |        |
| 10                               |          |         |            |        |
| 11                               | 00000000 | min     | AH, AL, PH |        |
| 1                                |          |         |            |        |
| 1                                | 00000000 | 2FA9    | MOV        | PH, AL |
| 1                                | 00000001 | 55A9    | CMP        | AH, AL |
| 1                                | 00000002 | 6202    | B          | l?,GT  |
| 1                                | 00000003 | 2FA8    | MOV        | PH, AH |
| 1                                |          | l?      |            |        |
| 12                               |          |         |            |        |
| <br>                             |          |         |            |        |
| LABEL                            |          | VALUE   | DEFN       | REF    |
| .TMS320C2700                     |          | 000000  | 0          |        |
| .TMS320C2800                     |          | 000001  | 0          |        |
| .TMS320C2800_FPU32               |          | 000000  | 0          |        |
| .TMS320C2800_FPU64               |          | 000000  | 0          |        |
| __LARGE_MODEL                    |          | 000000  | 0          |        |
| __LARGE_MODEL__                  |          | 000000  | 0          |        |
| __TI_ASSEMBLER_VERSION_QUAL_ID__ |          | 001c52  | 0          |        |
| __TI_ASSEMBLER_VERSION_QUAL__    |          | 000049  | 0          |        |
| __TI_ASSEMBLER_VERSION__         |          | 4c4f28  | 0          |        |
| __large_model__                  |          | 000000  | 0          |        |
| l\$l\$                           |          | 000004' | 12         | 11     |

## 5.7 Producing Messages in Macros

The macro language supports three directives that enable you to define your own assembly-time error and warning messages. These directives are especially useful when you want to create messages specific to your needs. The last line of the listing file shows the error and warning counts. These counts alert you to problems in your code and are especially useful during debugging.

- .emsg** sends error messages to the listing file. The `.emsg` directive generates errors in the same manner as the assembler, incrementing the error count and preventing the assembler from producing an object file.
- .mmsg** sends assembly-time messages to the listing file. The `.mmsg` directive functions in the same manner as the `.emsg` directive but does not set the error count or prevent the creation of an object file.
- .wmsg** sends warning messages to the listing file. The `.wmsg` directive functions in the same manner as the `.emsg` directive, but it increments the warning count and does not prevent the generation of an object file.

**Macro comments** are comments that appear in the definition of the macro *but do not show up in the expansion of the macro*. An exclamation point in column 1 identifies a macro comment. If you want your comments to appear in the macro expansion, precede your comment with an asterisk or semicolon.

[Example 5-14](#) shows user messages in macros and macro comments that do not appear in the macro expansion.

For more information about the `.emsg`, `.mmsg`, and `.wmsg` assembler directives, see [Define Messages](#).

### Example 5-14. Producing Messages in a Macro

```

1          testparam .macro x, y
2          !
3          ! This macro checks for the correct number of parameters.
4          ! It generates an error message if x and y are not present.
5          !
6          ! The first line tests for proper input.
7          !
8          .if      ($symlen(x) == 0)
9          .emsg    "ERROR --missing parameter in call to TEST"
10         .mexit
11         .else
12         MOV      ACC, #2
13         MOV      AL, #1
14         ADD      ACC, @AL
15         .endif
16         .endm
17
18 000000      testparam 1, 2
1          .if      ($symlen(x) == 0)
1          .emsg    "ERROR --missing parameter in call to TEST"
1          .mexit
1          .else
1          MOV      000000 FF20      ACC, #2
1          MOV      000001 0002
1          MOV      000002 9A01      AL, #1
1          ADD      000003 A0A9      ACC, @AL
1          .endif

```

## 5.8 Using Directives to Format the Output Listing

Macros, substitution symbols, and conditional assembly directives may hide information. You may need to see this hidden information, so the macro language supports an expanded listing capability.

By default, the assembler shows macro expansions and false conditional blocks in the list output file. You may want to turn this listing off or on within your listing file. Four sets of directives enable you to control the listing of this information:

- **Macro and loop expansion listing**

**.mlist** expands macros and `.loop/.endloop` blocks. The `.mlist` directive prints all code encountered in those blocks.

**.mnolist** suppresses the listing of macro expansions and `.loop/.endloop` blocks.

For macro and loop expansion listing, `.mlist` is the default.

- **False conditional block listing**

**.fclist** causes the assembler to include in the listing file all conditional blocks that do not generate code (false conditional blocks). Conditional blocks appear in the listing exactly as they appear in the source code.

**.fcnolist** suppresses the listing of false conditional blocks. Only the code in conditional blocks that actually assemble appears in the listing. The `.if`, `.elseif`, `.else`, and `.endif` directives do not appear in the listing.

For false conditional block listing, `.fclist` is the default.

- **Substitution symbol expansion listing**

**.sslist** expands substitution symbols in the listing. This is useful for debugging the expansion of substitution symbols. The expanded line appears below the actual source line.

**.ssnolist** turns off substitution symbol expansion in the listing.

For substitution symbol expansion listing, `.ssnolist` is the default.

- **Directive listing**

**.drlist** causes the assembler to print to the listing file all directive lines.

**.drnolist** suppresses the printing of certain directives in the listing file. These directives are `.asg`, `.eval`, `.var`, `.sslist`, `.mlist`, `.fclist`, `.ssnolist`, `.mnolist`, `.fcnolist`, `.emsg`, `.wmsg`, `.mmsg`, `.length`, `.width`, and `.break`.

For directive listing, `.drlist` is the default.

## 5.9 Using Recursive and Nested Macros

The macro language supports recursive and nested macro calls. This means that you can call other macros in a macro definition. You can nest macros up to 32 levels deep. When you use recursive macros, you call a macro from its own definition (the macro calls itself).

When you create recursive or nested macros, you should pay close attention to the arguments that you pass to macro parameters because the assembler uses dynamic scoping for parameters. This means that the called macro uses the environment of the macro from which it was called.

[Example 5-15](#) shows nested macros. The `y` in the `in_block` macro hides the `y` in the `out_block` macro. The `x` and `z` from the `out_block` macro, however, are accessible to the `in_block` macro.

### Example 5-15. Using Nested Macros

```

in_block .macro y,a
        .                ; visible parameters are y,a and x,z from the calling macro
        .endm

out_block .macro      x,y,z
        .                ; visible parameters are x,y,z
        .
        in_block x,y ; macro call with x and y as arguments
        .
        .endm
out_block      ; macro call
  
```

[Example 5-16](#) shows recursive and fact macros. The `fact` macro produces assembly code necessary to calculate the factorial of `n`, where `n` is an immediate value. The result is placed in the `A` register. The `fact` macro accomplishes this by calling `fact1`, which calls itself recursively.

### Example 5-16. Using Recursive Macros

```

1          .fcnolist
2
3          fact .macro N, LOC
4
5              .if N < 2
6                  MOV    @LOC, #1
7              .else
8                  MOV    @LOC, #N
9
10
11             .eval N-1, N
12             fact1
13
14             .endif
15             .endm
16
17         fact1 .macro
18             .if N > 1
19                 MOV    @T, @LOC
20                 MPYB  @P, @T, #N
21                 MOV    @LOC, @P
22                 MOV    ACC, @LOC
23                 .eval N - 1, N
24             fact1
25
26             .endif
27             .endm
  
```

## 5.10 Macro Directives Summary

The directives listed in [Table 5-2](#) through [Table 5-6](#) can be used with macros. The `.macro`, `.mexit`, `.endm` and `.var` directives are valid only with macros; the remaining directives are general assembly language directives.

**Table 5-2. Creating Macros**

| Mnemonic and Syntax                                                                                 | Description                                   | See                         |                             |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------|-----------------------------|-----------------------------|
|                                                                                                     |                                               | Macro Use                   | Directive                   |
| <code>.endm</code>                                                                                  | End macro definition                          | <a href="#">Section 5.2</a> | <code>.endm</code>          |
| <code>macname .macro</code> [ <i>parameter<sub>1</sub></i> ][ <i>,... , parameter<sub>n</sub></i> ] | Define macro by <i>macname</i>                | <a href="#">Section 5.2</a> | <code>.macro</code>         |
| <code>.mexit</code>                                                                                 | Go to <code>.endm</code>                      | <a href="#">Section 5.2</a> | <a href="#">Section 5.2</a> |
| <code>.mlib filename</code>                                                                         | Identify library containing macro definitions | <a href="#">Section 5.4</a> | <code>.mlib</code>          |

**Table 5-3. Manipulating Substitution Symbols**

| Mnemonic and Syntax                                                                                | Description                                        | See                           |                    |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------|-------------------------------|--------------------|
|                                                                                                    |                                                    | Macro Use                     | Directive          |
| <code>.asg</code> [" <i>character string</i> "], <i>substitution symbol</i>                        | Assign character string to substitution symbol     | <a href="#">Section 5.3.1</a> | <code>.asg</code>  |
| <code>.eval</code> <i>well-defined expression, substitution symbol</i>                             | Perform arithmetic on numeric substitution symbols | <a href="#">Section 5.3.1</a> | <code>.eval</code> |
| <code>.var</code> <i>sym<sub>1</sub></i> [, <i>sym<sub>2</sub></i> , ..., <i>sym<sub>n</sub></i> ] | Define local macro symbols                         | <a href="#">Section 5.3.6</a> | <code>.var</code>  |

**Table 5-4. Conditional Assembly**

| Mnemonic and Syntax                                    | Description                         | See                         |                       |
|--------------------------------------------------------|-------------------------------------|-----------------------------|-----------------------|
|                                                        |                                     | Macro Use                   | Directive             |
| <code>.break</code> [ <i>well-defined expression</i> ] | Optional repeatable block assembly  | <a href="#">Section 5.5</a> | <code>.break</code>   |
| <code>.endif</code>                                    | End conditional assembly            | <a href="#">Section 5.5</a> | <code>.endif</code>   |
| <code>.endloop</code>                                  | End repeatable block assembly       | <a href="#">Section 5.5</a> | <code>.endloop</code> |
| <code>.else</code>                                     | Optional conditional assembly block | <a href="#">Section 5.5</a> | <code>.else</code>    |
| <code>.elseif</code> <i>well-defined expression</i>    | Optional conditional assembly block | <a href="#">Section 5.5</a> | <code>.elseif</code>  |
| <code>.if</code> <i>well-defined expression</i>        | Begin conditional assembly          | <a href="#">Section 5.5</a> | <code>.if</code>      |
| <code>.loop</code> [ <i>well-defined expression</i> ]  | Begin repeatable block assembly     | <a href="#">Section 5.5</a> | <code>.loop</code>    |

**Table 5-5. Producing Assembly-Time Messages**

| Mnemonic and Syntax | Description                                   | See                         |                    |
|---------------------|-----------------------------------------------|-----------------------------|--------------------|
|                     |                                               | Macro Use                   | Directive          |
| <code>.emsg</code>  | Send error message to standard output         | <a href="#">Section 5.7</a> | <code>.emsg</code> |
| <code>.mmsg</code>  | Send assembly-time message to standard output | <a href="#">Section 5.7</a> | <code>.mmsg</code> |
| <code>.wmsg</code>  | Send warning message to standard output       | <a href="#">Section 5.7</a> | <code>.wmsg</code> |

**Table 5-6. Formatting the Listing**

| Mnemonic and Syntax    | Description                                             | See                         |                        |
|------------------------|---------------------------------------------------------|-----------------------------|------------------------|
|                        |                                                         | Macro Use                   | Directive              |
| <code>.fclist</code>   | Allow false conditional code block listing (default)    | <a href="#">Section 5.8</a> | <code>.fclist</code>   |
| <code>.fcnolist</code> | Suppress false conditional code block listing           | <a href="#">Section 5.8</a> | <code>.fcnolist</code> |
| <code>.mlist</code>    | Allow macro listings (default)                          | <a href="#">Section 5.8</a> | <code>.mlist</code>    |
| <code>.mno list</code> | Suppress macro listings                                 | <a href="#">Section 5.8</a> | <code>.mno list</code> |
| <code>.sslist</code>   | Allow expanded substitution symbol listing              | <a href="#">Section 5.8</a> | <code>.sslist</code>   |
| <code>.ssnolist</code> | Suppress expanded substitution symbol listing (default) | <a href="#">Section 5.8</a> | <code>.ssnolist</code> |

## Archiver Description

---

---

The TMS320C28x archiver lets you combine several individual files into a single archive file. For example, you can collect several macros into a macro library. The assembler searches the library and uses the members that are called as macros by the source file. You can also use the archiver to collect a group of object files into an object library. The linker includes in the library the members that resolve external references during the link. The archiver allows you to modify a library by deleting, replacing, extracting, or adding members.

| Topic                                                                 | Page       |
|-----------------------------------------------------------------------|------------|
| <b>6.1 Archiver Overview .....</b>                                    | <b>152</b> |
| <b>6.2 The Archiver's Role in the Software Development Flow .....</b> | <b>153</b> |
| <b>6.3 Invoking the Archiver .....</b>                                | <b>154</b> |
| <b>6.4 Archiver Examples .....</b>                                    | <b>155</b> |
| <b>6.5 Library Information Archiver Description .....</b>             | <b>157</b> |

## 6.1 Archiver Overview

You can build libraries from any type of files. Both the assembler and the linker accept archive libraries as input; the assembler can use libraries that contain individual source files, and the linker can use libraries that contain individual object files.

One of the most useful applications of the archiver is building libraries of object modules. For example, you can write several arithmetic routines, assemble them, and use the archiver to collect the object files into a single, logical group. You can then specify the object library as linker input. The linker searches the library and includes members that resolve external references.


You can also use the archiver to build macro libraries. You can create several source files, each of which contains a single macro, and use the archiver to collect these macros into a single, functional group. You can use the `.mlib` directive during assembly to specify that macro library to be searched for the macros that you call. [Chapter 5](#) discusses macros and macro libraries in detail, while this chapter explains how to use the archiver to build libraries.



## 6.2 The Archiver's Role in the Software Development Flow

Figure 6-1 shows the archiver's role in the software development process. The shaded portion highlights the most common archiver development path. Both the assembler and the linker accept libraries as input.

Figure 6-1. The Archiver in the TMS320C28x Software Development Flow

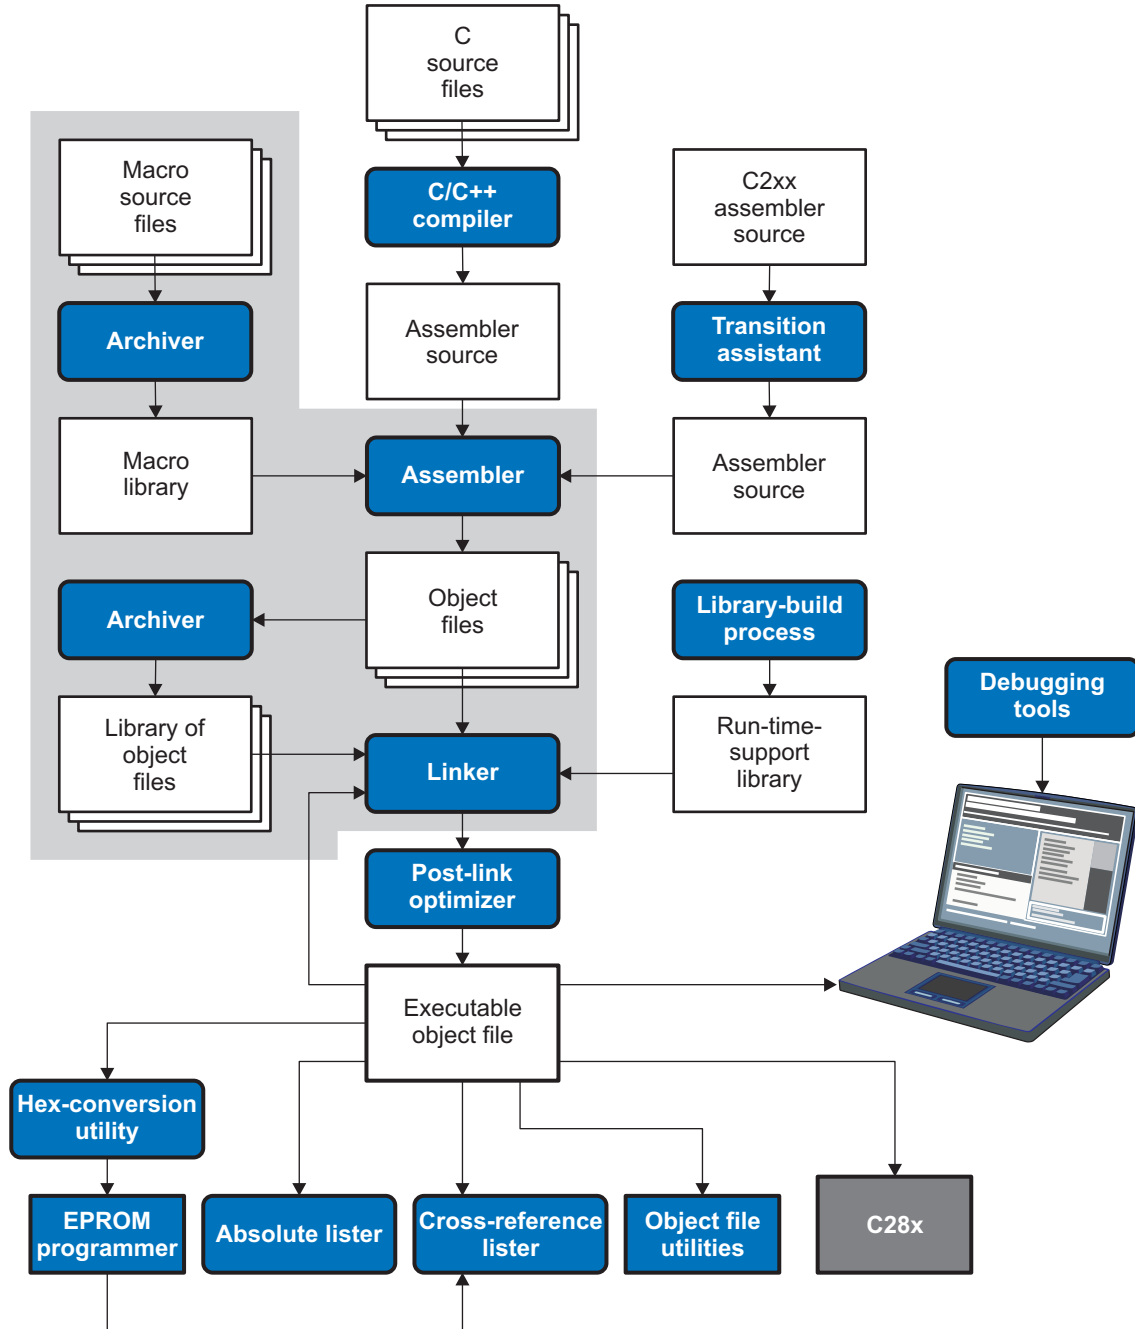

### 6.3 Invoking the Archiver

To invoke the archiver, enter:

```
ar2000 [-]command [options] libname [filename1 ... filenamen ]
```

|               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ar2000</b> | is the command that invokes the archiver.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| [-]command    | tells the archiver how to manipulate the existing library members and any specified. A command can be preceded by an optional hyphen. You must use one of the following commands when you invoke the archiver, but you can use only one command per invocation. The archiver commands are as follows: <ul style="list-style-type: none"> <li><b>@</b> uses the contents of the specified file instead of command line entries. You can use this command to avoid limitations on command line length imposed by the host operating system. Use a ; at the beginning of a line in the command file to include comments. (See <a href="#">Example 6-1</a> for an example using an archiver command file.)</li> <li><b>a</b> adds the specified files to the library. This command does not replace an existing member that has the same name as an added file; it simply <i>appends</i> new members to the end of the archive.</li> <li><b>d</b> deletes the specified members from the library.</li> <li><b>r</b> replaces the specified members in the library. If you do not specify filenames, the archiver replaces the library members with files of the same name in the current directory. If the specified file is not found in the library, the archiver adds it instead of replacing it.</li> <li><b>t</b> prints a table of contents of the library. If you specify filenames, only those files are listed. If you do not specify any filenames, the archiver lists all the members in the specified library.</li> <li><b>x</b> extracts the specified files. If you do not specify member names, the archiver extracts all library members. When the archiver extracts a member, it simply copies the member into the current directory; it <i>does not</i> remove it from the library.</li> </ul> |
| options       | In addition to one of the <i>commands</i> , you can specify options. To use options, combine them with a command; for example, to use the a command and the s option, enter -as or as. The hyphen is optional for archiver options only. These are the archiver options: <ul style="list-style-type: none"> <li><b>-q</b> (quiet) suppresses the banner and status messages.</li> <li><b>-s</b> prints a list of the global symbols that are defined in the library. (This option is valid only with the a, r, and d commands.)</li> <li><b>-u</b> replaces library members only if the replacement has a more recent modification date. You must use the r command with the -u option to specify which members to replace.</li> <li><b>-v</b> (verbose) provides a file-by-file description of the creation of a new library from an old library and its members.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| libname       | names the archive library to be built or modified. If you do not specify an extension for <i>libname</i> , the archiver uses the default extension <i>.lib</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| filenames     | names individual files to be manipulated. These files can be existing library members or new files to be added to the library. When you enter a filename, you must enter a complete filename including extension, if applicable.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

---

#### Naming Library Members

**NOTE:** It is possible (but not desirable) for a library to contain several members with the same name. If you attempt to delete, replace, or extract a member whose name is the same as another library member, the archiver deletes, replaces, or extracts the first library member with that name.

---

## 6.4 Archiver Examples

The following are examples of typical archiver operations:

- If you want to create a library called `function.lib` that contains the files `sine.obj`, `cos.obj`, and `flt.obj`, enter:

```
ar2000 -a function sine.obj cos.obj flt.obj
```

The archiver responds as follows:

```
==> new archive 'function.lib' ==> building new archive 'function.lib'
```

- You can print a table of contents of `function.lib` with the `-t` command, enter:

```
ar2000 -t function
```

The archiver responds as follows:

| FILE NAME | SIZE | DATE                     |
|-----------|------|--------------------------|
| sine.obj  | 300  | Wed Jun 14 10:00:24 2006 |
| cos.obj   | 300  | Wed Jun 14 10:00:30 2006 |
| flt.obj   | 300  | Wed Jun 14 09:59:56 2006 |

- If you want to add new members to the library, enter:

```
ar2000 -as function atan.obj
```

The archiver responds as follows:

```
==> symbol defined: '_sin'
==> symbol defined: '_cos'
==> symbol defined: '_tan'
==> symbol defined: '_atan'
==> building archive 'function.lib'
```

Because this example does not specify an extension for the libname, the archiver adds the files to the library called `function.lib`. If `function.lib` does not exist, the archiver creates it. (The `-s` option tells the archiver to list the global symbols that are defined in the library.)

- If you want to modify a library member, you can extract it, edit it, and replace it. In this example, assume there is a library named `macros.lib` that contains the members `push.asm`, `pop.asm`, and `swap.asm`.

```
ar2000 -x macros push.asm
```

The archiver makes a copy of `push.asm` and places it in the current directory; it does not remove `push.asm` from the library. Now you can edit the extracted file. To replace the copy of `push.asm` in the library with the edited copy, enter:

```
ar2000 -r macros push.asm
```

- If you want to use a command file, specify the command filename after the `-@` command. For example:

```
ar2000 -@modules.cmd
```

The archiver responds as follows:

```
==> building archive 'modules.lib'
```

**Example 6-1** is the `modules.cmd` command file. The `r` command specifies that the filenames given in the command file replace files of the same name in the `modules.lib` library. The `-u` option specifies that these files are replaced only when the current file has a more recent revision date than the file that is in the library.

**Example 6-1. Archiver Command File**

```
; Command file to replace members of the
;   modules library with updated files
; Use r command and u option:
ru
; Specify library name:
modules.lib
; List filenames to be replaced if updated:
align.asm
bss.asm
data.asm
text.asm
sect.asm
clink.asm
copy.asm
double.asm
drnolist.asm
emsg.asm
end.asm
```

## 6.5 Library Information Archiver Description

[Section 6.1](#) explains how to use the archiver to create libraries of object files for use in the linker of one or more applications. You can have multiple versions of the same object file libraries, each built with different sets of build options. For example, you might have different versions of your object file library for big and little endian, for different architecture revisions, or for different ABIs depending on the typical build environments of client applications. Unfortunately, if there are several different versions of your library it can become cumbersome to keep track of which version of the library needs to be linked in for a particular application.

When several versions of a single library are available, the library information archiver can be used to create an index library of all of the object file library versions. This index library is used in the linker in place of a particular version of your object file library. The linker looks at the build options of the application being linked, and uses the specified index library to determine which version of your object file library to include in the linker. If one or more compatible libraries were found in the index library, the most suitable compatible library is linked in for your application.

### 6.5.1 Invoking the Library Information Archiver

To invoke the library information archiver, enter:

```
libinfo2000 [options] -o=libname libname1 [libname2 ... libnamen]
```

**libinfo2000** is the command that invokes the library information archiver.

*options* changes the default behavior of the library information archiver. These options are:

- o libname** specifies the name of the index library to create or update. This option is required.
- u** updates any existing information in the index library specified with the -o option instead of creating a new index.

*libnames* names individual object file libraries to be manipulated. When you enter a libname, you must enter a complete filename including extension, if applicable.

### 6.5.2 Library Information Archiver Example

Consider these object file libraries that all have the same members, but are built with different build options:

| Object File Library Name | Build Options                                    |
|--------------------------|--------------------------------------------------|
| mylib_2800.lib           | -v28 (or --silicon_version=28)                   |
| mylib_2800_fpu32.lib     | -v28 --float_support=fpu32                       |
| mylib_2800_ml.lib        | -v28 -ml (or --silicon_version=28 --large_model) |

Using the library information archiver, you can create an index library called mylib.lib from the above libraries:

```
libinfo2000 -o mylib.lib mylib_2800.lib mylib_2800_fpu32.lib mylib_2800_ml.lib
```

You can now specify mylib.lib as a library for the linker of an application. The linker uses the index library to choose the appropriate version of the library to use. If the --issue\_remarks option is specified before the --run\_linker option, the linker reports which library was chosen.

- **Example 1 (ISA C28x, small memory model):**

```
c12000 -v28 --issue_remarks main.c -z -l lnk.cmd ./mylib.lib
<Linking>
remark: linking in "mylib_2800.lib" in place of "mylib.lib"
```

- **Example 2 (ISA C28x with FPU32 support):**

```
c12000 -v28 --float_support=fpu32 --issue_remarks main.c -z -l lnk.cmd ./mylib.lib
<Linking>
remark: linking in "mylib_2800_fpu32.lib" in place of "mylib.lib"
```

### 6.5.3 Listing the Contents of an Index Library

The archiver's `-t` option can be used on an index library to list the archives indexed by an index library:

The indexed object file libraries have an additional `.libinfo` extension in the archiver listing. The `__TI_$$LIBINFO` member is a special member that designates `mylib.lib` as an index library, rather than a regular library.

If the archiver's `-d` command is used on an index library to delete a `.libinfo` member, the linker will no longer choose the corresponding library when the index library is specified.

Using any other archiver option with an index library, or using `-d` to remove the `__TI_$$LIBINFO` member, results in undefined behavior, and is not supported.

### 6.5.4 Requirements

You must follow these requirements to use library index files:

- At least one of the application's object files must appear on the linker command line before the index library.
- Each object file library specified as input to the library information archiver must only contain object file members that are built with the same build options.
- The linker expects the index library and all of the libraries it indexes to be in a single directory.

## *Linker Description*

The TMS320C28x linker creates executable modules by combining object modules. This chapter describes the linker options, directives, and statements used to create executable modules. Object libraries, command files, and other key concepts are discussed as well.

The concept of sections is basic to linker operation; [Chapter 2](#) discusses the object module sections in detail.

| Topic                                                               | Page       |
|---------------------------------------------------------------------|------------|
| <b>7.1 Linker Overview</b> .....                                    | <b>160</b> |
| <b>7.2 The Linker's Role in the Software Development Flow</b> ..... | <b>161</b> |
| <b>7.3 Invoking the Linker</b> .....                                | <b>162</b> |
| <b>7.4 Linker Options</b> .....                                     | <b>163</b> |
| <b>7.5 Linker Command Files</b> .....                               | <b>179</b> |
| <b>7.6 Object Libraries</b> .....                                   | <b>216</b> |
| <b>7.7 Default Allocation Algorithm</b> .....                       | <b>217</b> |
| <b>7.8 Linker-Generated Copy Tables</b> .....                       | <b>218</b> |
| <b>7.9 Linker-Generated CRC Tables</b> .....                        | <b>227</b> |
| <b>7.10 Partial (Incremental) Linking</b> .....                     | <b>233</b> |
| <b>7.11 Linking C/C++ Code</b> .....                                | <b>234</b> |
| <b>7.12 Linker Example</b> .....                                    | <b>237</b> |

## 7.1 Linker Overview

The TMS320C28x linker allows you to configure system memory by allocating output sections efficiently into the memory map. As the linker combines object files, it performs the following tasks:

- Allocates sections into the target system's configured memory
- Relocates symbols and sections to assign them to final addresses
- Resolves undefined external references between input files

The linker command language controls memory configuration, output section definition, and address binding. The language supports expression assignment and evaluation. You configure system memory by defining and creating a memory model that you design. Two powerful directives, MEMORY and SECTIONS, allow you to:


- Allocate sections into specific areas of memory
- Combine object file sections
- Define or redefine global symbols at link time



## 7.2 The Linker's Role in the Software Development Flow

Figure 7-1 illustrates the linker's role in the software development process. The linker accepts several types of files as input, including object files, command files, libraries, and partially linked files. The linker creates an executable object module that can be downloaded to one of several development tools or executed by a TMS320C28x device.

Figure 7-1. The Linker in the TMS320C28x Software Development Flow

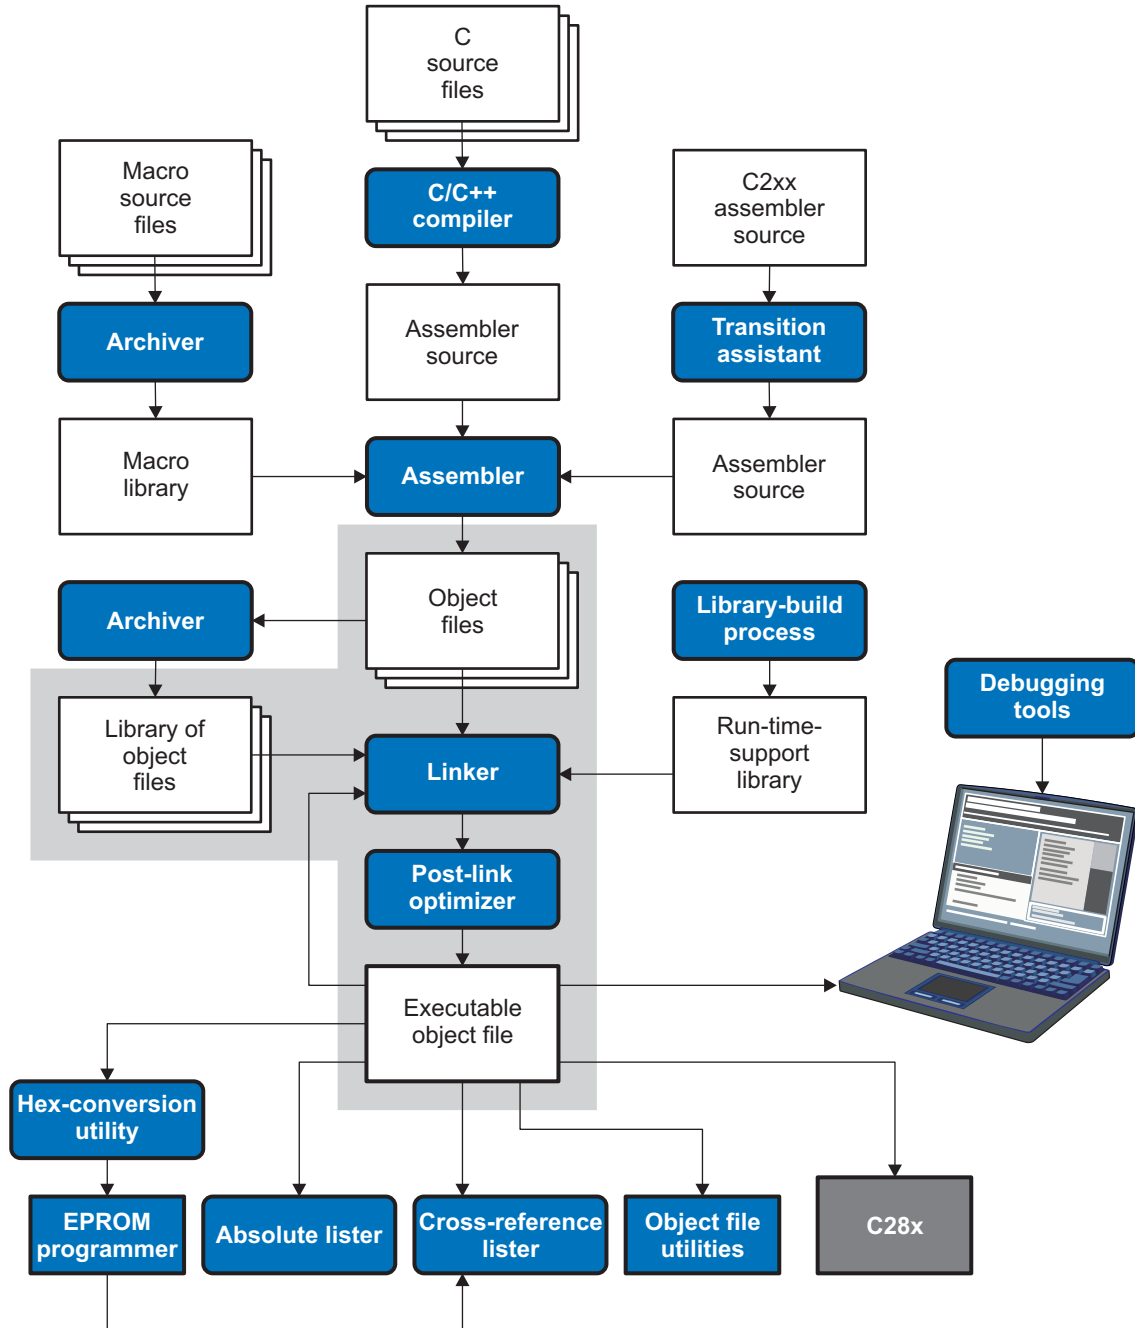

### 7.3 Invoking the Linker

The general syntax for invoking the linker is:

```
cl2000 -v28 --run_linker [options] filename1 .... filenamen
```

**cl2000 -v28 --run\_linker** is the command that invokes the linker. The `--run_linker` option's short form is `-Z`.

*options* can appear anywhere on the command line or in a link command file. (Options are discussed in [Section 7.4](#).)

*filename*<sub>1</sub>, *filename*<sub>n</sub> can be object files, link command files, or archive libraries. The default extension for all input files is `.obj`; any other extension must be explicitly specified. The linker can determine whether the input file is an object or ASCII file that contains linker commands. The default output filename is `a.out`, unless you use the `--output_file` option to name the output file.

There are two methods for invoking the linker:

- Specify options and filenames on the command line. This example links two files, `file1.obj` and `file2.obj`, and creates an output module named `link.out`.

```
cl2000 -v28 --run_linker file1.obj file2.obj --output_file=link.out
```

- Put filenames and options in a link command file. Filenames that are specified inside a link command file must begin with a letter. For example, assume the file `linker.cmd` contains the following lines:

```
--output_file=link.out file1.obj file2.obj
```

Now you can invoke the linker from the command line; specify the command filename as an input file:

```
cl2000 -v28 --run_linker linker.cmd
```

When you use a command file, you can also specify other options and files on the command line. For example, you could enter:

```
cl2000 -v28 --run_linker --map_file=link.map linker.cmd file3.obj
```

The linker reads and processes a command file as soon as it encounters the filename on the command line, so it links the files in this order: `file1.obj`, `file2.obj`, and `file3.obj`. This example creates an output file called `link.out` and a map file called `link.map`.

For information on invoking the linker for C/C++ files, see [Section 7.11](#).

## 7.4 Linker Options

Linker options control linking operations. They can be placed on the command line or in a command file. Linker options must be preceded by a hyphen (-). Options can be separated from arguments (if they have them) by an optional space. [Table 7-1](#) summarizes the linker options.

**Table 7-1. Basic Options Summary**

| Option        | Alias  | Description                                                                                                                                               | Section                        |
|---------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| --output_file | -o     | Names the executable output module. The default filename is a.out.                                                                                        | <a href="#">Section 7.4.21</a> |
| --map_file    | -m     | Produces a map or listing of the input and output sections, including holes, and places the listing in <i>filename</i>                                    | <a href="#">Section 7.4.16</a> |
| --heap_size   | -heap  | Sets heap size (for the dynamic memory allocation in C) to <i>size</i> words and defines a global symbol that specifies the heap size. Default = 1K words | <a href="#">Section 7.4.12</a> |
| --stack_size  | -stack | Sets C system stack size to <i>size</i> words and defines a global symbol that specifies the stack size. Default = 1K words                               | <a href="#">Section 7.4.25</a> |

**Table 7-2. Command File Preprocessing Options Summary**

| Option       | Alias | Description                                     | Section                       |
|--------------|-------|-------------------------------------------------|-------------------------------|
| --define     |       | Predefines <i>name</i> as a preprocessor macro. | <a href="#">Section 7.4.7</a> |
| --undefine   |       | Removes the preprocessor macro <i>name</i> .    | <a href="#">Section 7.4.7</a> |
| --disable_pp |       | Disables preprocessing for command files        | <a href="#">Section 7.4.7</a> |

**Table 7-3. Diagnostic Options Summary**

| Option                 | Alias | Description                                                                                                         | Section                        |
|------------------------|-------|---------------------------------------------------------------------------------------------------------------------|--------------------------------|
| --diag_error           |       | Categorizes the diagnostic identified by <i>num</i> as an error                                                     | <a href="#">Section 7.4.4</a>  |
| --diag_remark          |       | Categorizes the diagnostic identified by <i>num</i> as a remark                                                     | <a href="#">Section 7.4.4</a>  |
| --diag_suppress        |       | Suppresses the diagnostic identified by <i>num</i>                                                                  | <a href="#">Section 7.4.4</a>  |
| --diag_warning         |       | Categorizes the diagnostic identified by <i>num</i> as a warning                                                    | <a href="#">Section 7.4.4</a>  |
| --display_error_number |       | Displays a diagnostic's identifiers along with its text                                                             | <a href="#">Section 7.4.4</a>  |
| --issue_remarks        |       | Issues remarks (nonserious warnings)                                                                                | <a href="#">Section 7.4.4</a>  |
| --no_demangle          |       | Disables demangling of symbol names in diagnostics                                                                  | <a href="#">Section 7.4.18</a> |
| --no_warnings          |       | Suppresses warning diagnostics (errors are still issued)                                                            | <a href="#">Section 7.4.4</a>  |
| --set_error_limit      |       | Sets the error limit to <i>num</i> . The linker abandons linking after this number of errors. (The default is 100.) | <a href="#">Section 7.4.4</a>  |
| --verbose_diagnostics  |       | Provides verbose diagnostics that display the original source with line-wrap                                        | <a href="#">Section 7.4.4</a>  |
| --warn_sections        | -w    | Displays a message when an undefined output section is created                                                      | <a href="#">Section 7.4.29</a> |

**Table 7-4. File Search Path Options Summary**

| Option             | Alias     | Description                                                                                                                                                                     | Section                          |
|--------------------|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| --library          | -l        | Names an archive library or link command <i>filename</i> as linker input                                                                                                        | <a href="#">Section 7.4.14</a>   |
| --search_path      | -I        | Alters library-search algorithms to look in a directory named with <i>pathname</i> before looking in the default location. This option must appear before the --library option. | <a href="#">Section 7.4.14.1</a> |
| --disable_auto_rts |           | Disables the automatic selection of a run-time-support library                                                                                                                  | <a href="#">Section 7.4.5</a>    |
| --priority         | -priority | Satisfies unresolved references by the first library that contains a definition for that symbol                                                                                 | <a href="#">Section 7.4.14.3</a> |
| --reread_libs      | -x        | Forces rereading of libraries, which resolves back references                                                                                                                   | <a href="#">Section 7.4.14.3</a> |

**Table 7-5. Linker Output Options Summary**

| Option                     | Alias | Description                                                                                                                                                                  | Section                         |
|----------------------------|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| --output_file              | -o    | Names the executable output module. The default filename is a.out.                                                                                                           | <a href="#">Section 7.4.21</a>  |
| --map_file                 | -m    | Produces a map or listing of the input and output sections, including holes, and places the listing in <i>filename</i>                                                       | <a href="#">Section 7.4.16</a>  |
| --absolute_exe             | -a    | Produces an absolute, executable module. This is the default; if neither --absolute_exe nor --relocatable is specified, the linker acts as if --absolute_exe were specified. | <a href="#">Section 7.4.2.1</a> |
| --generate_dead_funcs_list |       | Writes a list of the dead functions that were removed by the linker to file <i>fname</i> .                                                                                   | <a href="#">Section 7.4.11</a>  |
| --mapfile_contents         |       | Controls the information that appears in the map file.                                                                                                                       | <a href="#">Section 7.4.17</a>  |
| --relocatable              | -r    | Produces a nonexecutable, relocatable output module                                                                                                                          | <a href="#">Section 7.4.2.2</a> |
| --run_abs                  | -abs  | Produces an absolute listing file                                                                                                                                            | <a href="#">Section 7.4.23</a>  |
| --xml_link_info            |       | Generates a well-formed XML <i>file</i> containing detailed information about the result of a link                                                                           | <a href="#">Section 7.4.30</a>  |

**Table 7-6. Symbol Management Options Summary**

| Option           | Alias     | Description                                                                          | Section                          |
|------------------|-----------|--------------------------------------------------------------------------------------|----------------------------------|
| --entry_point    | -e        | Defines a global symbol that specifies the primary entry point for the output module | <a href="#">Section 7.4.8</a>    |
| --globalize      |           | Changes the symbol linkage to global for symbols that match <i>pattern</i>           | <a href="#">Section 7.4.15</a>   |
| --hide           |           | Hides global symbols that match <i>pattern</i>                                       | <a href="#">Section 7.4.13</a>   |
| --localize       |           | Changes the symbol linkage to local for symbols that match <i>pattern</i>            | <a href="#">Section 7.4.15</a>   |
| --make_global    | -g        | Makes <i>symbol</i> global (overrides -h)                                            | <a href="#">Section 7.4.15.2</a> |
| --make_static    | -h        | Makes all global symbols static                                                      | <a href="#">Section 7.4.15.1</a> |
| --no_sym_merge   | -b        | Disables merge of symbolic debugging information in COFF object files                | <a href="#">Section 7.4.19</a>   |
| --no_sym_table   | -s        | Strips symbol table information and line number entries from the output module       | <a href="#">Section 7.4.20</a>   |
| --scan_libraries | -scanlibs | Scans all libraries for duplicate symbol definitions                                 | <a href="#">Section 7.4.24</a>   |
| --symbol_map     |           | Maps symbol references to a symbol definition of a different name                    | <a href="#">Section 7.4.27</a>   |
| --undef_sym      | -u        | Places an unresolved external <i>symbol</i> into the output module's symbol table    | <a href="#">Section 7.4.28</a>   |
| --unhide         |           | Reveals (un-hides) global symbols that match <i>pattern</i>                          | <a href="#">Section 7.4.13</a>   |

**Table 7-7. Run-Time Environment Options Summary**

| Option       | Alias    | Description                                                                                                                                               | Section                        |
|--------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| --heap_size  | -heap    | Sets heap size (for the dynamic memory allocation in C) to <i>size</i> words and defines a global symbol that specifies the heap size. Default = 1K words | <a href="#">Section 7.4.12</a> |
| --stack_size | -stack   | Sets C system stack size to <i>size</i> words and defines a global symbol that specifies the stack size. Default = 1K words                               | <a href="#">Section 7.4.25</a> |
| --arg_size   | --args   | Allocates memory to be used by the loader to pass arguments                                                                                               | <a href="#">Section 7.4.3</a>  |
| --farheap    | -farheap | Sets far heap size (words).                                                                                                                               | <a href="#">Section 7.4.9</a>  |
| --fill_value | -f       | Sets default fill values for holes within output sections; <i>fill_value</i> is a 32-bit constant                                                         | <a href="#">Section 7.4.10</a> |
| --ram_model  | -cr      | Initializes variables at load time                                                                                                                        | <a href="#">Section 7.4.22</a> |
| --rom_model  | -c       | Autoinitializes variables at run time                                                                                                                     | <a href="#">Section 7.4.22</a> |

**Table 7-8. Link-Time Optimization Options Summary**

| Option                     | Alias  | Description                                      | Section             |
|----------------------------|--------|--------------------------------------------------|---------------------|
| --no_postlink_across_calls | -nf    | Disable post-link optimizations across functions | Note <sup>(1)</sup> |
| --postlink_exclude         | -ex    | Exclude files from post-link pass                | Note <sup>(1)</sup> |
| --postlink_opt             | -plink | Post-link optimizations (only after -z)          | Note <sup>(1)</sup> |

<sup>(1)</sup> For more information, refer to the *Post-Link Optimizer* chapter in the *TMS320C28x Optimizing C/C++ Compiler v6.0 User's Guide*.

**Table 7-9. Miscellaneous Options Summary**

| Option                 | Alias | Description                                                                          | Section                        |
|------------------------|-------|--------------------------------------------------------------------------------------|--------------------------------|
| --disable_clink        | -j    | Disables conditional linking of COFF object modules                                  | <a href="#">Section 7.4.6</a>  |
| --linker_help          | -help | Displays information about syntax and available options                              | –                              |
| --preferred_order      |       | Prioritizes placement of functions                                                   |                                |
| --strict_compatibility |       | Performs more conservative and rigorous compatibility checking of input object files | <a href="#">Section 7.4.26</a> |

### 7.4.1 Wild Cards in File, Section, and Symbol Patterns

The linker allows file, section, and symbol names to be specified using the asterisk (\*) and question mark (?) wild cards. Using \* matches any number of characters and using ? matches a single character. Using wild cards can make it easier to handle related objects, provided they follow a suitable naming convention.

For example:

```
mp3*.obj /* matches anything .obj that begins with mp3 */
task?.o* /* matches task1.obj, task2.obj, taskX.o55, etc. */
```

```
SECTIONS
{
    .fast_code: { *.obj(*fast*) } > FAST_MEM
    .vectors : { vectors.obj(.vector:part1:*) > 0xFFFFF00
    .str_code : { rts*.lib<str*.obj>(.text) } > S1ROM
}
```

### 7.4.2 Relocation Capabilities (--absolute\_exe and --relocatable Options)

The linker performs relocation, which is the process of adjusting all references to a symbol when the symbol's address changes. The linker supports two options (--absolute\_exe and --relocatable) that allow you to produce an absolute or a relocatable output module. The linker also supports a third option (-ar) that allows you to produce an executable, relocatable output module.

When the linker encounters a file that contains no relocation or symbol table information, it issues a warning message (but continues executing). Relinking an absolute file can be successful only if each input file contains no information that needs to be relocated (that is, each file has no unresolved references and is bound to the same virtual address that it was bound to when the linker created it).

#### 7.4.2.1 Producing an Absolute Output Module (--absolute\_exe option)

When you use the --absolute\_exe option without the --relocatable option, the linker produces an *absolute, executable* output module. Absolute files contain *no* relocation information. Executable files contain the following:

- Special symbols defined by the linker (see [Section 7.5.9.4](#))
- An optional header that describes information such as the program entry point
- No unresolved references

The following example links file1.obj and file2.obj and creates an absolute output module called a.out:

```
c12000 -v28 --run_linker --absolute_exe file1.obj file2.obj
```

---

#### The --absolute\_exe and --relocatable Options

**NOTE:** If you do not use the --absolute\_exe or the --relocatable option, the linker acts as if you specified --absolute\_exe.

---

### 7.4.2.2 Producing a Relocatable Output Module (--relocatable option)

When you use the `-ar` option, the linker retains relocation entries in the output module. If the output module is relocated (at load time) or relinked (by another linker execution), use `--relocatable` to retain the relocation entries.

The linker produces a file that is not executable when you use the `--relocatable` option without the `--absolute_exe` option. A file that is not executable does not contain special linker symbols or an optional header. The file can contain unresolved references, but these references do not prevent creation of an output module.

This example links `file1.obj` and `file2.obj` and creates a relocatable output module called `a.out`:

```
cl2000 -v28 --run_linker --relocatable file1.obj file2.obj
```

The output file `a.out` can be relinked with other object files or relocated at load time. (Linking a file that will be relinked with other files is called partial linking. For more information, see [Section 7.10](#).)

### 7.4.2.3 Producing an Executable, Relocatable Output Module (-ar Option)

If you invoke the linker with both the `--absolute_exe` and `--relocatable` options, the linker produces an *executable, relocatable* object module. The output file contains the special linker symbols, an optional header, and all resolved symbol references; however, the relocation information is retained.

This example links `file1.obj` and `file2.obj` and creates an executable, relocatable output module called `xr.out`:

```
cl2000 -v28 --run_linker -ar file1.obj file2.obj --output_file=xr.out
```

### 7.4.3 Allocate Memory for Use by the Loader to Pass Arguments (--arg\_size Option)

The `--arg_size` option instructs the linker to allocate memory to be used by the loader to pass arguments from the command line of the loader to the program. The syntax of the `--arg_size` option is:

**--arg\_size= size**

The *size* is a number representing the number of bytes to be allocated in target memory for command-line arguments.

By default, the linker creates the `__c_args__` symbol and sets it to `-1`. When you specify `--arg_size=size`, the following occur:

- The linker creates an uninitialized section named `.args` of *size* bytes.
- The `__c_args__` symbol contains the address of the `.args` section.

The loader and the target boot code use the `.args` section and the `__c_args__` symbol to determine whether and how to pass arguments from the host to the target program. See the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for information about the loader.

### 7.4.4 Control Linker Diagnostics

The linker uses certain C/C++ compiler options to control linker-generated diagnostics. The diagnostic options must be specified before the `--run_linker` option.

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>--diag_error=num</b>       | Categorizes the diagnostic identified by <i>num</i> as an error. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_error=num</code> to recategorize the diagnostic as an error. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                              |
| <b>--diag_remark=num</b>      | Categorizes the diagnostic identified by <i>num</i> as a remark. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_remark=num</code> to recategorize the diagnostic as a remark. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                             |
| <b>--diag_suppress=num</b>    | Suppresses the diagnostic identified by <i>num</i> . To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_suppress=num</code> to suppress the diagnostic. You can only suppress discretionary diagnostics.                                                                                                                                                                                                                                                                                                                                                    |
| <b>--diag_warning=num</b>     | Categorizes the diagnostic identified by <i>num</i> as a warning. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_warning=num</code> to recategorize the diagnostic as a warning. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                          |
| <b>--display_error_number</b> | Displays a diagnostic's numeric identifier along with its text. Use this option in determining which arguments you need to supply to the diagnostic suppression options ( <code>--diag_suppress</code> , <code>--diag_error</code> , <code>--diag_remark</code> , and <code>--diag_warning</code> ). This option also indicates whether a diagnostic is discretionary. A discretionary diagnostic is one whose severity can be overridden. A discretionary diagnostic includes the suffix <code>-D</code> ; otherwise, no suffix is present. See the <i>TMS320C28x Optimizing C/C++ Compiler User's Guide</i> for more information on understanding diagnostic messages. |
| <b>--issue_remarks</b>        | Issues remarks (nonserious warnings), which are suppressed by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>--no_warnings</b>          | Suppresses warning diagnostics (errors are still issued).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>--set_error_limit=num</b>  | Sets the error limit to <i>num</i> , which can be any decimal value. The linker abandons linking after this number of errors. (The default is 100.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>--verbose_diagnostics</b>  | Provides verbose diagnostics that display the original source with line-wrap and indicate the position of the error in the source line                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### 7.4.5 Disable Automatic Library Selection (`--disable_auto_rts` Option)

The `--disable_auto_rts` option disables the automatic selection of a run-time-support library. See the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for details on the automatic selection process.

### 7.4.6 Disable Conditional Linking (`--disable_clink` Option)

The `--disable_clink` option disables removal of unreferenced sections in COFF object modules. Only sections marked as candidates for removal with the `.clink` assembler directive are affected by conditional linking. See [Conditionally Leave Section Out of Object Module Output](#) for details on setting up conditional linking using the `.clink` directive.

### 7.4.7 Link Command File Preprocessing (`--disable_pp`, `--define` and `--undefine` Options)

The linker preprocesses link command files using a standard C preprocessor. Therefore, the command files can contain well-known preprocessing directives such as `#define`, `#include`, and `#if / #endif`.

Three linker options control the preprocessor:

|                                  |                                                |
|----------------------------------|------------------------------------------------|
| <code>--disable_pp</code>        | Disables preprocessing for command files       |
| <code>--define=name[=val]</code> | Predefines <i>name</i> as a preprocessor macro |
| <code>--undefine=name</code>     | Removes the macro <i>name</i>                  |

The compiler has `--define` and `--undefine` options with the same meanings. However, the linker options are distinct; only `--define` and `--undefine` options specified after `--run_linker` are passed to the linker. For example:

```
cl2000 -v28 --define=FOO=1 main.c --run_linker --define=BAR=2 lnk.cmd
```

The linker sees only the `--define` for BAR; the compiler only sees the `--define` for FOO.

When one command file `#includes` another, preprocessing context is carried from parent to child in the usual way (that is, macros defined in the parent are visible in the child). However, when a command file is invoked other than through `#include`, either on the command line or by the typical way of being named in another command file, preprocessing context is **not** carried into the nested file. The exception to this is `--define` and `--undefine` options, which apply globally from the point they are encountered. For example:

```
--define GLOBAL
#define LOCAL

#include "incfile.cmd"      /* sees GLOBAL and LOCAL */
nestfile.cmd              /* only sees GLOBAL      */
```

Two cautions apply to the use of `--define` and `--undefine` in command files. First, they have global effect as mentioned above. Second, since they are not actually preprocessing directives themselves, they are subject to macro substitution, probably with unintended consequences. This effect can be defeated by quoting the symbol name. For example:

```
--define MYSYM=123
--undefine MYSYM      /* expands to --undefine 123 (!) */
--undefine "MYSYM"   /* ahh, that's better          */
```

The linker uses the same search paths to find `#include` files as it does to find libraries. That is, `#include` files are searched in the following places:

1. If the `#include` file name is in quotes (rather than `<brackets>`), in the directory of the current file
2. In the list of directories specified with `--library` options or environment variables (see [Section 7.4.14](#))

There are two exceptions: relative pathnames (such as `../name`) always search the current directory; and absolute pathnames (such as `/usr/tools/name`) bypass search paths entirely.

The linker has the standard built-in definitions for the macros `__FILE__`, `__DATE__`, and `__TIME__`. It does not, however, have the compiler-specific options for the target (`__TMS320C2800__`), version (`__TI_COMPILER_VERSION__`), run-time model, and so on.



### 7.4.8 Define an Entry Point (`--entry_point` Option)

The memory address at which a program begins executing is called the *entry point*. When a loader loads a program into target memory, the program counter (PC) must be initialized to the entry point; the PC then points to the beginning of the program.

The linker can assign one of four values to the entry point. These values are listed below in the order in which the linker tries to use them. If you use one of the first three values, it must be an external symbol in the symbol table.

- The value specified by the `--entry_point` option. The syntax is:  
**`--entry_point= global_symbol`**  
 where *global\_symbol* defines the entry point and must be defined as an external symbol of the input files. The external symbol name of C or C++ objects may be different than the name as declared in the source language; refer to the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.
- The value of symbol `_c_int00` (if present). The `_c_int00` symbol *must* be the entry point if you are linking code produced by the C compiler.
- The value of symbol `_main` (if present)
- 0 (default value)

This example links `file1.obj` and `file2.obj`. The symbol `begin` is the entry point; `begin` must be defined as external in `file1` or `file2`.

```
cl2000 -v28 --run_linker --entry_point=begin file1.obj file2.obj
```

### 7.4.9 Define Far Heap Size (`--farheap` Option)

The C/C++ compiler uses an uninitialized section called `.esysmem` for the far memory pool used by `far_malloc()`, `far_calloc()`, and `far_realloc()`. You can set the size of the far memory pool at link time by using the `--farheap` option. The syntax for the `--farheap` option is:

**`--farheap= size`**

The *size* must be a constant. This example defines a 4K byte heap:

```
cl2000 -v28 --run_linker --farheap=0x1000 /* defines a 4K heap (.esysmem section)*/
```

The linker creates the `.esysmem` section only if there is a `.esysmem` section in an input file.

The linker also creates a global symbol `__FAR_SYSMEM_SIZE` and assigns it a value equal to the size of the far heap. The default size is 1K words.

For more information about C/C++ linking, see [Section 7.11](#).

### 7.4.10 Set Default Fill Value (`--fill_value` Option)

The `--fill_value` option fills the holes formed within output sections. The syntax for the option is:

**`--fill_value= value`**

The argument *value* is a 32-bit constant (up to eight hexadecimal digits). If you do not use `--fill_value`, the linker uses 0 as the default fill value.

This example fills holes with the hexadecimal value `ABCDABCD`:

```
cl2000 -v28 --run_linker --fill_value=0xABCDABCD file1.obj file2.obj
```

### 7.4.11 Generate List of Dead Functions (`--generate_dead_funcs_list` Option)

The `--generate_dead_funcs_list` option creates a list of functions that are never referenced (dead) and writes the list to the specified file. If no filename is specified, the default filename `dead_funcs.xml` is used. The syntax for the option is:

**`--generate_dead_funcs_list=filename`**

Refer to the *TMS320C28x Optimizing C/C++ Compiler User's Guide* for details on the `--generate_dead_funcs_list` option.

### 7.4.12 Define Heap Size (`--heap_size` Option)

The C/C++ compiler uses an uninitialized section called `.system` for the C run-time memory pool used by `malloc()`. You can set the size of this memory pool at link time by using the `--heap_size` option. The syntax for the `--heap_size` option is:

**`--heap_size= size`**

The *size* must be a constant. This example defines a 4K word heap:

```
c12000 -v28 --run_linker --heap_size=0x1000 /* defines a 4k heap (.system section)*/
```

The linker creates the `.system` section only if there is a `.system` section in an input file.

The linker also creates a global symbol `__SYSTEM_SIZE` and assigns it a value equal to the size of the heap. The default size is 1K words.

For more information about C/C++ linking, see [Section 7.11](#).

### 7.4.13 Hiding Symbols

Symbol hiding prevents the symbol from being listed in the output file's symbol table. While localization is used to prevent name space clashes in a link unit, symbol hiding is used to obscure symbols which should not be visible outside a link unit. Such symbol's names appear only as empty strings or "no name" in object file readers. The linker supports symbol hiding through the `--hide` and `--unhide` options.

The syntax for these options are:

**`--hide=' pattern '`**

**`--unhide=' pattern '`**

The *pattern* is a string with optional wildcards `?` or `*`. Use `?` to match a single character and use `*` to match zero or more characters.

The `--hide` option hides global symbols which have a linkname matching the *pattern*. It hides the symbols matching the pattern by changing the name to an empty string. A global symbol which is hidden is also localized.

The `--unhide` option reveals (un-hides) global symbols that match the *pattern* that are hidden by the `--hide` option. The `--unhide` option excludes symbols that match pattern from symbol hiding provided the pattern defined by `--unhide` is more restrictive than the pattern defined by `--hide`.

These options have the following properties:

- The `--hide` and `--unhide` options can be specified more than once on the command line.
- The order of `--hide` and `--unhide` has no significance.
- A symbol is matched by only one pattern defined by either `--hide` or `--unhide`.
- A symbol is matched by the most restrictive pattern. Pattern A is considered more restrictive than Pattern B, if Pattern A matches a narrower set than Pattern B.
- It is an error if a symbol matches patterns from `--hide` and `--unhide` and if one does not supersede other. Pattern A supersedes pattern B if A can match everything B can, and some more. If Pattern A supersedes Pattern B, then Pattern B is said to more restrictive than Pattern A.
- These options affect final and partial linking.

In map files these symbols are listed under the Hidden Symbols heading.

### 7.4.14 Alter the Library Search Algorithm (`--library` Option, `--search_path` Option, and `C2000_C_DIR` Environment Variable)

Usually, when you want to specify a file as linker input, you simply enter the filename; the linker looks for the file in the current directory. For example, suppose the current directory contains the library object.lib. Assume that this library defines symbols that are referenced in the file file1.obj. This is how you link the files:

```
c12000 -v28 --run_linker file1.obj object.lib
```

If you want to use a file that is not in the current directory, use the `--library` linker option. The `--library` option's short form is `-l`. The syntax for this option is:

**`--library=[pathname] filename`**

The *filename* is the name of an archive, an object file, or link command file. You can specify up to 128 search paths.

The `--library` option is not required when one or more members of an object library are specified for input to an output section. For more information about allocating archive members, see [Section 7.5.4.5](#).

You can augment the linker's directory search algorithm by using the `--search_path` linker option or the `C2000_C_DIR` environment variable. The linker searches for object libraries and command files in the following order:

1. It searches directories named with the `--search_path` linker option. The `--search_path` option must appear before the `--library` option on the command line or in a command file.
2. It searches directories named with `C2000_C_DIR`.
3. If `C2000_C_DIR` is not set, it searches directories named with the assembler's `C2000_A_DIR` environment variable.
4. It searches the current directory.

#### 7.4.14.1 Name an Alternate Library Directory (`--search_path` Option)

The `--search_path` option names an alternate directory that contains input files. The `--search_path` option's short form is `-I`. The syntax for this option is:

**`--search_path= pathname`**

The *pathname* names a directory that contains input files.

When the linker is searching for input files named with the `--library` option, it searches through directories named with `--search_path` first. Each `--search_path` option specifies only one directory, but you can have several `--search_path` options per invocation. When you use the `--search_path` option to name an alternate directory, it must precede any `--library` option used on the command line or in a command file.

For example, assume that there are two archive libraries called `r.lib` and `lib2.lib` that reside in `ld` and `ld2` directories. The table below shows the directories that `r.lib` and `lib2.lib` reside in, how to set environment variable, and how to use both libraries during a link. Select the row for your operating system:

| Operating System    | Enter                                                                                                                           |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------|
| UNIX (Bourne shell) | <code>cl2000 -v28 --run_linker f1.obj f2.obj --search_path=/ld<br/>--search_path=/ld2 --library=r.lib --library=lib2.lib</code> |
| Windows             | <code>cl2000 -v28 --run_linker f1.obj f2.obj --search_path=\ld<br/>--search_path=\ld2 --library=r.lib --library=lib2.lib</code> |

#### 7.4.14.2 Name an Alternate Library Directory (`C2000_C_DIR` Environment Variable)

An environment variable is a system symbol that you define and assign a string to. The linker uses an environment variable named `C2000_C_DIR` to name alternate directories that contain object libraries. The command syntaxes for assigning the environment variable are:

| Operating System    | Enter                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------|
| UNIX (Bourne shell) | <b><code>C2000_C_DIR=" pathname<sub>1</sub>; pathname<sub>2</sub>; . . . "; export C2000_C_DIR</code></b> |
| Windows             | <b><code>set C2000_C_DIR= pathname<sub>1</sub>; pathname<sub>2</sub>; . . .</code></b>                    |

The *pathnames* are directories that contain input files. Use the `--library` linker option on the command line or in a command file to tell the linker which library or link command file to search for. The pathnames must follow these constraints:

- Pathnames must be separated with a semicolon.
- Spaces or tabs at the beginning or end of a path are ignored. For example the space before and after the semicolon in the following is ignored:

```
set C2000_C_DIR= c:\path\one\to\tools ; c:\path\two\to\tools
```

- Spaces and tabs are allowed within paths to accommodate Windows directories that contain spaces. For example, the pathnames in the following are valid:

```
set C2000_C_DIR=c:\first path\to\tools;d:\second path\to\tools
```

In the example below, assume that two archive libraries called `r.lib` and `lib2.lib` reside in `ld` and `ld2` directories. The table below shows how to set the environment variable, and how to use both libraries during a link. Select the row for your operating system:

| Operating System    | Invocation Command                                                                                                                 |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------|
| UNIX (Bourne shell) | <code>C2000_C_DIR="/ld ;/ld2"; export C2000_C_DIR;<br/>cl2000 --run_linker f1.obj f2.obj --library=r.lib --library=lib2.lib</code> |
| Windows             | <code>C2000_C_DIR=ld;\ld2<br/>cl2000 -v28 --run linker f1.obj f2.obj --library=r.lib --library=lib2.lib</code>                     |

The environment variable remains set until you reboot the system or reset the variable by entering:

| Operating System    | Enter                          |
|---------------------|--------------------------------|
| UNIX (Bourne shell) | <code>unset C2000_C_DIR</code> |
| Windows             | <code>set C2000_C_DIR=</code>  |

The assembler uses an environment variable named `C2000_A_DIR` to name alternate directories that contain copy/include files or macro libraries. If `C2000_C_DIR` is not set, the linker searches for object libraries in the directories named with `C2000_A_DIR`. For information about `C2000_A_DIR`, see [Section 3.4.2](#). For more information about object libraries, see [Section 7.6](#).

#### 7.4.14.3 Exhaustively Read and Search Libraries (`--reread_libs` and `--priority` Options)

There are two ways to exhaustively search for unresolved symbols:

- Reread libraries if you cannot resolve a symbol reference (`--reread_libs`).
- Search libraries in the order that they are specified (`--priority`).

The linker normally reads input files, including archive libraries, only once when they are encountered on the command line or in the command file. When an archive is read, any members that resolve references to undefined symbols are included in the link. If an input file later references a symbol defined in a previously read archive library, the reference is not resolved.

With the `--reread_libs` option, you can force the linker to reread all libraries. The linker rereads libraries until no more references can be resolved. Linking using `--reread_libs` may be slower, so you should use it only as needed. For example, if `a.lib` contains a reference to a symbol defined in `b.lib`, and `b.lib` contains a reference to a symbol defined in `a.lib`, you can resolve the mutual dependencies by listing one of the libraries twice, as in:

```
cl2000 -v28 --run_linker --library=a.lib --library=b.lib --library=a.lib
```

or you can force the linker to do it for you:

```
cl2000 -v28 --run_linker --reread_libs --library=a.lib --library=b.lib
```

The `--priority` option provides an alternate search mechanism for libraries. Using `--priority` causes each unresolved reference to be satisfied by the first library that contains a definition for that symbol. For example:

```
objfile references A
lib1 defines B
lib2 defines A, B; obj defining A references B
% cl2000 -v28 --run_linker objfile lib1 lib2
```

Under the existing model, `objfile` resolves its reference to `A` in `lib2`, pulling in a reference to `B`, which resolves to the `B` in `lib2`.

Under `--priority`, `objfile` resolves its reference to `A` in `lib2`, pulling in a reference to `B`, but now `B` is resolved by searching the libraries in order and resolves `B` to the first definition it finds, namely the one in `lib1`.

The `--priority` option is useful for libraries that provide overriding definitions for related sets of functions in other libraries without having to provide a complete version of the whole library.

For example, suppose you want to override versions of `malloc` and `free` defined in the `rts2800.lib` without providing a full replacement for `rts2800.lib`. Using `--priority` and linking your new library before `rts2800.lib` guarantees that all references to `malloc` and `free` resolve to the new library.

The `--priority` option is intended to support linking programs with DSP/BIOS where situations like the one illustrated above occur.

### 7.4.15 Change Symbol Localization

Symbol localization changes symbol linkage from global to local (static). This is used to obscure global symbols in a library which should not be visible outside the library, but must be global because they are accessed by several modules in the library. The linker supports symbol localization through the `--localize` and `--globalize` linker options.

The syntax for these options are:

`--localize='pattern'`

`--globalize='pattern'`

The *pattern* is a string with optional wild cards `?` or `*`. Use `?` to match a single character and use `*` to match zero or more characters.

The `--localize` option changes the symbol linkage to local for symbols matching the *pattern*.

The `--globalize` option changes the symbol linkage to global for symbols matching the *pattern*. The `--globalize` option only affects symbols that are localized by the `--localize` option. The `--globalize` option excludes symbols that match the pattern from symbol localization, provided the pattern defined by `--globalize` is more restrictive than the pattern defined by `--localize`.

---

#### Specifying C/C++ Symbols with `--localize` and `--globalize`

**NOTE:** For COFF ABI, the compiler prepends an underscore `_` to the beginning of all C/C++ identifiers. That is, for a function named `foo2()`, `foo2()` is prefixed with `_` and `_foo2` becomes the link-time symbol. The `--localize` and `--globalize` options accept the link-time symbols. Thus, you specify `--localize='_foo2'` to localize the C function `_foo2()`.

---

These options have the following properties:

- The `--localize` and `--globalize` options can be specified more than once on the command line.
- The order of `--localize` and `--globalize` options has no significance.
- A symbol is matched by only one pattern defined by either `--localize` or `--globalize`.
- A symbol is matched by the most restrictive pattern. Pattern A is considered more restrictive than Pattern B, if Pattern A matches a narrower set than Pattern B.
- It is an error if a symbol matches patterns from `--localize` and `--globalize` and if one does not supersede other. Pattern A supersedes pattern B if A can match everything B can, and some more. If Pattern A supersedes Pattern B, then Pattern B is said to more restrictive than Pattern A.
- These options affect final and partial linking.

In map files these symbols are listed under the Localized Symbols heading.

#### 7.4.15.1 Make All Global Symbols Static (`--make_static` Option)

The `--make_static` option makes all global symbols static. Static symbols are not visible to externally linked modules. By making global symbols static, global symbols are essentially hidden. This allows external symbols with the same name (in different files) to be treated as unique.

The `--make_static` option effectively nullifies all `.global` assembler directives. All symbols become local to the module in which they are defined, so no external references are possible. For example, assume `file1.obj` and `file2.obj` both define global symbols called `EXT`. By using the `--make_static` option, you can link these files without conflict. The symbol `EXT` defined in `file1.obj` is treated separately from the symbol `EXT` defined in `file2.obj`.

```
cl2000 -v28 --run_linker --make_static file1.obj file2.obj
```

#### 7.4.15.2 Make a Symbol Global (`--make_global` Option)

The `--make_static` option makes all global symbols static. If you have a symbol that you want to remain global and you use the `--make_static` option, you can use the `--make_global` option to declare that symbol to be global. The `--make_global` option overrides the effect of the `--make_static` option for the symbol that you specify. The syntax for the `--make_global` option is:

```
--make_global= global_symbol
```

#### 7.4.16 Create a Map File (`--map_file` Option)

The syntax for the `--map_file` option is:

```
--map_file= filename
```

The linker map describes:

- Memory configuration
- Input and output section allocation
- Linker-generated copy tables
- The addresses of external symbols after they have been relocated
- Hidden and localized symbols

The map file contains the name of the output module and the entry point; it can also contain up to three tables:

- A table showing the new memory configuration if any nondefault memory is specified (memory configuration). The table has the following columns; this information is generated on the basis of the information in the `MEMORY` directive in the link command file:
  - **Name.** This is the name of the memory range specified with the `MEMORY` directive.
  - **Origin.** This specifies the starting address of a memory range.
  - **Length.** This specifies the length of a memory range.
  - **Unused.** This specifies the total amount of unused (available) memory in that memory area.
  - **Attributes.** This specifies one to four attributes associated with the named range:

R specifies that the memory can be read.

W specifies that the memory can be written to.

X specifies that the memory can contain executable code.

I specifies that the memory can be initialized.

For more information about the `MEMORY` directive, see [Section 7.5.3](#).

- A table showing the linked addresses of each output section and the input sections that make up the output sections (section allocation map). This table has the following columns; this information is generated on the basis of the information in the `SECTIONS` directive in the link command file:
  - **Output section.** This is the name of the output section specified with the `SECTIONS` directive.
  - **Origin.** The first origin listed for each output section is the starting address of that output section. The indented origin value is the starting address of that portion of the output section.
  - **Length.** The first length listed for each output section is the length of that output section. The indented length value is the length of that portion of the output section.
  - **Attributes/input sections.** This lists the input file or value associated with an output section. If the input section could not be allocated, the map file will indicate this with "FAILED TO ALLOCATE".

For more information about the `SECTIONS` directive, see [Section 7.5.4](#).

- A table showing each external symbol and its address sorted by symbol name.
- A table showing each external symbol and its address sorted by symbol address.

This following example links file1.obj and file2.obj and creates a map file called map.out:

```
cl2000 -v28 --run_linker file1.obj file2.obj --map_file=map.out
```

Example 7-34 shows an example of a map file.

### 7.4.17 Managing Map File Contents (--mapfile\_contents Option)

The --mapfile\_contents option assists with managing the content of linker-generated map files. The syntax for the --mapfile\_contents option is:

**--mapfile\_contents= filter[, filter]**

When the --map\_file option is specified, the linker produces a map file containing information about memory usage, placement information about sections that were created during a link, details about linker-generated copy tables, and symbol values.

The new --mapfile\_contents option provides a mechanism for you to control what information is included in or excluded from a map file. When you specify --mapfile\_contents=help from the command line, a help screen listing available filter options is displayed.

The following filter options are available:

| Attribute   | Description                   | Default State |
|-------------|-------------------------------|---------------|
| crctables   | CRC tables                    | On            |
| copytables  | Copy tables                   | On            |
| entry       | Entry point                   | On            |
| load_addr   | Display load addresses        | Off           |
| memory      | Memory ranges                 | On            |
| sections    | Sections                      | On            |
| sym_defs    | Defined symbols per file      | Off           |
| sym_name    | Symbols sorted by name        | On            |
| sym_runaddr | Symbols sorted by run address | On            |
| all         | Enables all attributes        |               |
| none        | Disables all attributes       |               |

The --mapfile\_contents option controls display filter settings by specifying a comma-delimited list of display attributes. When prefixed with the word no, an attribute is disabled instead of enabled. For example:

```
--mapfile_contents=copytables,noentry
--mapfile_contents=all,nocopytables
--mapfile_contents=none,entry
```

By default, those sections that are currently included in the map file when the --map\_file option is specified are included. The filters specified in the --mapfile\_contents options are processed in the order that they appear in the command line. In the third example above, the first filter, none, clears all map file content. The second filter, entry, then enables information about entry points to be included in the generated map file. That is, when --mapfile\_contents=none,entry is specified, the map file contains *only* information about entry points.

There are two new filters included with the --mapfile\_contents option, load\_addr and sym\_defs. These are both disabled by default. If you turn on the load\_addr filter, the map file includes the load address of symbols that are included in the symbol list in addition to the run address (if the load address is different from the run address).

The sym\_defs filter can be used to include information about all static and global symbols defined in an application on a file by file basis. You may find it useful to replace the sym\_name and sym\_runaddr sections of the map file with the sym\_defs section by specifying the following --mapfile\_contents option:

```
--mapfile_contents=nosym_name,nosym_runaddr,sym_defs
```

### 7.4.18 Disable Name Demangling (`--no_demangle`)

By default, the linker uses demangled symbol names in diagnostics. For example:

```
undefined symbol          first referenced in file
ANewClass::getValue()    test.obj
```

The `--no_demangle` option disables the demangling of symbol names in diagnostics. For example:

```
undefined symbol          first referenced in file
_ZN9ANewClass8getValueEv  test.obj
```

### 7.4.19 Disable Merge of Symbolic Debugging Information (`--no_sym_merge Option`)

By default, the linker eliminates duplicate entries of symbolic debugging information. Such duplicate information is commonly generated when a C program is compiled for debugging. For example:

```
-[ header.h ]-
typedef struct
{
    <define some structure members>
} XYZ;

-[ f1.c ]-
#include "header.h"
...

-[ f2.c ]-
#include "header.h"
...
```

When these files are compiled for debugging, both `f1.obj` and `f2.obj` have symbolic debugging entries to describe type `XYZ`. For the final output file, only one set of these entries is necessary. The linker eliminates the duplicate entries automatically.

Use the COFF only `--no_sym_merge` option if you want the linker to keep such duplicate entries in COFF object files. Using the `--no_sym_merge` option has the effect of the linker running faster and using less host memory during linking, but the resulting executable file may be very large due to duplicated debug information.

### 7.4.20 Strip Symbolic Information (`--no_sym_table Option`)

The `--no_sym_table` option creates a smaller output module by omitting symbol table information and line number entries. The `--no_sym_table` option is useful for production applications when you do not want to disclose symbolic information to the consumer.

This example links `file1.obj` and `file2.obj` and creates an output module, stripped of line numbers and symbol table information, named `nosym.out`:

```
cl2000 -v28 --run_linker --output_file=nosym.out --no_sym_table file1.obj file2.obj
```

Using the `--no_sym_table` option limits later use of a symbolic debugger.

---

#### Stripping Symbolic Information

**NOTE:** The `--no_sym_table` option is deprecated. To remove symbol table information, use the `strip2000` utility as described in [Section 10.4](#).

---



### 7.4.21 Name an Output Module (`--output_file` Option)

The linker creates an output module when no errors are encountered. If you do not specify a filename for the output module, the linker gives it the default name `a.out`. If you want to write the output module to a different file, use the `--output_file` option. The syntax for the `--output_file` option is:

`--output_file= filename`

The *filename* is the new output module name.

This example links `file1.obj` and `file2.obj` and creates an output module named `run.out`:

```
cl2000 -v28 --run_linker --output_file=run.out file1.obj file2.obj
```

### 7.4.22 C Language Options (`--ram_model` and `--rom_model` Options)

The `--ram_model` and `--rom_model` options cause the linker to use linking conventions that are required by the C compiler.

- The `--ram_model` option tells the linker to initialize variables at load time.
- The `--rom_model` option tells the linker to autoinitialize variables at run time.

For more information, see [Section 7.11](#), [Section 7.11.4](#), and [Section 7.11.5](#).

### 7.4.23 Create an Absolute Listing File (`--run_abs` Option)

The `--run_abs` option produces an output file for each file that was linked. These files are named with the input filenames and an extension of `.abs`. Header files, however, do not generate a corresponding `.abs` file.

### 7.4.24 Scan All Libraries for Duplicate Symbol Definitions (`--scan_libraries`)

The `--scan_libraries` option scans all libraries during a link looking for duplicate symbol definitions to those symbols that are actually included in the link. The scan does not consider absolute symbols or symbols defined in COMDAT sections. The `--scan_libraries` option helps determine those symbols that were actually chosen by the linker over other existing definitions of the same symbol in a library.

The library scanning feature can be used to check against unintended resolution of a symbol reference to a definition when multiple definitions are available in the libraries.

### 7.4.25 Define Stack Size (`--stack_size` Option)

The TMS320C28x C/C++ compiler uses an uninitialized section, `.stack`, to allocate space for the run-time stack. You can set the size of this section in words at link time with the `--stack_size` option. The syntax for the `--stack_size` option is:

`--stack_size= size`

The *size* must be a constant and is in words. This example defines a 4K word stack:

```
cl2000 -v28 --run_linker --stack_size=0x1000 /* defines a 4K heap (.stack section)*/
```

If you specified a different stack size in an input section, the input section stack size is ignored. Any symbols defined in the input section remain valid; only the stack size is different.

When the linker defines the `.stack` section, it also defines a global symbol, `__STACK_SIZE`, and assigns it a value equal to the size of the section. The default software stack size is 1K words.

### 7.4.26 Enforce Strict Compatibility (`--strict_compatibility` Option)

The linker performs more conservative and rigorous compatibility checking of input object files when you specify the `--strict_compatibility` option. Using this option guards against additional potential compatibility issues, but may signal false compatibility errors when linking in object files built with an older toolset, or with object files built with another compiler vendor's toolset. To avoid issues with legacy libraries, the `--strict_compatibility` option is turned off by default.

### 7.4.27 Mapping of Symbols (`--symbol_map` Option)

Symbol mapping allows a symbol reference to be resolved by a symbol with a different name. Symbol mapping allows functions to be overridden with alternate definitions. This feature can be used to patch in alternate implementations, which provide patches (bug fixes) or alternate functionality. The syntax for the `--symbol_map` option is:

```
--symbol_map= refname=defname
```

For example, the following code makes the linker resolve any references to `foo` by the definition `foo_patch`:

```
--symbol_map='foo=foo_patch'
```

### 7.4.28 Introduce an Unresolved Symbol (`--undef_sym` Option)

The `--undef_sym` option introduces the linkname for an unresolved symbol into the linker's symbol table. This forces the linker to search a library and include the member that defines the symbol. The linker must encounter the `--undef_sym` option *before* it links in the member that defines the symbol. The syntax for the `--undef_sym` option is:

```
--undef_sym= symbol
```

For example, suppose a library named `rts2800.lib` contains a member that defines the symbol `symtab`; none of the object files being linked reference `symtab`. However, suppose you plan to relink the output module and you want to include the library member that defines `symtab` in this link. Using the `--undef_sym` option as shown below forces the linker to search `rts2800.lib` for the member that defines `symtab` and to link in the member.

```
cl2000 -v28 --run_linker --undef_sym=symtab file1.obj file2.obj rts2800.lib
```

If you do not use `--undef_sym`, this member is not included, because there is no explicit reference to it in `file1.obj` or `file2.obj`.

### 7.4.29 Display a Message When an Undefined Output Section Is Created (`--warn_sections` Option)

In a link command file, you can set up a `SECTIONS` directive that describes how input sections are combined into output sections. However, if the linker encounters one or more input sections that do not have a corresponding output section defined in the `SECTIONS` directive, the linker combines the input sections that have the same name into an output section with that name. By default, the linker does not display a message to tell you that this occurred.

You can use the `--warn_sections` option to cause the linker to display a message when it creates a new output section.

For more information about the `SECTIONS` directive, see [Section 7.5.4](#). For more information about the default actions of the linker, see [Section 7.7](#).

### 7.4.30 Generate XML Link Information File (`--xml_link_info` Option)

The linker supports the generation of an XML link information file through the `--xml_link_info=file` option. This option causes the linker to generate a well-formed XML file containing detailed information about the result of a link. The information included in this file includes all of the information that is currently produced in a linker generated map file.

See [Appendix B](#) for specifics on the contents of the generated XML file.

## 7.5 Linker Command Files

Linker command files allow you to put linking information in a file; this is useful when you invoke the linker often with the same information. Linker command files are also useful because they allow you to use the MEMORY and SECTIONS directives to customize your application. You must use these directives in a command file; you cannot use them on the command line.

Linker command files are ASCII files that contain one or more of the following:

- Input filenames, which specify object files, archive libraries, or other command files. (If a command file calls another command file as input, this statement must be the *last* statement in the calling command file. The linker does not return from called command files.)
- Linker options, which can be used in the command file in the same manner that they are used on the command line
- The MEMORY and SECTIONS linker directives. The MEMORY directive defines the target memory configuration (see [Section 7.5.3](#)). The SECTIONS directive controls how sections are built and allocated (see [Section 7.5.4](#).)
- Assignment statements, which define and assign values to global symbols

To invoke the linker with a command file, enter the `cl2000 -v28 --run_linker` command and follow it with the name of the command file:

```
cl2000 -v28 --run_linker command_filename
```

The linker processes input files in the order that it encounters them. If the linker recognizes a file as an object file, it links the file. Otherwise, it assumes that a file is a command file and begins reading and processing commands from it. Command filenames are case sensitive, regardless of the system used.

[Example 7-1](#) shows a sample link command file called `link.cmd`.

### Example 7-1. Linker Command File

```
a.obj          /* First input filename      */
b.obj          /* Second input filename       */
--output_file=prog.out /* Option to specify output file */
--map_file=prog.map  /* Option to specify map file   */
```

The sample file in [Example 7-1](#) contains only filenames and options. (You can place comments in a command file by delimiting them with `/*` and `*/`.) To invoke the linker with this command file, enter:

```
cl2000 -v28 --run_linker link.cmd
```

You can place other parameters on the command line when you use a command file:

```
cl2000 -v28 --run_linker --relocatable link.cmd c.obj d.obj
```

The linker processes the command file as soon as it encounters the filename, so `a.obj` and `b.obj` are linked into the output module before `c.obj` and `d.obj`.

You can specify multiple command files. If, for example, you have a file called `names.lst` that contains filenames and another file called `dir.cmd` that contains linker directives, you could enter:

```
cl2000 -v28 --run_linker names.lst dir.cmd
```

One command file can call another command file; this type of nesting is limited to 16 levels. If a command file calls another command file as input, this statement must be the *last* statement in the calling command file.

Blanks and blank lines are insignificant in a command file except as delimiters. This also applies to the format of linker directives in a command file. [Example 7-2](#) shows a sample command file that contains linker directives.

**Example 7-2. Command File With Linker Directives**

```

a.obj b.obj c.obj          /* Input filenames      */
--output_file=prog.out    /* Options          */
--map_file=prog.map

MEMORY                    /* MEMORY directive */
{
    FAST_MEM:  origin = 0x0100    length = 0x0100
    SLOW_MEM:  origin = 0x7000    length = 0x1000
}

SECTIONS                  /* SECTIONS directive */
{
    .text:    > SLOW_MEM
    .data:    > SLOW_MEM
    .bss:     > FAST_MEM
}
    
```

For more information, see [Section 7.5.3](#) for the MEMORY directive, and [Section 7.5.4](#) for the SECTIONS directive.

**7.5.1 Reserved Names in Linker Command Files**

The following names (in lowercase also) are reserved as keywords for linker directives. Do not use them as symbol or section names in a command file.

|             |                 |            |           |           |
|-------------|-----------------|------------|-----------|-----------|
| ALGORITHM   | END             | LOAD       | org       | SECTIONS  |
| ALIGN       | f               | LOAD_END   | ORIGIN    | SIZE      |
| ATTR        | FILL            | LOAD_SIZE  | PAGE      | START     |
| BLOCK       | GROUP           | LOAD_START | PALIGN    | TABLE     |
| COMPRESSION | HIGH            | MEMORY     | RUN       | TYPE      |
| COPY        | l (lowercase L) | NOINIT     | RUN_END   | UNION     |
| CRC_TABLE   | len             | NOLOAD     | RUN_SIZE  | UNORDERED |
| DSECT       | LENGTH          | o          | RUN_START |           |

**7.5.2 Constants in Linker Command Files**

You can specify constants with either of two syntax schemes: the scheme used for specifying decimal, octal, or hexadecimal constants used in the assembler (see [Section 3.6](#)) or the scheme used for integer constants in C syntax.

Examples:

| Format           | Decimal | Octal | Hexadecimal |
|------------------|---------|-------|-------------|
| Assembler format | 32      | 40q   | 020h        |
| C format         | 32      | 040   | 0x20        |

### 7.5.3 The MEMORY Directive

The linker determines where output sections are allocated into memory; it must have a model of target memory to accomplish this. The MEMORY directive allows you to specify a model of target memory so that you can define the types of memory your system contains and the address ranges they occupy. The linker maintains the model as it allocates output sections and uses it to determine which memory locations can be used for object code.

The memory configurations of TMS320C28x systems differ from application to application. The MEMORY directive allows you to specify a variety of configurations. After you use MEMORY to define a memory model, you can use the SECTIONS directive to allocate output sections into defined memory.

For more information, see [Section 2.3](#) and [Section 2.4](#).

#### 7.5.3.1 Default Memory Model

If you do not use the MEMORY directive, the linker uses a default memory model that is based on the TMS320C28x architecture. For more information about the default memory model, see [Section 7.7](#).

#### 7.5.3.2 MEMORY Directive Syntax

The MEMORY directive identifies ranges of memory that are physically present in the target system and can be used by a program. Each range has several characteristics:

- Page
- Name
- Starting address
- Length
- Optional set of attributes
- Optional fill specification

TMS320C28x devices have separate memory spaces (pages) that occupy the same address ranges (overlay). In the default memory map, one space is dedicated to the program area, while a second is dedicated to the data area. (For detailed information about overlaying pages, see [Section 7.5.4.2.6](#).)

In the linker command file, you configure the address spaces separately by using the MEMORY directive's PAGE option. The linker treats each page as a separate memory space. The TMS320C28x supports up to 255 address spaces, but the number of address spaces available depends on the customized configuration of your device (see the *TMS320C2xx User's Guide* for more information.)

When you use the MEMORY directive, be sure to identify all memory ranges that are available for loading code. Memory defined by the MEMORY directive is configured; any memory that you do not explicitly account for with MEMORY is unconfigured. The linker does not place any part of a program into unconfigured memory. You can represent nonexistent memory spaces by simply not including an address range in a MEMORY directive statement.

The MEMORY directive is specified in a command file by the word MEMORY (uppercase), followed by a list of memory range specifications enclosed in braces. The MEMORY directive in [Example 7-3](#) defines a system that has 4K words of slow external memory at address 0x0000 0C00 in program memory, 32 words of fast external memory at address 0x0000 0060 in data memory, and 512 words of slow external memory at address 0x0000 0200 in data memory. It also demonstrates the use of memory range expressions as well as start/end/size address operators (see [Example 7-4](#))

**Example 7-3. The MEMORY Directive**

```

/*****
/*          Sample command file with MEMORY directive          */
/*****
file1.obj   file2.obj                                     /* Input files */
--output_file=prog.out                               /* Options   */
#define BUFFER 0

MEMORY
{
  PAGE 0:  PROG:   origin = 0x00000C00, length = 0x00001000 + BUFFER

  PAGE 1:  SCRATCH: origin = 0x00000060, length = 0x00000020
           RAM1:   origin = end(SCRATCH,1) + 0x00000180, length = 0x00000200
}

```

The general syntax for the MEMORY directive is:

**MEMORY**

```

{
  [PAGE 0:] name 1 [( attr )] : origin = expression , length = expression [, fill = constant]
  [PAGE 1:] name 2 [( attr )] : origin = expression , length = expression [, fill = constant];
  .
  .
  [PAGE n:] name n [( attr )] : origin = expression , length = expression [, fill = constant]
}

```

- PAGE** identifies a memory space. You can specify up to 32 767 pages. Usually, PAGE 0 specifies program memory, and PAGE 1 specifies data memory. Each PAGE represents a completely independent address space. Configured memory on PAGE 0 can overlap configured memory on PAGE 1 and so on. If you do not specify PAGE for a memory space, the linker defaults to PAGE 0. If you do not specify PAGE in your *allocation* (see [Section 7.5.4](#)), the linker allocates initialized sections to PAGE 0 and uninitialized sections to PAGE 1.
- name** names a memory range. A memory name can be one to 64 characters; valid characters include A-Z, a-z, \$, ., and \_. The names have no special significance to the linker; they simply identify memory ranges. Memory range names are internal to the linker and are not retained in the output file or in the symbol table. All memory ranges must have unique names and must not overlap.
- attr** specifies one to four attributes associated with the named range. Attributes are optional; when used, they must be enclosed in parentheses. Attributes restrict the allocation of output sections into certain memory ranges. If you do not use any attributes, you can allocate any output section into any range with no restrictions. Any memory for which no attributes are specified (including all memory in the default model) has all four attributes. Valid attributes are:
- R** specifies that the memory can be read.
  - W** specifies that the memory can be written to.
  - X** specifies that the memory can contain executable code.
  - I** specifies that the memory can be initialized.
- origin** specifies the starting address of a memory range; enter as *origin*, *org*, or *o*. The value, specified in bytes, is an expression of 22-bit constants, which can be decimal, octal, or hexadecimal.
- length** specifies the length of a memory range; enter as *length*, *len*, or *l*. The value, specified in bytes, is an expression of 22-bit constants, which can be decimal, octal, or hexadecimal.

**fill** specifies a fill character for the memory range; enter as *fill* or *f*. Fills are optional. The value is a integer constant and can be decimal, octal, or hexadecimal. The fill value is used to fill areas of the memory range that are not allocated to a section.

**Filling Memory Ranges**

**NOTE:** If you specify fill values for large memory ranges, your output file will be very large because filling a memory range (even with 0s) causes raw data to be generated for all unallocated blocks of memory in the range.


The following example specifies a memory range with the R and W attributes and a fill constant of 0FFFFFFFh:

```
MEMORY
{
    RFILE (RW) : o = 0x00000020, l = 0x00001000, f = 0xFFFFFFFF
}
```

You normally use the MEMORY directive in conjunction with the SECTIONS directive to control allocation of output sections. After you use MEMORY to specify the target system's memory model, you can use SECTIONS to allocate output sections into specific named memory ranges or into memory that has specific attributes. For example, you could allocate the .text and .data sections into the area named RAM1 and allocate the .bss section into the area named PROG.

Figure 7-2 illustrates the memory map shown in Example 7-3

**Figure 7-2. Memory Map Defined in Example 7-3**

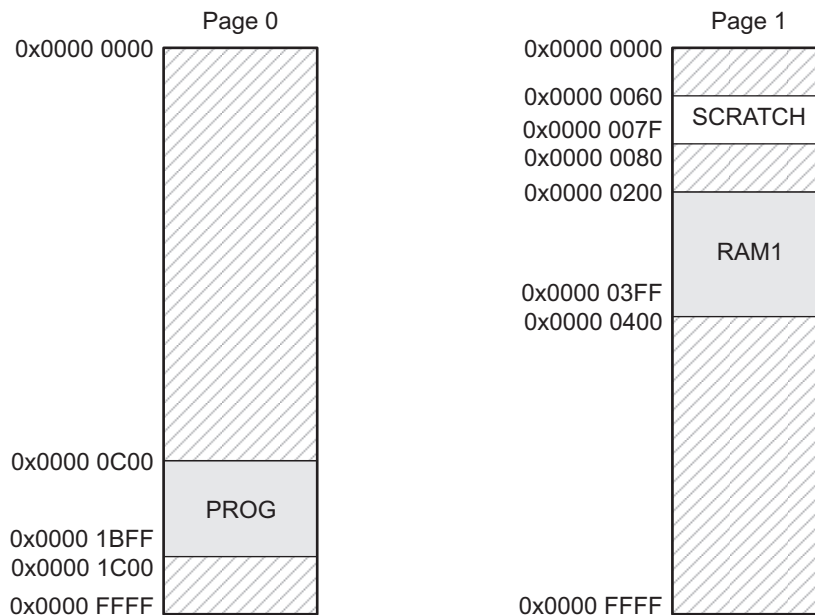

### 7.5.3.3 Expressions and Address Operators

Memory range origin and length can now use expressions of integer constants with below operators:

Binary operators:    \* / % + - << >> == =  
                          < <= > >= & | && ||

Unary operators:    - ~ !

Expressions are evaluated using standard C operator precedence rules.

No checking is done for overflow or underflow, however, expressions are evaluated using a larger integer type.

Preprocess directive #define constants can be used in place of integer constants. Global symbols cannot be used in Memory Directive expressions.

Three new address operators have been added for referencing memory range properties from prior memory range entries:

START(MR[,PAGE]) Returns start address for previously defined memory range MR.  
 SIZE(MR[,PAGE]) Returns size of previously defined memory range MR.  
 END(MR[,PAGE]) Returns end address for previously defined memory range MR.

---

**NOTE:** If no PAGE information is input then PAGE=0.

---

#### Example 7-4. Origin and Length as Expressions

```

/*****
/*      Sample command file with MEMORY directive      */
/*****
file1.obj file2.obj                               /*   Input files   */
--output_file=prog.out                           /*   Options      */
#define ORIGIN 0x00000000
#define BUFFER 0x00000200
#define CACHE  0x0001000

MEMORY
{
  PAGE 1: FAST_MEM (RX): origin = ORIGIN + CACHE length = 0x00001000 + BUFFER
  PAGE 0: SLOW_MEM (RW): origin = end(FAST_MEM) length = 0x00001800 - size(FAST_MEM)
  PAGE 0: EXT_MEM  (RX): origin = 0x03000000   length = size(FAST_MEM) - CACHE

```





Example 7-5 shows a SECTIONS directive in a sample link command file.

### Example 7-5. The SECTIONS Directive

```


/*****
/* Sample command file with SECTIONS directive */
/*****
file1.obj file2.obj /* Input files */
--output_file=prog.out /* Options */

SECTIONS
{
    .text:          load = PROG,   PAGE = 0,
                   run  = 0x0200, PAGE = 1
    .const:         load = RAM1
    .bss:           load = RAM1
    .scratch:       load = 0x0060, PAGE = 1
    {
        t1.obj(.scratch1)
        t2.obj(.scratch2)
        endscratch = .;
    }
    .data:alpha:    align = 16
    .data:beta:     align = 16
}

```

Figure 7-3 shows the six output sections defined by the SECTIONS directive in Example 7-5 (.vectors, .text, .const, .bss, .data:alpha, and .data:beta) and shows how these sections are allocated in memory using the MEMORY directive given in Example 7-3.

Figure 7-3. Section Allocation Defined by Example 7-5

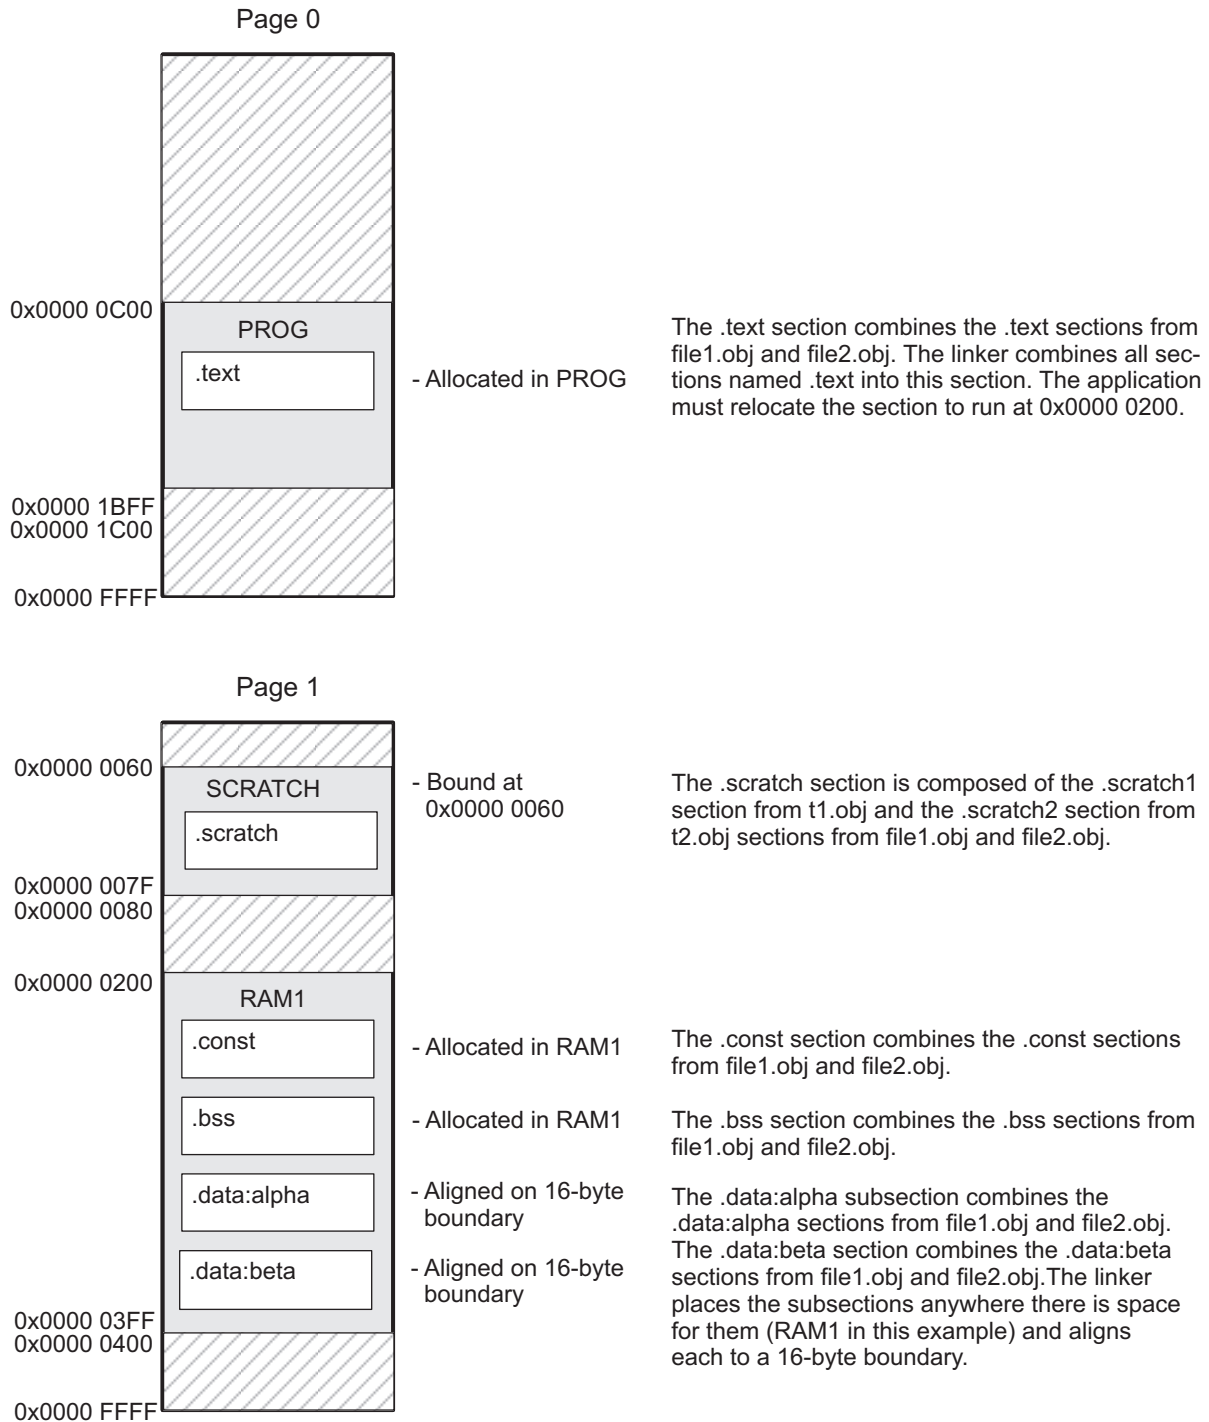

### 7.5.4.2 Allocation

The linker assigns each output section two locations in target memory: the location where the section will be loaded and the location where it will be run. Usually, these are the same, and you can think of each section as having only a single address. The process of locating the output section in the target's memory and assigning its address(es) is called allocation. For more information about using separate load and run allocation, see [Section 7.5.5](#).

If you do not tell the linker how a section is to be allocated, it uses a default algorithm to allocate the section. Generally, the linker puts sections wherever they fit into configured memory. You can override this default allocation for a section by defining it within a SECTIONS directive and providing instructions on how to allocate it.

You control allocation by specifying one or more allocation parameters. Each parameter consists of a keyword, an optional equal sign or greater-than sign, and a value optionally enclosed in parentheses. If load and run allocation are separate, all parameters following the keyword LOAD apply to load allocation, and those following the keyword RUN apply to run allocation. The allocation parameters are:

|                     |                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Binding</b>      | allocates a section at a specific address.<br><code>.text: load = 0x1000</code>                                                                                                                                                                                             |
| <b>Named memory</b> | allocates the section into a range defined in the MEMORY directive with the specified name (like SLOW_MEM) or attributes.<br><code>.text: load &gt; SLOW_MEM</code>                                                                                                         |
| <b>Alignment</b>    | uses the align or palign keyword to specify that the section must start on an address boundary.<br><code>.text: align = 0x100</code>                                                                                                                                        |
| <b>Blocking</b>     | uses the block keyword to specify that the section must fit between two address boundaries: if the section is too big, it starts on an address boundary.<br><code>.text: block(0x100)</code>                                                                                |
| <b>Page</b>         | specifies the memory page to be used (see <a href="#">Section 7.5.7</a> ). If PAGE is not specified, the linker allocates initialized sections to PAGE 0 (program memory) and uninitialized sections to PAGE 1 (data memory).<br><code>.text: load = SLOW_MEM PAGE 1</code> |

For the load (usually the only) allocation, you can simply use a greater-than sign and omit the load keyword:

```
.text: > SLOW_MEM
.text: {...} > SLOW_MEM
.text: > 0x4000
```

If more than one parameter is used, you can string them together as follows:

```
.text: > SLOW_MEM align 16 PAGE 2
```

Or if you prefer, use parentheses for readability:

```
.text: load = (SLOW_MEM align(16)) page 2
```

You can also use an input section specification to identify the sections from input files that are combined to form an output section. See [Section 7.5.4.3](#).

### 7.5.4.2.1 Binding

You can supply a specific starting address for an output section by following the section name with an address:

```
.text: 0x00001000
```

This example specifies that the `.text` section must begin at location `0x1000`. The binding address must be a 22-bit constant.

Output sections can be bound anywhere in configured memory (assuming there is enough space), but they cannot overlap. If there is not enough space to bind a section to a specified address, the linker issues an error message.

---

#### Binding is Incompatible With Alignment and Named Memory

**NOTE:** You cannot bind a section to an address if you use alignment or named memory. If you try to do this, the linker issues an error message.

---

### 7.5.4.2.2 Named Memory

You can allocate a section into a memory range that is defined by the `MEMORY` directive (see [Section 7.5.3](#)). This example names ranges and links sections into them:

```
MEMORY
{
    SLOW_MEM (RIX) : origin = 0x00000000, length = 0x00001000
    FAST_MEM (RWIX) : origin = 0x03000000, length = 0x00000300
}

SECTIONS
{
    .text : > SLOW_MEM
    .data : > FAST_MEM ALIGN(128)
    .bss : > FAST_MEM
}
```

In this example, the linker places `.text` into the area called `SLOW_MEM`. The `.data` and `.bss` output sections are allocated into `FAST_MEM`. You can align a section within a named memory range; the `.data` section is aligned on a 128-byte boundary within the `FAST_MEM` range.

Similarly, you can link a section into an area of memory that has particular attributes. To do this, specify a set of attributes (enclosed in parentheses) instead of a memory name. Using the same `MEMORY` directive declaration, you can specify:

```
SECTIONS
{
    .text: > (X) /* .text --> executable memory */
    .data: > (RI) /* .data --> read or init memory */
    .bss : > (RW) /* .bss --> read or write memory */
}
```

In this example, the `.text` output section can be linked into either the `SLOW_MEM` or `FAST_MEM` area because both areas have the `X` attribute. The `.data` section can also go into either `SLOW_MEM` or `FAST_MEM` because both areas have the `R` and `I` attributes. The `.bss` output section, however, must go into the `FAST_MEM` area because only `FAST_MEM` is declared with the `W` attribute.

You cannot control where in a named memory range a section is allocated, although the linker uses lower memory addresses first and avoids fragmentation when possible. In the preceding examples, assuming no conflicting assignments exist, the `.text` section starts at address 0. If a section must start on a specific address, use binding instead of named memory.

### 7.5.4.2.3 Controlling Allocation Using The HIGH Location Specifier

The linker allocates output sections from low to high addresses within a designated memory range by default. Alternatively, you can cause the linker to allocate a section from high to low addresses within a memory range by using the HIGH location specifier in the SECTION directive declaration.

For example, given this MEMORY directive:

```
MEMORY
{
    RAM           : origin = 0x0200, length = 0x0800
    FLASH        : origin = 0x1100, length = 0xEEE0
    VECTORS      : origin = 0xFFE0, length = 0x001E
    RESET       : origin = 0xFFFE, length = 0x0002
}
```

and an accompanying SECTIONS directive:

```
SECTIONS
{
    .bss      : {} > RAM
    .system  : {} > RAM
    .stack   : {} > RAM (HIGH)
}
```

The HIGH specifier used on the .stack section allocation causes the linker to attempt to allocate .stack into the higher addresses within the RAM memory range. The .bss and .system sections are allocated into the lower addresses within RAM. [Example 7-6](#) illustrates a portion of a map file that shows where the given sections are allocated within RAM for a typical program.

#### Example 7-6. Linker Allocation With the HIGH Specifier

|         |   |          |          |               |                        |
|---------|---|----------|----------|---------------|------------------------|
| .bss    | 0 | 00000200 | 00000270 | UNINITIALIZED |                        |
|         |   | 00000200 | 0000011a | rtsxxx.lib    | : defs.obj (.bss)      |
|         |   | 0000031a | 00000088 |               | : trgdrv.obj (.bss)    |
|         |   | 000003a2 | 00000078 |               | : lowlev.obj (.bss)    |
|         |   | 0000041a | 00000046 |               | : exit.obj (.bss)      |
|         |   | 00000460 | 00000008 |               | : memory.obj (.bss)    |
|         |   | 00000468 | 00000004 |               | : _lock.obj (.bss)     |
|         |   | 0000046c | 00000002 |               | : fopen.obj (.bss)     |
|         |   | 0000046e | 00000002 | hello.obj     | (.bss)                 |
| .system | 0 | 00000470 | 00000120 | UNINITIALIZED |                        |
|         |   | 00000470 | 00000004 | rtsxxx.lib    | : memory.obj (.system) |
| .stack  | 0 | 000008c0 | 00000140 | UNINITIALIZED |                        |
|         |   | 000008c0 | 00000002 | rtsxxx.lib    | : boot.obj (.stack)    |

As shown in [Example 7-6](#), the .bss and .system sections are allocated at the lower addresses of RAM (0x0200 - 0x0590) and the .stack section is allocated at address 0x08c0, even though lower addresses are available.

Without using the HIGH specifier, the linker allocation would result in the code shown in [Example 7-7](#)

The HIGH specifier is ignored if it is used with specific address binding or automatic section splitting (>> operator).

### Example 7-7. Linker Allocation Without HIGH Specifier

|         |   |          |          |               |                        |
|---------|---|----------|----------|---------------|------------------------|
| .bss    | 0 | 00000200 | 00000270 | UNINITIALIZED |                        |
|         |   | 00000200 | 0000011a | rtsxxx.lib    | : defs.obj (.bss)      |
|         |   | 0000031a | 00000088 |               | : trgdrv.obj (.bss)    |
|         |   | 000003a2 | 00000078 |               | : lowlev.obj (.bss)    |
|         |   | 0000041a | 00000046 |               | : exit.obj (.bss)      |
|         |   | 00000460 | 00000008 |               | : memory.obj (.bss)    |
|         |   | 00000468 | 00000004 |               | : _lock.obj (.bss)     |
|         |   | 0000046c | 00000002 |               | : fopen.obj (.bss)     |
|         |   | 0000046e | 00000002 | hello.obj     | (.bss)                 |
| .stack  | 0 | 00000470 | 00000140 | UNINITIALIZED |                        |
|         |   | 00000470 | 00000002 | rtsxxx.lib    | : boot.obj (.stack)    |
| .system | 0 | 000005b0 | 00000120 | UNINITIALIZED |                        |
|         |   | 000005b0 | 00000004 | rtsxxx.lib    | : memory.obj (.system) |

#### 7.5.4.2.4 Alignment and Blocking

You can tell the linker to place an output section at an address that falls on an n-byte boundary, where n is a power of 2, by using the align keyword. For example, the following code allocates .text so that it falls on a 32-byte boundary:

```
.text: load = align(32)
```

You can specify the same alignment with the palign keyword. In addition, palign ensures the section's size is a multiple of its placement alignment restrictions, padding the section size up to such a boundary, as needed.

Blocking is a weaker form of alignment that allocates a section anywhere *within* a block of size n. The specified block size must be a power of 2. For example, the following code allocates .bss so that the entire section is contained in a single 128-byte page or begins on that boundary:

```
bss: load = block(0x0080)
```

You can use alignment or blocking alone or in conjunction with a memory area, but alignment and blocking cannot be used together.

#### 7.5.4.2.5 Alignment With Padding

As with align, you can tell the linker to place an output section at an address that falls on an n-byte boundary, where n is a power of 2, by using the palign keyword. In addition, palign ensures that the size of the section is a multiple of its placement alignment restrictions, padding the section size up to such a boundary, as needed.

For example, the following code lines allocate .text on a 2-byte boundary within the PMEM area. The .text section size is guaranteed to be a multiple of 2 bytes. Both statements are equivalent:

```
.text: palign(2) {} > PMEM
.text: palign = 2 {} > PMEM
```

If the linker adds padding to an initialized output section then the padding space is also initialized. By default, padding space is filled with a value of 0 (zero). However, if a fill value is specified for the output section then any padding for the section is also filled with that fill value.

For example, consider the following section specification:

```
.mytext: palign(8), fill = 0xffff {} > PMEM
```

In this example, the length of the `.mytext` section is 6 bytes before the `palign` operator is applied. The contents of `.mytext` are as follows:

```
addr content
-----
0001 0x1234
0002 0x1234
0003 0x1234
```

After the `palign` operator is applied, the length of `.mytext` is 8 bytes, and its contents are as follows:

```
addr content
-----
0001 0x1234
0002 0x1234
0003 0x1234
0004 0xffff
0005 0xffff
0006 0xffff
0007 0xffff
```

The size of `.mytext` has been bumped to a multiple of 8 bytes and the padding created by the linker has been filled with `0xff`.

The fill value specified in the linker command file is interpreted as a 16-bit constant, so if you specify this code:

```
.mytext: palign(8), fill = 0xff {} > PMEM
```

The fill value assumed by the linker is `0x00ff`, and `.mytext` will then have the following contents:

```
addr content
-----
0001 0x1234
0002 0x1234
0003 0x1234
0004 0x00ff
0005 0x00ff
0006 0x00ff
0007 0x00ff
```

If the `palign` operator is applied to an uninitialized section, then the size of the section is bumped to the appropriate boundary, as needed, but any padding created is not initialized.

The `palign` operator can also take a parameter of *power2*. This parameter tells the linker to add padding to increase the section's size to the next power of two boundary. In addition, the section is aligned on that power of 2 as well.

For example, consider the following section specification:

```
.mytext: palign(power2) {} > PMEM
```

Assume that the size of the `.mytext` section is 120 bytes and `PMEM` starts at address `0x10020`. After applying the `palign(power2)` operator, the `.mytext` output section will have the following properties:

| name    | addr       | size  | align |
|---------|------------|-------|-------|
| -----   | -----      | ----- | ----- |
| .mytext | 0x00010080 | 0x80  | 128   |



### 7.5.4.2.6 Using the Page Method

Using the page method of specifying an address, you can allocate a section into an address space that is named in the MEMORY directive. For example:

```
MEMORY
{
    PAGE 0 : PROG      : origin = 0x00000800,   length = 0x00240
    PAGE 1 : DATA     : origin = 0x00000A00,   length = 0x02200
    PAGE 1 : OVR_MEM   : origin = 0x00002D00,   length = 0x01000
    PAGE 2 : DATA     : origin = 0x00000A00,   length = 0x02200
    PAGE 2 : OVR_MEM   : origin = 0x00002D00,   length = 0x01000
}
SECTIONS
{
    .text: PAGE = 0
    .data: PAGE = 2
    .cinit: PAGE = 0
    .bss: PAGE = 1
}
```

In this example, the .text and .cinit sections are allocated to PAGE 0. They are placed anywhere within the bounds of PAGE 0. The .data section is allocated anywhere within the bounds of PAGE 2. The .bss section is allocated anywhere within the bounds of PAGE 1.

You can use the page method in conjunction with any of the other methods to restrict an allocation to a specific address space. For example:

```
.text: load = OVR_MEM PAGE 1
```

In this example, the .text section is allocated to the named memory range OVR\_MEM. There are two named memory ranges called OVR\_MEM, however, so you must specify which one is to be used. By adding PAGE 1, you specify the use of the OVR\_MEM memory range in address space PAGE 1 rather than in address space PAGE 2. If no PAGE is specified for a section, the linker allocates initialized sections to PAGE 0 and uninitialized sections to PAGE 1.

### 7.5.4.3 Specifying Input Sections

An input section specification identifies the sections from input files that are combined to form an output section. In general, the linker combines input sections by concatenating them in the order in which they are specified. However, if alignment or blocking is specified for an input section, all of the input sections within the output section are ordered as follows:

- All aligned sections, from largest to smallest
- All blocked sections, from largest to smallest
- All other sections, from largest to smallest

The size of an output section is the sum of the sizes of the input sections that it comprises.

[Example 7-8](#) shows the most common type of section specification; note that no input sections are listed.

#### Example 7-8. The Most Common Method of Specifying Section Contents

```
SECTIONS
{
    .text:
    .data:
    .bss:
}
```

In [Example 7-8](#), the linker takes all the .text sections from the input files and combines them into the .text output section. The linker concatenates the .text input sections in the order that it encounters them in the input files. The linker performs similar operations with the .data and .bss sections. You can use this type of specification for any output section.

You can explicitly specify the input sections that form an output section. Each input section is identified by its filename and section name:

```
SECTIONS
{
  .text :          /* Build .text output section      */
  {
    f1.obj(.text)  /* Link .text section from f1.obj    */
    f2.obj(sec1)   /* Link sec1 section from f2.obj     */
    f3.obj         /* Link ALL sections from f3.obj     */
    f4.obj(.text,sec2) /* Link .text and sec2 from f4.obj  */
  }
}
```

It is not necessary for input sections to have the same name as each other or as the output section they become part of. If a file is listed with no sections, *all* of its sections are included in the output section. If any additional input sections have the same name as an output section but are not explicitly specified by the SECTIONS directive, they are automatically linked in at the end of the output section. For example, if the linker found more .text sections in the preceding example and these .text sections *were not* specified anywhere in the SECTIONS directive, the linker would concatenate these extra sections after f4.obj(sec2).

The specifications in [Example 7-8](#) are actually a shorthand method for the following:

```
SECTIONS
{
  .text: { *(.text) }
  .data: { *(.data) }
  .bss:  { *(.bss) }
}
```

The specification *\*(.text)* means *the unallocated .text sections from all the input files*. This format is useful when:

- You want the output section to contain all input sections that have a specified name, but the output section name is different from the input sections' name.
- You want the linker to allocate the input sections before it processes additional input sections or commands within the braces.

The following example illustrates the two purposes above:

```
SECTIONS
{
  .text : {
          abc.obj(xqt)
          *(.text)
        }
  .data : {
          *(.data)
          fil.obj(table)
        }
}
```

In this example, the .text output section contains a named section xqt from file abc.obj, which is followed by all the .text input sections. The .data section contains all the .data input sections, followed by a named section table from the file fil.obj. This method includes all the unallocated sections. For example, if one of the .text input sections was already included in another output section when the linker encountered *\*(.text)*, the linker could not include that first .text input section in the second output section.

#### 7.5.4.4 Using Multi-Level Subsections

Subsections can be identified with the base section name and one or more subsection names separated by colons. For example, A:B and A:B:C name subsections of the base section A. In certain places in a link command file specifying a base name, such as A, selects the section A as well as any subsections of A, such as A:B or A:C:D.

A name such as A:B can be used to specify a (sub)section of that name as well as any (multi-level) subsections beginning with that name, such as A:B:C, A:B:OTHER, etc. All the subsections of A:B are also subsections of A. A and A:B are supersessions of A:B:C. Among a group of supersessions of a subsection, the nearest supersession is the supersession with the longest name. Thus, among {A, A:B} the nearest supersession of A:B:C:D is A:B.

With multiple levels of subsections, the constraints are the following:

1. When specifying **input** sections within a file (or library unit) the section name selects an input section of the same name and any subsections of that name.
2. Input sections that are not explicitly allocated are allocated in an existing **output** section of the same name or in the nearest existing supersection of such an output section. An exception to this rule is that during a partial link (specified by the --relocatable linker option) a subsection is allocated only to an existing output section of the same name.
3. If no such output section described in 2) is defined, the input section is put in a **newly created output** section with the same name as the base name of the input section

Consider linking input sections with the following names:

|                      |                        |                    |
|----------------------|------------------------|--------------------|
| europa:north:norway  | europa:central:france  | europa:south:spain |
| europa:north:sweden  | europa:central:germany | europa:south:italy |
| europa:north:finland | europa:central:denmark | europa:south:malta |
| europa:north:iceland |                        |                    |

This SECTIONS specification allocates the input sections as indicated in the comments:

```
SECTIONS {
  nordic: {*(europa:north)
           *(europa:central:denmark)} /* the nordic countries */
  central: {*(europa:central)} /* france, germany */
  therest: {*(europa)} /* spain, italy, malta */
}
```

This SECTIONS specification allocates the input sections as indicated in the comments:

```
SECTIONS {
  islands: {*(europa:south:malta)
            *(europa:north:iceland)} /* malta, iceland */
  europa:north:finland : {} /* finland */
  europa:north : {} /* norway, sweden */
  europa:central : {} /* germany, denmark */
  europa:central:france: {} /* france */

  /* (italy, spain) go into a linker-generated output section "europa" */
}
```

---

### Upward Compatibility of Multi-Level Subsections

**NOTE:** Existing linker commands that use the existing single-level subsection features and which do not contain section names containing multiple colon characters continue to behave as before. However, if section names in a link command file or in the input sections supplied to the linker contain multiple colon characters, some change in behavior could be possible. You should carefully consider the impact of the new rules for multiple levels to see if it affects a particular system link.

---

### 7.5.4.5 Specifying Library or Archive Members as Input to Output Sections

You can specify one or more members of an object library or archive for input to an output section. Consider this SECTIONS directive:

#### Example 7-9. Archive Members to Output Sections

```
SECTIONS
{
    boot    >      BOOT1
    {
        -l=rtsXX.lib<boot.obj> (.text)
        -l=rtsXX.lib<exit.obj strcpy.obj> (.text)
    }

    .rts    >      BOOT2
    {
        -l=rtsXX.lib (.text)
    }

    .text   >      RAM
    {
        * (.text)
    }
}
```

In [Example 7-9](#), the .text sections of boot.obj, exit.obj, and strcpy.obj are extracted from the run-time-support library and placed in the .boot output section. The remainder of the run-time-support library object that is referenced is allocated to the .rts output section. Finally, the remainder of all other .text sections are to be placed in section .text.

An archive member or a list of members is specified by surrounding the member name(s) with angle brackets < and > after the library name. Any object files separated by commas or spaces from the specified archive file are legal within the angle brackets.

The --library option (which normally implies a library path search be made for the named file following the option) listed before each library in [Example 7-9](#) is optional when listing specific archive members inside < >. Using < > implies that you are referring to a library.

To collect a set of the input sections from a library in one place, use the --library option within the SECTIONS directive. For example, the following collects all the .text sections from rts2800.lib into the .rtstest section:

```
SECTIONS
{
    .rtstest { -l=rts2800.lib(.text) } > RAM
}
```

---

#### SECTIONS Directive Effect on --priority

**NOTE:** Specifying a library in a SECTIONS directive causes that library to be entered in the list of libraries that the linker searches to resolve references. If you use the --priority option, the first library specified in the command file will be searched first.

---

### 7.5.4.6 Allocation Using Multiple Memory Ranges

The linker allows you to specify an explicit list of memory ranges into which an output section can be allocated. Consider the following example:

```
MEMORY
{
    P_MEM1 : origin = 0x02000, length = 0x01000
    P_MEM2 : origin = 0x04000, length = 0x01000
    P_MEM3 : origin = 0x06000, length = 0x01000
    P_MEM4 : origin = 0x08000, length = 0x01000
}

SECTIONS
{
    .text : { } > P_MEM1 | P_MEM2 | P_MEM4
}
```

The | operator is used to specify the multiple memory ranges. The .text output section is allocated as a whole into the first memory range in which it fits. The memory ranges are accessed in the order specified. In this example, the linker first tries to allocate the section in P\_MEM1. If that attempt fails, the linker tries to place the section into P\_MEM2, and so on. If the output section is not successfully allocated in any of the named memory ranges, the linker issues an error message.

With this type of SECTIONS directive specification, the linker can seamlessly handle an output section that grows beyond the available space of the memory range in which it is originally allocated. Instead of modifying the link command file, you can let the linker move the section into one of the other areas.

### 7.5.4.7 Automatic Splitting of Output Sections Among Non-Contiguous Memory Ranges

The linker can split output sections among multiple memory ranges to achieve an efficient allocation. Use the >> operator to indicate that an output section can be split, if necessary, into the specified memory ranges. For example:

```
MEMORY
{
    P_MEM1 : origin = 0x2000, length = 0x1000
    P_MEM2 : origin = 0x4000, length = 0x1000
    P_MEM3 : origin = 0x6000, length = 0x1000
    P_MEM4 : origin = 0x8000, length = 0x1000
}

SECTIONS
{
    .text: { *(.text) } >> P_MEM1 | P_MEM2 | P_MEM3 | P_MEM4
}
```

In this example, the >> operator indicates that the .text output section can be split among any of the listed memory areas. If the .text section grows beyond the available memory in P\_MEM1, it is split on an input section boundary, and the remainder of the output section is allocated to P\_MEM2 | P\_MEM3 | P\_MEM4.

The | operator is used to specify the list of multiple memory ranges.

You can also use the >> operator to indicate that an output section can be split within a single memory range. This functionality is useful when several output sections must be allocated into the same memory range, but the restrictions of one output section cause the memory range to be partitioned. Consider the following example:

```
MEMORY
{
    RAM : origin = 0x1000, length = 0x8000
}

SECTIONS
{
    .special: { f1.obj(.text) } load = 0x4000
    .text: { *(.text) } >> RAM
}
```

The `.special` output section is allocated near the middle of the RAM memory range. This leaves two unused areas in RAM: from `0x1000` to `0x4000`, and from the end of `f1.obj(.text)` to `0x8000`. The specification for the `.text` section allows the linker to split the `.text` section around the `.special` section and use the available space in RAM on either side of `.special`.

The `>>` operator can also be used to split an output section among all memory ranges that match a specified attribute combination. For example:

```
MEMORY
{
  P_MEM1 (RWX) : origin = 0x1000, length = 0x2000
  P_MEM2 (RWI) : origin = 0x4000, length = 0x1000
}

SECTIONS
{
  .text: { *(.text) } >> (RW)
}
```

The linker attempts to allocate all or part of the output section into any memory range whose attributes match the attributes specified in the `SECTIONS` directive.

This `SECTIONS` directive has the same effect as:

```
SECTIONS
{
  .text: { *(.text) } >> P_MEM1 | P_MEM2
}
```

Certain sections should not be split:

- Certain sections created by the compiler, including
  - The `.cinit` section, which contains the autoinitialization table for C/C++ programs
  - The `.pinit` section, which contains the list of global constructors for C++ programs
  - The `.bss` section, which defines global variables
- An output section with an input section specification that includes an expression to be evaluated. The expression may define a symbol that is used in the program to manage the output section at run time.
- An output section that has a `START()`, `END()`, or `SIZE()` operator applied to it. These operators provide information about a section's load or run address, and size. Splitting the section may compromise the integrity of the operation.
- The run allocation of a `UNION`. (Splitting the load allocation of a `UNION` is allowed.)

If you use the `>>` operator on any of these sections, the linker issues a warning and ignores the operator.

## 7.5.5 Specifying a Section's Run-Time Address

At times, you may want to load code into one area of memory and run it in another. For example, you may have performance-critical code in slow external memory. The code must be loaded into slow external memory, but it would run faster in fast external memory.

The linker provides a simple way to accomplish this. You can use the `SECTIONS` directive to direct the linker to allocate a section twice: once to set its load address and again to set its run address. For example:

```
.fir: load = SLOW_MEM, run = FAST_MEM
```

Use the `load` keyword for the load address and the `run` keyword for the run address.

See [Section 2.5](#) for an overview on run-time relocation.

### 7.5.5.1 Specifying Load and Run Addresses

The load address determines where a loader places the raw data for the section. Any references to the section (such as labels in it) refer to its run address. The application must copy the section from its load address to its run address; this does *not* happen automatically when you specify a separate run address.

If you provide only one allocation (either load or run) for a section, the section is allocated only once and loads and runs at the same address. If you provide both allocations, the section is allocated as if it were two sections of the same size. This means that both allocations occupy space in the memory map and cannot overlay each other or other sections. (The `UNION` directive provides a way to overlay sections; see [Section 7.5.6.1](#).)

If either the load or run address has additional parameters, such as alignment or blocking, list them after the appropriate keyword. Everything related to allocation after the keyword `load` affects the load address until the keyword `run` is seen, after which, everything affects the run address. The load and run allocations are completely independent, so any qualification of one (such as alignment) has no effect on the other. You can also specify run first, then load. Use parentheses to improve readability.

The examples below specify load and run addresses:

```
.data: load = SLOW_MEM, align = 32, run = FAST_MEM
```

(align applies only to load)

```
.data: load = (SLOW_MEM align 32), run = FAST_MEM
```

(identical to previous example)

```
.data: run = FAST_MEM, align 32,  
      load = align 16
```

(align 32 in `FAST_MEM` for run; align 16 anywhere for load)

### 7.5.5.2 Uninitialized Sections

Uninitialized sections (such as `.bss`) are not loaded, so their only significant address is the run address. The linker allocates uninitialized sections only once: if you specify both run and load addresses, the linker warns you and ignores the load address. Otherwise, if you specify only one address, the linker treats it as a run address, regardless of whether you call it load or run. This example specifies load and run addresses for an uninitialized section:

```
.bss: load = 0x1000, run = FAST_MEM
```

A warning is issued, load is ignored, and space is allocated in `FAST_MEM`. All of the following examples have the same effect. The `.bss` section is allocated in `FAST_MEM`.

```
.bss: load = FAST_MEM  
.bss: run = FAST_MEM  
.bss: > FAST_MEM
```

### 7.5.5.3 Referring to the Load Address by Using the .label Directive

Normally, any reference to a symbol in a section refers to its run-time address. However, it may be necessary at run time to refer to a load-time address. Specifically, the code that copies a section from its load address to its run address must have access to the load address. The .label directive defines a special symbol that refers to the section's load address. Thus, whereas normal symbols are relocated with respect to the run address, .label symbols are relocated with respect to the load address. See [Create a Load-Time Address Label](#) for more information on the .label directive.

[Example 7-10](#) and [Example 7-11](#) show the use of the .label directive to copy a section from its load address in SLOW\_MEM to its run address in FAST\_MEM. [Figure 7-4](#) illustrates the run-time execution of [Example 7-10](#).

#### Example 7-10. Copying Section Assembly Language File

```

;-----
; define a section to be copied from SLOW_MEM to FAST_MEM
;-----
.sect ".fir"
.label fir_src          ; load address of section
fir:                   ; run address of section
<code here>           ; code for the section

.label fir_end         ; load address of section end

;-----
; copy .fir section from SLOW_MEM to FAST_MEM
;-----
.text

MOV  XAR6, fir_src
MOV  XAR7, #fir
RPT #(fir_end - fir_src - 1)

k  PWRITE *XAR7, *XAR6++

;-----
; jump to section, now in FAST_MEM
;-----
B  fir

```

#### Example 7-11. Linker Command File for Example 7-10

```

/*****
/*          PARTIAL LINKER COMMAND FILE FOR FIR EXAMPLE          */
*****/


MEMORY
{
  PAGE 0 :  FAST_MEM  :  origin = 0x00000800,  length = 0x00002400
  PAGE 0 :  PROG      :  origin = 0x00002C00,  length = 0x0000D200
  PAGE 1 :  SLOW_MEM  :  origin = 0x00000800,  length = 0x0000F800
}

SECTIONS
{
  .text: load = PROG PAGE 0
  .fir:  load = SLOW_MEM PAGE 1, run = FAST_MEM PAGE 0
}

```



Figure 7-4. Run-Time Execution of Example 7-10

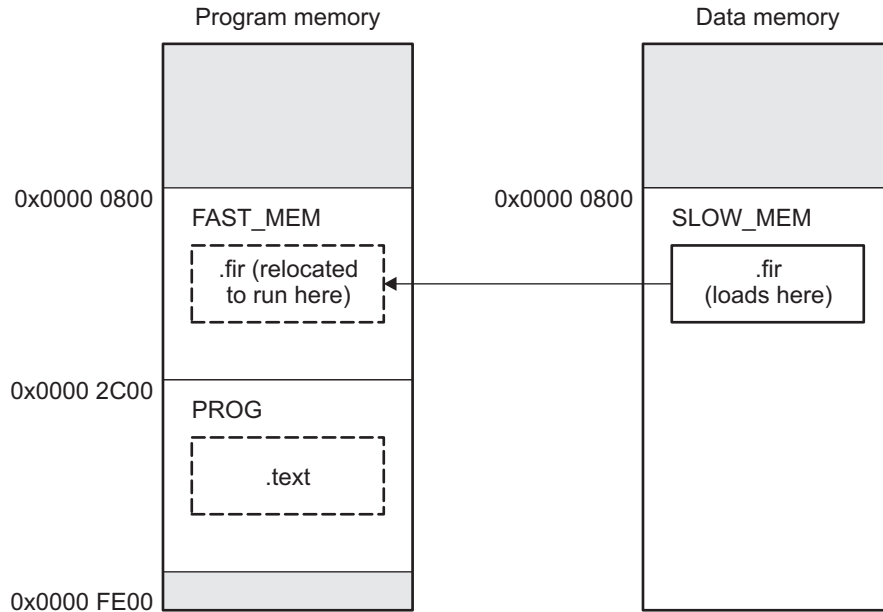

### 7.5.6 Using UNION and GROUP Statements

Two SECTIONS statements allow you to conserve memory: GROUP and UNION. Unioning sections causes the linker to allocate them to the same run address. Grouping sections causes the linker to allocate them contiguously in memory. Section names can refer to sections, subsections, or archive library members.

#### 7.5.6.1 Overlaying Sections With the UNION Statement

For some applications, you may want to allocate more than one section to occupy the same address during run time. For example, you may have several routines you want in fast external memory at various stages of execution. Or you may want several data objects that are not active at the same time to share a block of memory. The UNION statement within the SECTIONS directive provides a way to allocate several sections at the same run-time address.

In Example 7-12, the .bss sections from file1.obj and file2.obj are allocated at the same address in FAST\_MEM. In the memory map, the union occupies as much space as its largest component. The components of a union remain independent sections; they are simply allocated together as a unit.

#### Example 7-12. The UNION Statement

```
SECTIONS
{
    .text: load = SLOW_MEM
    UNION: run = FAST_MEM
    {
        .bss:part1: { file1.obj(.bss) }
        .bss:part2: { file2.obj(.bss) }
    }
    .bss:part3: run = FAST_MEM { globals.obj(.bss) }
}
```

Allocation of a section as part of a union affects only its *run* address. Under no circumstances can sections be overlaid for loading. If an initialized section is a union member (an initialized section, such as `.text`, has raw data), its load allocation *must* be separately specified. See [Example 7-13](#).


**Example 7-13. Separate Load Addresses for UNION Sections**

```

UNION run = FAST_MEM
{
  .text:part1: load = SLOW_MEM, { file1.obj(.text) }
  .text:part2: load = SLOW_MEM, { file2.obj(.text) }
}

```

**Figure 7-5. Memory Allocation Shown in [Example 7-12](#) and [Example 7-13](#)**

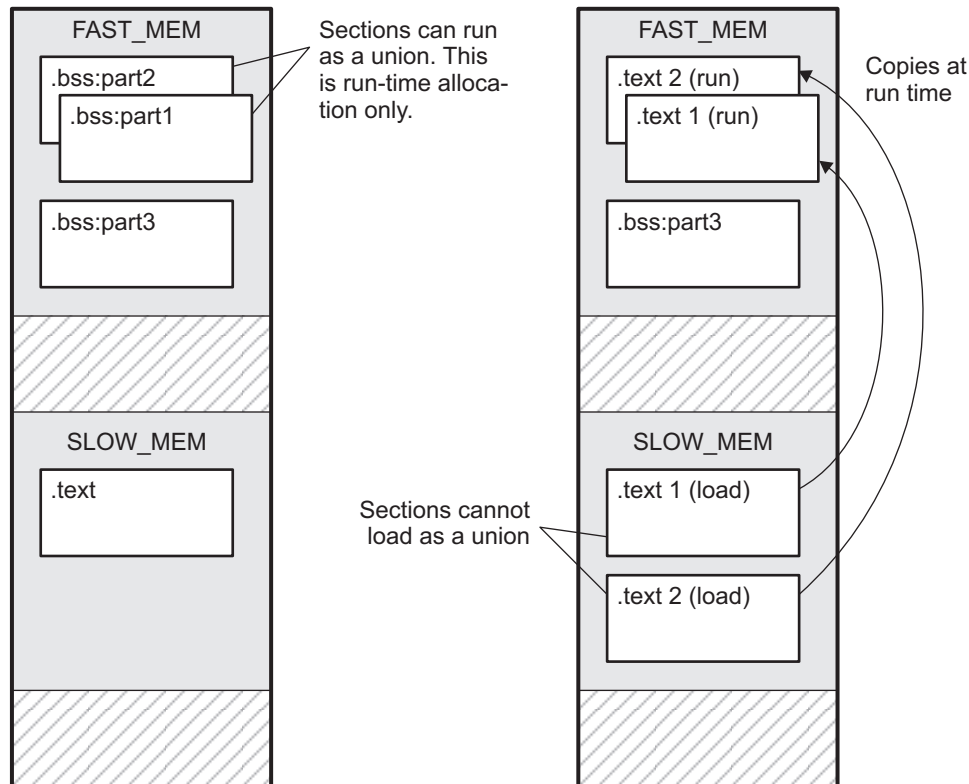

Since the `.text` sections contain raw data, they cannot *load* as a union, although they can be *run* as a union. Therefore, each requires its own load address. If you fail to provide a load allocation for an initialized section within a UNION, the linker issues a warning and allocates load space anywhere it can in configured memory.

Uninitialized sections are not loaded and do not require load addresses.

The UNION statement applies only to allocation of run addresses, so it is meaningless to specify a load address for the union itself. For purposes of allocation, the union is treated as an uninitialized section: any one allocation specified is considered a run address, and if both run and load addresses are specified, the linker issues a warning and ignores the load address.

### UNION and Overlay Page Are Not the Same

**NOTE:** The UNION capability and the overlay page capability (see [Section 7.5.7](#)) may sound similar because they both deal with overlays. They are, in fact, quite different. UNION allows multiple sections to be overlaid within the same memory space. Overlay pages, on the other hand, define multiple memory spaces. It is possible to use the page facility to approximate the function of UNION, but this is cumbersome.

#### 7.5.6.2 Grouping Output Sections Together

The SECTIONS directive's GROUP option forces several output sections to be allocated contiguously. For example, assume that a section named term\_rec contains a termination record for a table in the .data section. You can force the linker to allocate .data and term\_rec together:

#### Example 7-14. Allocate Sections Together

```
SECTIONS
{
  .text          /* Normal output section          */
  .bss           /* Normal output section          */
  GROUP 0x00001000 : /* Specify a group of sections */
  {
    .data        /* First section in the group     */
    term_rec     /* Allocated immediately after .data */
  }
}
```

You can use binding, alignment, or named memory to allocate a GROUP in the same manner as a single output section. In the preceding example, the GROUP is bound to address 0x1000. This means that .data is allocated at 0x1000, and term\_rec follows it in memory.

#### You Cannot Specify Addresses for Sections Within a GROUP

**NOTE:** When you use the GROUP option, binding, alignment, or allocation into named memory can be specified for the group only. You cannot use binding, named memory, or alignment for sections within a group.

#### 7.5.6.3 Nesting UNIONS and GROUPS

The linker allows arbitrary nesting of GROUP and UNION statements with the SECTIONS directive. By nesting GROUP and UNION statements, you can express hierarchical overlays and groupings of sections. [Example 7-15](#) shows how two overlays can be grouped together.

#### Example 7-15. Nesting GROUP and UNION Statements

```
SECTIONS
{
  GROUP 0x1000 : run = FAST_MEM
  {
    UNION:
    {
      mysect1: load = SLOW_MEM
      mysect2: load = SLOW_MEM
    }
    UNION:
    {
      mysect3: load = SLOW_MEM
      mysect4: load = SLOW_MEM
    }
  }
}
```

For this example, the linker performs the following allocations:

- The four sections (mysect1, mysect2, mysect3, mysect4) are assigned unique, non-overlapping load addresses. The name you defined with the .label directive is used in the SLOW\_MEM memory region. This assignment is determined by the particular load allocations given for each section.
- Sections mysect1 and mysect2 are assigned the same run address in FAST\_MEM.
- Sections mysect3 and mysect4 are assigned the same run address in FAST\_MEM.
- The run addresses of mysect1/mysect2 and mysect3/mysect4 are allocated contiguously, as directed by the GROUP statement (subject to alignment and blocking restrictions).

To refer to groups and unions, linker diagnostic messages use the notation:

GROUP\_*n* UNION\_*n*

In this notation, *n* is a sequential number (beginning at 1) that represents the lexical ordering of the group or union in the linker control file, without regard to nesting. Groups and unions each have their own counter.

#### 7.5.6.4 Checking the Consistency of Allocators

The linker checks the consistency of load and run allocations specified for unions, groups, and sections. The following rules are used:

- Run allocations are only allowed for top-level sections, groups, or unions (sections, groups, or unions that are not nested under any other groups or unions). The linker uses the run address of the top-level structure to compute the run addresses of the components within groups and unions.
- The linker does not accept a load allocation for UNIONS.
- The linker does not accept a load allocation for uninitialized sections.
- In most cases, you must provide a load allocation for an initialized section. However, the linker does not accept a load allocation for an initialized section that is located within a group that already defines a load allocator.
- As a shortcut, you can specify a load allocation for an entire group, to determine the load allocations for every initialized section or subgroup nested within the group. However, a load allocation is accepted for an entire group only if all of the following conditions are true:
  - The group is initialized (that is, it has at least one initialized member).
  - The group is not nested inside another group that has a load allocator.
  - The group does not contain a union containing initialized sections.
- If the group contains a union with initialized sections, it is necessary to specify the load allocation for each initialized section nested within the group. Consider the following example:

```
SECTIONS
{
  GROUP: load = SLOW_MEM, run = SLOW_MEM
  {
    .text1:
    UNION:
    {
      .text2:
      .text3:
    }
  }
}
```

The load allocator given for the group does not uniquely specify the load allocation for the elements within the union: .text2 and .text3. In this case, the linker issues a diagnostic message to request that these load allocations be specified explicitly.

### 7.5.6.5 Naming UNIONS and GROUPS

You can give a name to a UNION or GROUP by entering the name in parentheses after the declaration. For example:

```
GROUP(BSS_SYSMEM_STACK_GROUP)
{
    .bss      :{}
    .sysmem  :{}
    .stack   :{}
} load=D_MEM, run=D_MEM
```

The name you defined is used in diagnostics for easy identification of the problem LCF area. For example:  
warning: LOAD placement ignored for "BSS\_SYSMEM\_STACK\_GROUP": object is uninitialized

```
UNION(TEXT_CINIT_UNION)
{
    .const :{}load=D_MEM, table(table1)
    .pinit :{}load=D_MEM, table(table1)
}run=P_MEM
```

warning:table(table1) operator ignored: table(table1) has already been applied to a section in the "UNION(TEXT\_CINIT\_UNION)" in which ".pinit" is a descendant

## 7.5.7 Overlaying Pages

Some devices use a memory configuration in which all or part of the memory space is overlaid by shadow memory. This allows the system to map different banks of physical memory into and out of a single address range in response to hardware selection signals. In other words, multiple banks of physical memory overlay each other at one address range. You may want the linker to load various output sections into each of these banks or into banks that are not mapped at load time.

The linker supports this feature by providing overlay pages. Each page represents an address range that must be configured separately with the MEMORY directive. You then use the SECTIONS directive to specify the sections to be mapped into various pages.

---

#### Overlay Section and Overlay Page Are Not the Same

**NOTE:** The UNION capability and the overlay page capability (see [Section 7.5.6.1](#)) sound similar because they both deal with overlays. They are, in fact, quite different. UNION allows multiple sections to be overlaid within the same memory space. Overlay pages, on the other hand, define multiple memory spaces. It is possible to use the page facility to approximate the function of UNION, but it is cumbersome.

---

### 7.5.7.1 Using the MEMORY Directive to Define Overlay Pages

To the linker, each overlay page represents a completely separate memory space comprising the full range of addressable locations. In this way, you can link two or more sections at the same (or overlapping) addresses if they are on different pages.

Pages are numbered sequentially, beginning with 0. If you do not use the PAGE option, the linker allocates initialized sections into PAGE 0 (program memory) and uninitialized sections into PAGE 1 (data memory).

### 7.5.7.2 Example of Overlay Pages

Assume that your system can select between two banks of physical memory for data memory space: address range A00h to FFFFh for PAGE 1 and 0A00h to 2BFFh for PAGE 2. Although only one bank can be selected at a time, you can initialize each bank with different data. [Example 7-16](#) shows how you use the MEMORY directive to obtain this configuration:

**Example 7-16. MEMORY Directive With Overlay Pages**

```

MEMORY
{
  PAGE 0 : RAM      :origin = 0x0800, length = 0x0240
          : PROG     :origin = 0x2C00, length = 0xD200
  PAGE 1 : OVR_MEM  :origin = 0x0A00, length = 0x2200
          : DATA    :origin = 0x2C00, length = 0xD400
  PAGE 2 : OVR_MEM  :origin = 0x0A00, length = 0x2200
}

```

Example 7-16 defines three separate address spaces.

- PAGE 0 defines an area of RAM program memory space and the rest of program memory space.
- PAGE 1 defines the first overlay memory area and the rest of data memory space.
- PAGE 2 defines another area of overlay memory for data space.

Both OVR\_MEM ranges cover the same address range. This is possible because each range is on a different page and therefore represents a different memory space.

**7.5.7.3 Using Overlay Pages With the SECTIONS Directive**

Assume that you are using the MEMORY directive as shown in Example 7-16. Further assume that your code consists of the standard sections, as well as four modules of code that you want to load in data memory space and run in RAM program memory. Example 7-17 shows how to use the SECTIONS directive overlays to accomplish these objectives.

**Example 7-17. SECTIONS Directive Definition for Overlays in Example 7-10**

```

SECTIONS
{
  UNION : run = RAM
  {
    S1 : load = OVR_MEM PAGE 1
    {
      s1_load = 0x00000A00h;
      s1_start = .;
      f1.obj (.text)
      f2.obj (.text)
      s1_length = . - s1_start;
    }
    S2 : load = OVR_MEM PAGE 2
    {
      s2_load = 0x00000A00h;
      s2_start = .;
      f3.obj (.text)
      f4.obj (.text)
      s2_length = . - s2_start;
    }
  }

  .text: load = PROG PAGE 0
  .data: load = PROG PAGE 0
  .bss : load = DATA PAGE 1
}


```

The four modules are f1, f2, f3, and f4. Modules f1 and f2 are combined into output section S1, and f3 and f4 are combined into output section S2. The PAGE specifications for S1 and S2 tell the linker to link these sections into the corresponding pages. As a result, they are both linked to load address A00h, but in different memory spaces. When the program is loaded, a loader can configure hardware so that each section is loaded into the appropriate memory bank.

### 7.5.7.4 Memory Allocation for Overlaid Pages

Figure 7-6 shows overlay pages defined by the MEMORY directive in Example 7-16 and the SECTIONS directive in Example 7-17.

Figure 7-6. Overlay Pages Defined in Example 7-16 and Example 7-17

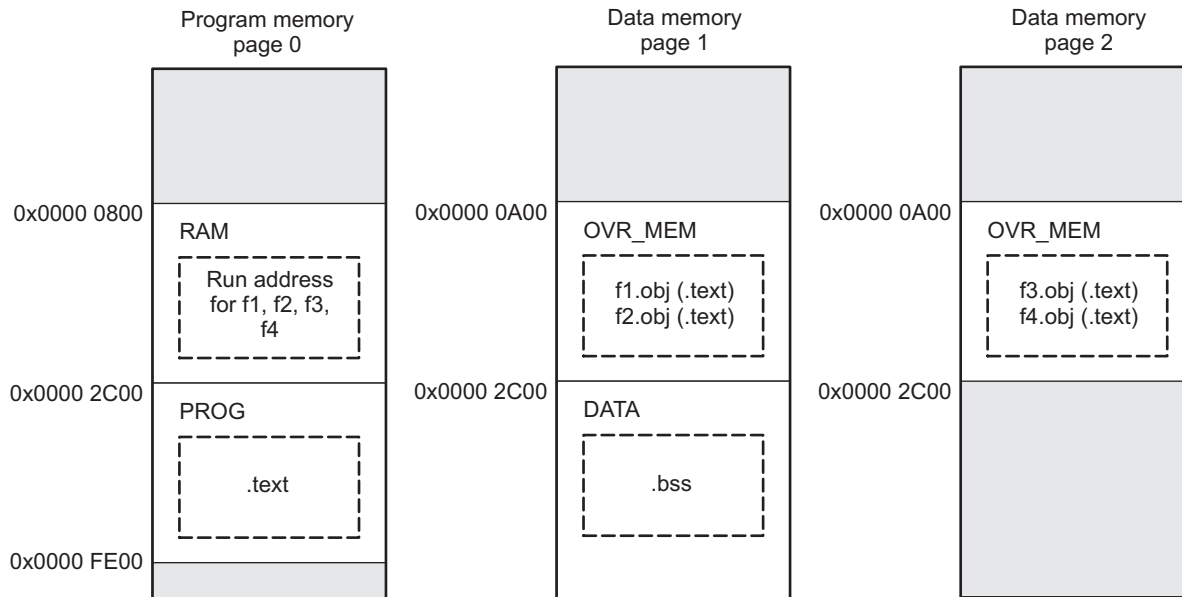

### 7.5.8 Special Section Types (DSECT, COPY, and NOLOAD)

You can assign three special types to output sections: DSECT, COPY, and NOLOAD. These types affect the way that the program is treated when it is linked and loaded. You can assign a type to a section by placing the type after the section definition. For example:

```
SECTIONS
{
  sec1: load = 0x00002000, type = DSECT {f1.obj}
  sec2: load = 0x00004000, type = COPY {f2.obj}
  sec3: load = 0x00006000, type = NOLOAD {f3.obj}
}
```

- The DSECT type creates a dummy section with the following characteristics:
  - It is not included in the output section memory allocation. It takes up no memory and is not included in the memory map listing.
  - It can overlay other output sections, other DSECTs, and unconfigured memory.
  - Global symbols defined in a dummy section are relocated normally. They appear in the output module's symbol table with the same value they would have if the DSECT had actually been loaded. These symbols can be referenced by other input sections.
  - Undefined external symbols found in a DSECT cause specified archive libraries to be searched.
  - The section's contents, relocation information, and line number information are not placed in the output module.

In the preceding example, none of the sections from f1.obj are allocated, but all the symbols are relocated as though the sections were linked at address 0x2000. The other sections can refer to any of the global symbols in sec1.

- A COPY section is similar to a DSECT section, except that its contents and associated information are written to the output module. The .cinit section that contains initialization tables for the TMS320C28x C/C++ compiler has this attribute under the run-time initialization model.
- A NOLOAD section differs from a normal output section in one respect: the section's contents, relocation information, and line number information are not placed in the output module. The linker allocates space for the section, and it appears in the memory map listing.

## 7.5.9 Assigning Symbols at Link Time

Linker assignment statements allow you to define external (global) symbols and assign values to them at link time. You can use this feature to initialize a variable or pointer to an allocation-dependent value.

### 7.5.9.1 Syntax of Assignment Statements

The syntax of assignment statements in the linker is similar to that of assignment statements in the C language:

|               |    |                     |                                               |
|---------------|----|---------------------|-----------------------------------------------|
| <i>symbol</i> | =  | <i>expression</i> ; | assigns the value of expression to symbol     |
| <i>symbol</i> | += | <i>expression</i> ; | adds the value of expression to symbol        |
| <i>symbol</i> | -= | <i>expression</i> ; | subtracts the value of expression from symbol |
| <i>symbol</i> | *= | <i>expression</i> ; | multiplies symbol by expression               |
| <i>symbol</i> | /= | <i>expression</i> ; | divides symbol by expression                  |

The symbol should be defined externally. If it is not, the linker defines a new symbol and enters it into the symbol table. The expression must follow the rules defined in [Section 7.5.9.3](#). Assignment statements *must* terminate with a semicolon.

The linker processes assignment statements *after* it allocates all the output sections. Therefore, if an expression contains a symbol, the address used for that symbol reflects the symbol's address in the executable output file.

For example, suppose a program reads data from one of two tables identified by two external symbols, Table1 and Table2. The program uses the symbol `cur_tab` as the address of the current table. The `cur_tab` symbol must point to either Table1 or Table2. You could accomplish this in the assembly code, but you would need to reassemble the program to change tables. Instead, you can use a linker assignment statement to assign `cur_tab` at link time:

```
prog.obj          /* Input file */
cur_tab = Table1; /* Assign cur_tab to one of the tables */
```

### 7.5.9.2 Assigning the SPC to a Symbol

A special symbol, denoted by a dot (`.`), represents the current value of the section program counter (SPC) during allocation. The SPC keeps track of the current location within a section. The linker's `.` symbol is analogous to the assembler's `$` symbol. The `.` symbol can be used only in assignment statements within a `SECTIONS` directive because `.` is meaningful only during allocation and `SECTIONS` controls the allocation process. (See [Section 7.5.4](#).)

The `.` symbol refers to the current run address, not the current load address, of the section.

For example, suppose a program needs to know the address of the beginning of the `.data` section. By using the `.global` directive (see [Identify Global Symbols](#)), you can create an external undefined variable called `Dstart` in the program. Then, assign the value of `.` to `Dstart`:

```
SECTIONS
{
  .text:    {}
  .data:    {Dstart = .;}
  .bss :    {}
}
```

This defines `Dstart` to be the first linked address of the `.data` section. (`Dstart` is assigned *before* `.data` is allocated.) The linker relocates all references to `Dstart`.

A special type of assignment assigns a value to the `.` symbol. This adjusts the SPC within an output section and creates a hole between two input sections. Any value assigned to `.` to create a hole is relative to the beginning of the section, not to the address actually represented by the `.` symbol. Holes and assignments to `.` are described in [Section 7.5.10](#).



### 7.5.9.3 Assignment Expressions

These rules apply to linker expressions:

- Expressions can contain global symbols, constants, and the C language operators listed in [Table 7-10](#).
- All numbers are treated as long (32-bit) integers.
- Constants are identified by the linker in the same way as by the assembler. That is, numbers are recognized as decimal unless they have a suffix (H or h for hexadecimal and Q or q for octal). C language prefixes are also recognized (0 for octal and 0x for hex). Hexadecimal constants must begin with a digit. No binary constants are allowed.
- Symbols within an expression have only the value of the symbol's *address*. No type-checking is performed.
- Linker expressions can be absolute or relocatable. If an expression contains *any* relocatable symbols (and 0 or more constants or absolute symbols), it is relocatable. Otherwise, the expression is absolute. If a symbol is assigned the value of a relocatable expression, it is relocatable; if it is assigned the value of an absolute expression, it is absolute.

The linker supports the C language operators listed in [Table 7-10](#) in order of precedence. Operators in the same group have the same precedence. Besides the operators listed in [Table 7-10](#), the linker also has an align operator that allows a symbol to be aligned on an n-byte boundary within an output section (n is a power of 2). For example, the following expression aligns the SPC within the current section on the next 16-byte boundary. Because the align operator is a function of the current SPC, it can be used only in the same context as `.`—that is, within a `SECTIONS` directive.

```
. = align(16);
```

**Table 7-10. Groups of Operators Used in Expressions (Precedence)**

| Group 1 (Highest Precedence) |                          | Group 6                      |             |                  |           |
|------------------------------|--------------------------|------------------------------|-------------|------------------|-----------|
| !                            | Logical NOT              | &                            | Bitwise AND |                  |           |
| ~                            | Bitwise NOT              |                              |             |                  |           |
| -                            | Negation                 |                              |             |                  |           |
| Group 2                      |                          | Group 7                      |             |                  |           |
| *                            | Multiplication           |                              | Bitwise OR  |                  |           |
| /                            | Division                 |                              |             |                  |           |
| %                            | Modulus                  |                              |             |                  |           |
| Group 3                      |                          | Group 8                      |             |                  |           |
| +                            | Addition                 | &&                           | Logical AND |                  |           |
| -                            | Subtraction              |                              |             |                  |           |
| Group 4                      |                          | Group 9                      |             |                  |           |
| >>                           | Arithmetic right shift   |                              | Logical OR  |                  |           |
| <<                           | Arithmetic left shift    |                              |             |                  |           |
| Group 5                      |                          | Group 10 (Lowest Precedence) |             |                  |           |
| ==                           | Equal to                 | =                            | Assignment  |                  |           |
| !=                           | Not equal to             | +=                           | A += B      | is equivalent to | A = A + B |
| >                            | Greater than             | -=                           | A -= B      | is equivalent to | A = A - B |
| <                            | Less than                | *=                           | A *= B      | is equivalent to | A = A * B |
| <=                           | Less than or equal to    | /=                           | A /= B      | is equivalent to | A = A / B |
| >=                           | Greater than or equal to |                              |             |                  |           |

#### 7.5.9.4 Symbols Defined by the Linker

The linker automatically defines several symbols based on which sections are used in your assembly source. A program can use these symbols at run time to determine where a section is linked. Since these symbols are external, they appear in the linker map. Each symbol can be accessed in any assembly language module if it is declared with a `.global` directive (see [Identify Global Symbols](#)). You must have used the corresponding section in a source module for the symbol to be created. Values are assigned to these symbols as follows:

|              |                                                                                                                                         |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>.text</b> | is assigned the first address of the <code>.text</code> output section.<br>(It marks the <i>beginning</i> of executable code.)          |
| <b>etext</b> | is assigned the first address following the <code>.text</code> output section.<br>(It marks the <i>end</i> of executable code.)         |
| <b>.data</b> | is assigned the first address of the <code>.data</code> output section.<br>(It marks the <i>beginning</i> of initialized data tables.)  |
| <b>edata</b> | is assigned the first address following the <code>.data</code> output section.<br>(It marks the <i>end</i> of initialized data tables.) |
| <b>.bss</b>  | is assigned the first address of the <code>.bss</code> output section.<br>(It marks the <i>beginning</i> of uninitialized data.)        |
| <b>end</b>   | is assigned the first address following the <code>.bss</code> output section.<br>(It marks the <i>end</i> of uninitialized data.)       |

The following symbols are defined only for C/C++ support when the `--ram_model` or `--rom_model` option is used.

|                        |                                                             |
|------------------------|-------------------------------------------------------------|
| <b>__STACK_END</b>     | is assigned the end of the <code>.stack</code> size.        |
| <b>__STACK_SIZE</b>    | is assigned the size of the <code>.stack</code> section.    |
| <b>__SYSTEMEM_SIZE</b> | is assigned the size of the <code>.systemem</code> section. |

#### 7.5.9.5 Assigning Exact Start, End, and Size Values of a Section to a Symbol

The code generation tools currently support the ability to load program code in one area of (slow) memory and run it in another (faster) area. This is done by specifying separate load and run addresses for an output section or group in the link command file. Then execute a sequence of instructions (the copying code in [Example 7-10](#)) that moves the program code from its load area to its run area before it is needed.

There are several responsibilities that a programmer must take on when setting up a system with this feature. One of these responsibilities is to determine the size and run-time address of the program code to be moved. The current mechanisms to do this involve use of the `.label` directives in the copying code. A simple example is illustrated [Example 7-10](#).

This method of specifying the size and load address of the program code has limitations. While it works fine for an individual input section that is contained entirely within one source file, this method becomes more complicated if the program code is spread over several source files or if the programmer wants to copy an entire output section from load space to run space.

Another problem with this method is that it does not account for the possibility that the section being moved may have an associated far call trampoline section that needs to be moved with it.

### 7.5.9.6 Why the Dot Operator Does Not Always Work

The dot operator (.) is used to define symbols at link-time with a particular address inside of an output section. It is interpreted like a PC. Whatever the current offset within the current section is, that is the value associated with the dot. Consider an output section specification within a SECTIONS directive:

```
outsect:
{
    s1.obj(.text)
    end_of_s1 = .;
    start_of_s2 = .;
    s2.obj(.text)
    end_of_s2 = .;
}
```

This statement creates three symbols:

- end\_of\_s1—the end address of .text in s1.obj
- start\_of\_s2—the start address of .text in s2.obj
- end\_of\_s2—the end address of .text in s2.obj

Suppose there is padding between s1.obj and s2.obj that is created as a result of alignment. Then start\_of\_s2 is not really the start address of the .text section in s2.obj, but it is the address before the padding needed to align the .text section in s2.obj. This is due to the linker's interpretation of the dot operator as the current PC. It is also due to the fact that the dot operator is evaluated independently of the input sections around it.

Another potential problem in the above example is that end\_of\_s2 may not account for any padding that was required at the end of the output section. You cannot reliably use end\_of\_s2 as the end address of the output section. One way to get around this problem is to create a dummy section immediately after the output section in question. For example:

```
GROUP
{
    outsect:
    {
        start_of_outsect = .;
        ...
    }
    dummy: { size_of_outsect = . - start_of_outsect; }
}
```

### 7.5.9.7 Address and Dimension Operators

Six new operators have been added to the link command file syntax:

|                                                 |                                                                                |
|-------------------------------------------------|--------------------------------------------------------------------------------|
| <b>LOAD_START( sym )</b><br><b>START( sym )</b> | Defines <i>sym</i> with the load-time start address of related allocation unit |
| <b>LOAD_END( sym )</b><br><b>END( sym )</b>     | Defines <i>sym</i> with the load-time end address of related allocation unit   |
| <b>LOAD_SIZE( sym )</b><br><b>SIZE( sym )</b>   | Defines <i>sym</i> with the load-time size of related allocation unit          |
| <b>RUN_START( sym )</b>                         | Defines <i>sym</i> with the run-time start address of related allocation unit  |
| <b>RUN_END( sym )</b>                           | Defines <i>sym</i> with the run-time end address of related allocation unit    |
| <b>RUN_SIZE( sym )</b>                          | Defines <i>sym</i> with the run-time size of related allocation unit           |

---

#### Linker Command File Operator Equivalencies

**NOTE:** LOAD\_START() and START() are equivalent, as are LOAD\_END()/END() and LOAD\_SIZE()/SIZE(). The LOAD names are recommended for clarity.

---

The new address and dimension operators can be associated with several different kinds of allocation units, including input items, output sections, GROUPs, and UNIONs. The following sections provide some examples of how the operators can be used in each case.

### 7.5.9.7.1 Input Items

Consider an output section specification within a SECTIONS directive:

```
outsect:
{
    s1.obj(.text)
    end_of_s1 = .;
    start_of_s2 = .;
    s2.obj(.text)
    end_of_s2 = .;
}
```

This can be rewritten using the START and END operators as follows:

```
outsect:
{
    s1.obj(.text) { END(end_of_s1) }
    s2.obj(.text) { START(start_of_s2), END(end_of_s2) }
}
```

The values of end\_of\_s1 and end\_of\_s2 will be the same as if you had used the dot operator in the original example, but start\_of\_s2 would be defined after any necessary padding that needs to be added between the two .text sections. Remember that the dot operator would cause start\_of\_s2 to be defined before any necessary padding is inserted between the two input sections.

The syntax for using these operators in association with input sections calls for braces { } to enclose the operator list. The operators in the list are applied to the input item that occurs immediately before the list.

### 7.5.9.7.2 Output Section

The START, END, and SIZE operators can also be associated with an output section. Here is an example:

```
outsect: START(start_of_outsect), SIZE(size_of_outsect)
{
    <list of input items>
}
```

In this case, the SIZE operator defines size\_of\_outsect to incorporate any padding that is required in the output section to conform to any alignment requirements that are imposed.

The syntax for specifying the operators with an output section does not require braces to enclose the operator list. The operator list is simply included as part of the allocation specification for an output section.

### 7.5.9.7.3 GROUPs

Here is another use of the START and SIZE operators in the context of a GROUP specification:

```
GROUP
{
    outsect1: { ... }
    outsect2: { ... }
} load = ROM, run = RAM, START(group_start), SIZE(group_size);
```

This can be useful if the whole GROUP is to be loaded in one location and run in another. The copying code can use group\_start and group\_size as parameters for where to copy from and how much is to be copied. This makes the use of .label in the source code unnecessary.

#### 7.5.9.7.4 UNIONS

The RUN\_SIZE and LOAD\_SIZE operators provide a mechanism to distinguish between the size of a UNION's load space and the size of the space where its constituents are going to be copied before they are run. Here is an example:

```
UNION: run = RAM, LOAD_START(union_load_addr),
      LOAD_SIZE(union_ld_sz), RUN_SIZE(union_run_sz)
{
    .text1: load = ROM, SIZE(text1_size) { f1.obj(.text) }
    .text2: load = ROM, SIZE(text2_size) { f2.obj(.text) }
}
```

Here union\_ld\_sz is going to be equal to the sum of the sizes of all output sections placed in the union. The union\_run\_sz value is equivalent to the largest output section in the union. Both of these symbols incorporate any padding due to blocking or alignment requirements.

### 7.5.10 Creating and Filling Holes

The linker provides you with the ability to create areas *within output sections* that have nothing linked into them. These areas are called *holes*. In special cases, uninitialized sections can also be treated as holes. This section describes how the linker handles holes and how you can fill holes (and uninitialized sections) with values.

#### 7.5.10.1 Initialized and Uninitialized Sections

There are two rules to remember about the contents of output sections. An output section contains either:

- Raw data for the *entire* section
- *No* raw data

A section that has raw data is referred to as *initialized*. This means that the object file contains the actual memory image contents of the section. When the section is loaded, this image is loaded into memory at the section's specified starting address. The .text and .data sections *always* have raw data if anything was assembled into them. Named sections defined with the .sect assembler directive also have raw data.

By default, the .bss section (see [Reserve Space in the .bss Section](#)) and sections defined with the .usect directive (see [Reserve Uninitialized Space](#)) have no raw data (they are *uninitialized*). They occupy space in the memory map but have no actual contents. Uninitialized sections typically reserve space in fast external memory for variables. In the object file, an uninitialized section has a normal section header and can have symbols defined in it; no memory image, however, is stored in the section.

#### 7.5.10.2 Creating Holes

You can create a hole in an initialized output section. A hole is created when you force the linker to leave extra space between input sections within an output section. When such a hole is created, *the linker must supply raw data for the hole*.

Holes can be created only *within* output sections. Space can exist *between* output sections, but such space is not a hole. To fill the space between output sections, see [Section 7.5.3.2](#).

To create a hole in an output section, you must use a special type of linker assignment statement within an output section definition. The assignment statement modifies the SPC (denoted by .) by adding to it, assigning a greater value to it, or aligning it on an address boundary. The operators, expressions, and syntaxes of assignment statements are described in [Section 7.5.9](#).

The following example uses assignment statements to create holes in output sections:

```
SECTIONS
{
  outsect:
  {
    file1.obj(.text)
    . += 0x0100 /* Create a hole with size 0x0100 */
    file2.obj(.text)
    . = align(16); /* Create a hole to align the SPC */
    file3.obj(.text)
  }
}
```

The output section outsect is built as follows:

1. The .text section from file1.obj is linked in.
2. The linker creates a 256-byte hole.
3. The .text section from file2.obj is linked in after the hole.
4. The linker creates another hole by aligning the SPC on a 16-byte boundary.
5. Finally, the .text section from file3.obj is linked in.

All values assigned to the . symbol within a section refer to the *relative address within the section*. The linker handles assignments to the . symbol as if the section started at address 0 (even if you have specified a binding address). Consider the statement . = align(16) in the example. This statement effectively aligns the file3.obj .text section to start on a 16-byte boundary within outsect. If outsect is ultimately allocated to start on an address that is not aligned, the file3.obj .text section will not be aligned either.

The . symbol refers to the current run address, not the current load address, of the section.

Expressions that decrement the . symbol are illegal. For example, it is invalid to use the -= operator in an assignment to the . symbol. The most common operators used in assignments to the . symbol are += and align.

If an output section contains all input sections of a certain type (such as .text), you can use the following statements to create a hole at the beginning or end of the output section.

```
.text: { . += 0x0100; } /* Hole at the beginning */
.data: { *(.data)
        . += 0x0100; } /* Hole at the end */
```

Another way to create a hole in an output section is to combine an uninitialized section with an initialized section to form a single output section. *In this case, the linker treats the uninitialized section as a hole and supplies data for it.* The following example illustrates this method:

```
SECTIONS
{
  outsect:
  {
    file1.obj(.text)
    file1.obj(.bss) /* This becomes a hole */
  }
}
```

Because the .text section has raw data, all of outsect must also contain raw data. Therefore, the uninitialized .bss section becomes a hole.

Uninitialized sections become holes only when they are combined with initialized sections. If several uninitialized sections are linked together, the resulting output section is also uninitialized.

### 7.5.10.3 Filling Holes

When a hole exists in an initialized output section, the linker must supply raw data to fill it. The linker fills holes with a 32-bit fill value that is replicated through memory until it fills the hole. The linker determines the fill value as follows:

1. If the hole is formed by combining an uninitialized section with an initialized section, you can specify a fill value for the uninitialized section. Follow the section name with an = sign and a 32-bit constant. For example:

```
SECTIONS
{
  outsect:
  {
    file1.obj(.text)
    file2.obj(.bss)= 0xFF00 /* Fill this hole with 0xFF00 */
  }
}
```

2. You can also specify a fill value for all the holes in an output section by supplying the fill value after the section definition:

```
SECTIONS
{
  outsect:fill = 0xFF00 /* Fills holes with 0xFF00 */
  {
    . += 0x0010; /* This creates a hole */
    file1.obj(.text)
    file1.obj(.bss) /* This creates another hole */
  }
}
```

3. If you do not specify an initialization value for a hole, the linker fills the hole with the value specified with the `--fill_value` option (see [Section 7.4.10](#)). For example, suppose the command file `link.cmd` contains the following `SECTIONS` directive:

```
SECTIONS { .text: { .= 0x0100; } /* Create a 100 word hole */ }
```

Now invoke the linker with the `--fill_value` option:

```
cl2000 -v28 --run_linker --fill_value=0xFFFF link.cmd
```

This fills the hole with `0xFFFF`.

4. If you do not invoke the linker with the `--fill_value` option or otherwise specify a fill value, the linker fills holes with 0s.

Whenever a hole is created and filled in an initialized output section, the hole is identified in the link map along with the value the linker uses to fill it.

### 7.5.10.4 Explicit Initialization of Uninitialized Sections

You can force the linker to initialize an uninitialized section by specifying an explicit fill value for it in the `SECTIONS` directive. This causes the entire section to have raw data (the fill value). For example:

```
SECTIONS
{
  .bss: fill = 0x1234 /* Fills .bss with 0x1234 */
}
```

---

#### Filling Sections

**NOTE:** Because filling a section (even with 0s) causes raw data to be generated for the entire section in the output file, your output file will be very large if you specify fill values for large sections or holes.

---

## 7.6 Object Libraries

An object library is a partitioned archive file that contains object files as members. Usually, a group of related modules are grouped together into a library. When you specify an object library as linker input, the linker includes any members of the library that define existing unresolved symbol references. You can use the archiver to build and maintain libraries. [Section 6.1](#) contains more information about the archiver.

Using object libraries can reduce link time and the size of the executable module. Normally, if an object file that contains a function is specified at link time, the file is linked whether the function is used or not; however, if that same function is placed in an archive library, the file is included only if the function is referenced.

The order in which libraries are specified is important, because the linker includes only those members that resolve symbols that are undefined at the time the library is searched. The same library can be specified as often as necessary; it is searched each time it is included. Alternatively, you can use the `--reread_libs` option to reread libraries until no more references can be resolved (see [Section 7.4.14.3](#)). A library has a table that lists all external symbols defined in the library; the linker searches through the table until it determines that it cannot use the library to resolve any more references.

The following examples link several files and libraries, using these assumptions:

- Input files `f1.obj` and `f2.obj` both reference an external function named `clrscr`.
- Input file `f1.obj` references the symbol `origin`.
- Input file `f2.obj` references the symbol `fillclr`.
- Member 0 of library `libc.lib` contains a definition of `origin`.
- Member 3 of library `liba.lib` contains a definition of `fillclr`.
- Member 1 of both libraries defines `clrscr`.

If you enter:

```
c12000 -v28 --run_linker f1.obj f2.obj liba.lib libc.lib
```

then:

- Member 1 of `liba.lib` satisfies the `f1.obj` and `f2.obj` references to `clrscr` because the library is searched and the definition of `clrscr` is found.
- Member 0 of `libc.lib` satisfies the reference to `origin`.
- Member 3 of `liba.lib` satisfies the reference to `fillclr`.

If, however, you enter:

```
c12000 -v28 --run_linker f1.obj f2.obj libc.lib liba.lib
```

then the references to `clrscr` are satisfied by member 1 of `libc.lib`.

If none of the linked files reference symbols defined in a library, you can use the `--undef_sym` option to force the linker to include a library member. (See [Section 7.4.28](#).) The next example creates an undefined symbol `rout1` in the linker's global symbol table:

```
c12000 -v28 --run_linker --undef_sym=rout1 libc.lib
```

If any member of `libc.lib` defines `rout1`, the linker includes that member.

Library members are allocated according to the `SECTIONS` directive default allocation algorithm; see [Section 7.5.4](#).

[Section 7.4.14](#) describes methods for specifying directories that contain object libraries.



## 7.7 Default Allocation Algorithm

The MEMORY and SECTIONS directives provide flexible methods for building, combining, and allocating sections. However, any memory locations or sections that you choose *not* to specify must still be handled by the linker. The linker uses default algorithms to build and allocate sections within the specifications you supply.

If you do not use the MEMORY and SECTIONS directives, the linker allocates output sections as though the definitions in [Example 7-18](#) were specified.

### **Example 7-18. Default Allocation for TMS320C28x Devices**

```
MEMORY
{
    PAGE 0: PROG:  origin = 0x000040  length = 0x3fffc0
    PAGE 1: DATA: origin = 0x000000  length = 0x010000
    PAGE 1: DATA1: origin = 0x010000  length = 0x3f0000
}
SECTIONS
{
    .text:      PAGE = 0
    .data:      PAGE = 0
    .cinit:     PAGE = 0  /* Used only for C programs */
    .bss:      PAGE = 1
}
```

All .text input sections are concatenated to form a .text output section in the executable output file, and all .data input sections are combined to form a .data output section.

If you use a SECTIONS directive, the linker performs *no part* of the default allocation. Allocation is performed according to the rules specified by the SECTIONS directive and the general algorithm described next in [Section 7.7.1](#).

### **7.7.1 How the Allocation Algorithm Creates Output Sections**

An output section can be formed in one of two ways:

**Method 1** As the result of a SECTIONS directive definition

**Method 2** By combining input sections with the same name into an output section that is not defined in a SECTIONS directive

If an output section is formed as a result of a SECTIONS directive, this definition completely determines the section's contents. (See [Section 7.5.4](#) for examples of how to define an output section's content.)

If an output section is formed by combining input sections not specified by a SECTIONS directive, the linker combines all such input sections that have the same name into an output section with that name. For example, suppose the files f1.obj and f2.obj both contain named sections called Vectors and that the SECTIONS directive does not define an output section for them. The linker combines the two Vectors sections from the input files into a single output section named Vectors, allocates it into memory, and includes it in the output file.

By default, the linker does not display a message when it creates an output section that is not defined in the SECTIONS directive. You can use the `--warn_sections` linker option (see [Section 7.4.29](#)) to cause the linker to display a message when it creates a new output section.

After the linker determines the composition of all output sections, it must allocate them into configured memory. The MEMORY directive specifies which portions of memory are configured. If there is no MEMORY directive, the linker uses the default configuration as shown in [Example 7-18](#). (See [Section 7.5.3](#) for more information on configuring memory.)

### 7.7.2 Reducing Memory Fragmentation

The linker's allocation algorithm attempts to minimize memory fragmentation. This allows memory to be used more efficiently and increases the probability that your program will fit into memory. The algorithm comprises these steps:

1. Each output section for which you have supplied a specific binding address is placed in memory at that address.
2. Each output section that is included in a specific, named memory range or that has memory attribute restrictions is allocated. Each output section is placed into the first available space within the named area, considering alignment where necessary.
3. Any remaining sections are allocated in the order in which they are defined. Sections not defined in a SECTIONS directive are allocated in the order in which they are encountered. Each output section is placed into the first available memory space, considering alignment where necessary.

## 7.8 Linker-Generated Copy Tables

The linker supports extensions to the link command file syntax that enable the following:

- Make it easier for you to copy objects from load-space to run-space at boot time
- Make it easier for you to manage memory overlays at run time
- Allow you to split GROUPs and output sections that have separate load and run addresses

### 7.8.1 A Current Boot-Loaded Application Development Process

In some embedded applications, there is a need to copy or download code and/or data from one location to another at boot time before the application actually begins its main execution thread. For example, an application may have its code and/or data in FLASH memory and need to copy it into on-chip memory before the application begins execution.

One way you can develop an application like this is to create a copy table in assembly code that contains three elements for each block of code or data that needs to be moved from FLASH into on-chip memory at boot time:

- The load location (load page id and address)
- The run location (load page id and address)
- The size

The process you follow to develop such an application might look like this:

1. Build the application to produce a .map file that contains the load and run addresses of each section that has a separate load and run placement.
2. Edit the copy table (used by the boot loader) to correct the load and run addresses as well as the size of each block of code or data that needs to be moved at boot time.
3. Build the application again, incorporating the updated copy table.
4. Run the application.

This process puts a heavy burden on you to maintain the copy table (by hand, no less). Each time a piece of code or data is added or removed from the application, you must repeat the process in order to keep the contents of the copy table up to date.

## 7.8.2 An Alternative Approach

You can avoid some of this maintenance burden by using the `LOAD_START()`, `RUN_START()`, and `SIZE()` operators that are already part of the link command file syntax. For example, instead of building the application to generate a `.map` file, the link command file can be annotated:

```
SECTIONS
{
    .flashcode: { app_tasks.obj(.text) }
        load = FLASH, run = PMEM,
        LOAD_START(_flash_code_ld_start),
        RUN_START(_flash_code_rn_start),
        SIZE(_flash_code_size)

    ...
}
```

In this example, the `LOAD_START()`, `RUN_START()`, and `SIZE()` operators instruct the linker to create three symbols:

| Symbol                            | Description                                     |
|-----------------------------------|-------------------------------------------------|
| <code>_flash_code_ld_start</code> | Load address of <code>.flashcode</code> section |
| <code>_flash_code_rn_start</code> | Run address of <code>.flashcode</code> section  |
| <code>_flash_code_size</code>     | Size of <code>.flashcode</code> section         |

These symbols can then be referenced from the copy table. The actual data in the copy table will be updated automatically each time the application is linked. This approach removes step 1 of the process described in [Section 7.8.1](#).

While maintenance of the copy table is reduced markedly, you must still carry the burden of keeping the copy table contents in sync with the symbols that are defined in the link command file. Ideally, the linker would generate the boot copy table automatically. This would avoid having to build the application twice *and* free you from having to explicitly manage the contents of the boot copy table.

For more information on the `LOAD_START()`, `RUN_START()`, and `SIZE()` operators, see [Section 7.5.9.7](#).

## 7.8.3 Overlay Management Example

Consider an application which contains a memory overlay that must be managed at run time. The memory overlay is defined using a `UNION` in the link command file as illustrated in [Example 7-19](#):

### Example 7-19. Using a UNION for Memory Overlay

```
SECTIONS
{
    ...

    UNION
    {
        GROUP
        {
            .task1: { task1.obj(.text) }
            .task2: { task2.obj(.text) }

        } load = ROM, LOAD_START(_task12_load_start), SIZE(_task12_size)

        GROUP
        {
            .task3: { task3.obj(.text) }
            .task4: { task4.obj(.text) }

        } load = ROM, LOAD_START(_task34_load_start), SIZE(_task_34_size)

    } run = RAM, RUN_START(_task_run_start)

    ...
}
```

The application must manage the contents of the memory overlay at run time. That is, whenever any services from .task1 or .task2 are needed, the application must first ensure that .task1 and .task2 are resident in the memory overlay. Similarly for .task3 and .task4.

To affect a copy of .task1 and .task2 from ROM to RAM at run time, the application must first gain access to the load address of the tasks (`_task12_load_start`), the run address (`_task_run_start`), and the size (`_task12_size`). Then this information is used to perform the actual code copy.

### 7.8.4 Generating Copy Tables Automatically With the Linker

The linker supports extensions to the link command file syntax that enable you to do the following:

- Identify any object components that may need to be copied from load space to run space at some point during the run of an application
- Instruct the linker to automatically generate a copy table that contains (at least) the load address, run address, and size of the component that needs to be copied
- Instruct the linker to generate a symbol specified by you that provides the address of a linker-generated copy table. For instance, [Example 7-19](#) can be written as shown in [Example 7-20](#):

#### Example 7-20. Produce Address for Linker Generated Copy Table

```
SECTIONS
{
  ...

  UNION
  {
    GROUP
    {
      .task1: { task1.obj(.text) }
      .task2: { task2.obj(.text) }

    } load = ROM, table(_task12_copy_table)

    GROUP
    {
      .task3: { task3.obj(.text) }
      .task4: { task4.obj(.text) }

    } load = ROM, table(_task34_copy_table)

  } run = RAM
  ...
}
```

Using the SECTIONS directive from [Example 7-20](#) in the link command file, the linker generates two copy tables named: `_task12_copy_table` and `_task34_copy_table`. Each copy table provides the load address, run address, and size of the GROUP that is associated with the copy table. This information is accessible from application source code using the linker-generated symbols, `_task12_copy_table` and `_task34_copy_table`, which provide the addresses of the two copy tables, respectively.

Using this method, you do not have to worry about the creation or maintenance of a copy table. You can reference the address of any copy table generated by the linker in C/C++ or assembly source code, passing that value to a general purpose copy routine which will process the copy table and affect the actual copy.

### 7.8.5 The table() Operator

You can use the table() operator to instruct the linker to produce a copy table. A table() operator can be applied to an output section, a GROUP, or a UNION member. The copy table generated for a particular table() specification can be accessed through a symbol specified by you that is provided as an argument to the table() operator. The linker creates a symbol with this name and assigns it the address of the copy table as the value of the symbol. The copy table can then be accessed from the application using the linker-generated symbol.

Each table() specification you apply to members of a given UNION must contain a unique name. If a table() operator is applied to a GROUP, then none of that GROUP's members may be marked with a table() specification. The linker detects violations of these rules and reports them as warnings, ignoring each offending use of the table() specification. The linker does not generate a copy table for erroneous table() operator specifications.

### 7.8.6 Boot-Time Copy Tables

The linker supports a special copy table name, BINIT (or binit), that you can use to create a boot-time copy table. For example, the link command file for the boot-loaded application described in [Section 7.8.2](#) can be rewritten as follows:

```
SECTIONS
{
    .flashcode: { app_tasks.obj(.text) }
    load = FLASH, run = PMEM,
    table(BINIT)
    ...
}
```

For this example, the linker creates a copy table that can be accessed through a special linker-generated symbol, `__binit__`, which contains the list of all object components that need to be copied from their load location to their run location at boot-time. If a link command file does not contain any uses of table(BINIT), then the `__binit__` symbol is given a value of -1 to indicate that a boot-time copy table does not exist for a particular application.

You can apply the table(BINIT) specification to an output section, GROUP, or UNION member. If used in the context of a UNION, only one member of the UNION can be designated with table(BINIT). If applied to a GROUP, then none of that GROUP's members may be marked with table(BINIT). The linker detects violations of these rules and reports them as warnings, ignoring each offending use of the table(BINIT) specification.

### 7.8.7 Using the table() Operator to Manage Object Components

If you have several pieces of code that need to be managed together, then you can apply the same table() operator to several different object components. In addition, if you want to manage a particular object component in multiple ways, you can apply more than one table() operator to it. Consider the link command file excerpt in [Example 7-21](#):

#### Example 7-21. Linker Command File to Manage Object Components

```
SECTIONS
{
    UNION
    {
        .first: { a1.obj(.text), b1.obj(.text), c1.obj(.text) }
        load = EMEM, run = PMEM, table(BINIT), table(_first_ctbl)

        .second: { a2.obj(.text), b2.obj(.text) }
        load = EMEM, run = PMEM, table(_second_ctbl)
    }

    .extra: load = EMEM, run = PMEM, table(BINIT)
    ...
}
```

In this example, the output sections `.first` and `.extra` are copied from external memory (EMEM) into program memory (PMEM) at boot time while processing the BINIT copy table. After the application has started executing its main thread, it can then manage the contents of the overlay using the two overlay copy tables named: `_first_ctbl` and `_second_ctbl`.

### 7.8.8 Copy Table Contents

In order to use a copy table that is generated by the linker, you must be aware of the contents of the copy table. This information is included in a new run-time-support library header file, `cpy_tbl.h`, which contains a C source representation of the copy table data structure that is automatically generated by the linker.

[Example 7-22](#) shows the TMS320C28x copy table header file.

#### Example 7-22. TMS320C28x `cpy_tbl.h` File

```

/*****
/* cpy_tbl.h
/*
/* Copyright (c) 2003 Texas Instruments Incorporated
/*
/* Specification of copy table data structures which can be automatically
/* generated by the linker (using the table() operator in the LCF).
/*
/*
/*****

/*****
/* Copy Record Data Structure
/*****
typedef struct copy_record
{
    unsigned int    src_pgid;
    unsigned int    dst_pgid;
    unsigned long   src_addr;
    unsigned long   dst_addr;
    unsigned long   size;
} COPY_RECORD;

/*****
/* Copy Table Data Structure
/*****
typedef struct copy_table
{
    unsigned int    rec_size;
    unsigned int    num_recs;
    COPY_RECORD     recs[1];
} COPY_TABLE;

/*****
/* Prototype for general purpose copy routine.
/*****
extern void copy_in(COPY_TABLE *tp);

/*****
/* Prototypes for utilities used by copy_in() to move code/data between
/* program and data memory (see cpy_utils.asm for source).
/*****
extern void ddcopy(unsigned long src, unsigned long dst);
extern void dpcopy(unsigned long src, unsigned long dst);
extern void pdcopy(unsigned long src, unsigned long dst);
extern void ppcopy(unsigned long src, unsigned long dst);
    
```

For each object component that is marked for a copy, the linker creates a COPY\_RECORD object for it. Each COPY\_RECORD contains at least the following information for the object component:

- The load page id
- The run page id
- The load address
- The run address
- The size

The linker collects all COPY\_RECORDs that are associated with the same copy table into a COPY\_TABLE object. The COPY\_TABLE object contains the size of a given COPY\_RECORD, the number of COPY\_RECORDs in the table, and the array of COPY\_RECORDs in the table. For instance, in the BINIT example in [Section 7.8.6](#), the .first and .extra output sections will each have their own COPY\_RECORD entries in the BINIT copy table. The BINIT copy table will then look like this:

```
COPY_TABLE __binit__ = { 12, 2,
    { <load page id of .first>,
      <run page id of .first>,
      <load address of .first>,
      <run address of .first>,
      <size of .first> },
    { <load page id of .extra>,
      <run page id of .extra>,
      <load address of .extra>,
      <run address of .extra>,
      <size of .extra> } };
```

### 7.8.9 General Purpose Copy Routine

The cpy\_tbl.h file in [Example 7-22](#) also contains a prototype for a general-purpose copy routine, copy\_in(), which is provided as part of the run-time-support library. The copy\_in() routine takes a single argument: the address of a linker-generated copy table. The routine then processes the copy table data object and performs the copy of each object component specified in the copy table.

The copy\_in() function definition is provided in the cpy\_tbl.c run-time-support source file shown in [Example 7-23](#).

#### Example 7-23. Run-Time-Support cpy\_tbl.c File

```

/*****
/* cpy_tbl.c
/*
/* Copyright (c) 2003 Texas Instruments Incorporated
/*
/* General purpose copy routine. Given the address of a linker-generated
/* COPY_TABLE data structure, effect the copy of all object components
/* that are designated for copy via the corresponding LCF table() operator.
/*****
#include <cpy_tbl.h>
#include <string.h>

/*****
/* COPY_IN()
/*****
void copy_in(COPY_TABLE *tp)
{
    unsigned int i;
    for (i = 0; i < tp->num_recs; i++)
    {
        COPY_RECORD *crp = &tp->recs[i];
        unsigned int cpy_type = 0;
        unsigned int j;

        if (crp->src_pgid) cpy_type += 2;
        if (crp->dst_pgid) cpy_type += 1;

        for (j = 0; j < crp->size; j++)
        {
            switch (cpy_type)

```

**Example 7-23. Run-Time-Support cpy\_tbl.c File (continued)**

```

        {
        case 3: ddcopy(crp->src_addr + j, crp->dst_addr + j); break;
        case 2: dpcopy(crp->src_addr + j, crp->dst_addr + j); break;
        case 1: pdcopy(crp->src_addr + j, crp->dst_addr + j); break;
        case 0: ppcopy(crp->src_addr + j, crp->dst_addr + j); break;
        }
    }
}
    
```

The load (or source) page id and the run (or destination) page id are used to choose which low-level copy routine is called to move a word of data from the load location to the run location. A page id of 0 indicates that the specified address is in program memory, and a page id of 1 indicates that the address is in data memory. The hardware provides special instructions, PREAD and PWRITE, to move code/data into and out of program memory.

**7.8.10 Linker-Generated Copy Table Sections and Symbols**

The linker creates and allocates a separate input section for each copy table that it generates. Each copy table symbol is defined with the address value of the input section that contains the corresponding copy table.

The linker generates a unique name for each overlay copy table input section. For example, table(\_first\_ctbl) would place the copy table for the .first section into an input section called .ovly:\_first\_ctbl. The linker creates a single input section, .binit, to contain the entire boot-time copy table.

[Example 7-24](#) illustrates how you can control the placement of the linker-generated copy table sections using the input section names in the link command file.

**Example 7-24. Controlling the Placement of the Linker-Generated Copy Table Sections**

```

SECTIONS
{
    UNION
    {
        .first: { a1.obj(.text), b1.obj(.text), c1.obj(.text) }
                load = EMEM, run = PMEM, table(BINIT), table(_first_ctbl)

        .second: { a2.obj(.text), b2.obj(.text) }
                load = EMEM, run = PMEM, table(_second_ctbl)
    }

    .extra: load = EMEM, run = PMEM, table(BINIT)

    ...

    .ovly: { } > BMEM
    .binit: { } > BMEM
}
    
```

For the link command file in [Example 7-24](#), the boot-time copy table is generated into a .binit input section, which is collected into the .binit output section, which is mapped to an address in the BMEM memory area. The \_first\_ctbl is generated into the .ovly:\_first\_ctbl input section and the \_second\_ctbl is generated into the .ovly:\_second\_ctbl input section. Since the base names of these input sections match the name of the .ovly output section, the input sections are collected into the .ovly output section, which is then mapped to an address in the BMEM memory area.

If you do not provide explicit placement instructions for the linker-generated copy table sections, they are allocated according to the linker's default placement algorithm.



The linker does not allow other types of input sections to be combined with a copy table input section in the same output section. The linker does not allow a copy table section that was created from a partial link session to be used as input to a succeeding link session.

### 7.8.11 Splitting Object Components and Overlay Management

In previous versions of the linker, splitting sections that have separate load and run placement instructions was not permitted. This restriction was because there was no effective mechanism for you, the developer, to gain access to the load address or run address of each one of the pieces of the split object component. Therefore, there was no effective way to write a copy routine that could move the split section from its load location to its run location.

However, the linker can access both the load address and run address of every piece of a split object component. Using the table() operator, you can tell the linker to generate this information into a copy table. The linker gives each piece of the split object component a COPY\_RECORD entry in the copy table object.

For example, consider an application which has seven tasks. Tasks 1 through 3 are overlaid with tasks 4 through 7 (using a UNION directive). The load placement of all of the tasks is split among four different memory areas (LMEM1, LMEM2, LMEM3, and LMEM4). The overlay is defined as part of memory area PMEM. You must move each set of tasks into the overlay at run time before any services from the set are used.

You can use table() operators in combination with splitting operators, >>, to create copy tables that have all the information needed to move either group of tasks into the memory overlay as shown in [Example 7-25](#). [Example 7-26](#) illustrates a possible driver for such an application.

#### Example 7-25. Creating a Copy Table to Access a Split Object Component

```
SECTIONS
{
    UNION
    {
        .task1to3: { *(.task1), *(.task2), *(.task3) }
                load >> LMEM1 | LMEM2 | LMEM4, table(_task13_ctbl)

        GROUP
        {
            .task4: { *(.task4) }
            .task5: { *(.task5) }
            .task6: { *(.task6) }
            .task7: { *(.task7) }

        } load >> LMEM1 | LMEM3 | LMEM4, table(_task47_ctbl)

    } run = PMEM

    ...

    .ovly: > LMEM4
}
```

**Example 7-26. Split Object Component Driver**

```

#include <cpy_ttbl.h>

extern far COPY_TABLE task13_cttbl;
extern far COPY_TABLE task47_cttbl;

extern void task1(void);
...
extern void task7(void);

main()
{
    ...
    copy_in(&task13_cttbl);
    task1();
    task2();
    task3();
    ...

    copy_in(&task47_cttbl);
    task4();
    task5();
    task6();
    task7();
    ...
}

```

You must declare a COPY\_TABLE object as *far* to allow the overlay copy table section placement to be independent from the other sections containing data objects (such as .bss).

The contents of the .task1to3 section are split in the section's load space and contiguous in its run space. The linker-generated copy table, `_task13_cttbl`, contains a separate COPY\_RECORD for each piece of the split section .task1to3. When the address of `_task13_cttbl` is passed to `copy_in()`, each piece of .task1to3 is copied from its load location into the run location.

The contents of the GROUP containing tasks 4 through 7 are also split in load space. The linker performs the GROUP split by applying the split operator to each member of the GROUP in order. The copy table for the GROUP then contains a COPY\_RECORD entry for every piece of every member of the GROUP. These pieces are copied into the memory overlay when the `_task47_cttbl` is processed by `copy_in()`.

The split operator can be applied to an output section, GROUP, or the load placement of a UNION or UNION member. The linker does not permit a split operator to be applied to the run placement of either a UNION or of a UNION member. The linker detects such violations, emits a warning, and ignores the offending split operator usage.

## 7.9 Linker-Generated CRC Tables

The linker supports an extension to the link command file syntax that enables the verification of code or data by means of a CRC. The linker computes a CRC value for the specified region at link time, and stores that value in target memory such that it is accessible at boot or run time. The application code can then compute the CRC for that region and ensure that the value matches the linker-computed value. The run-time-support library does not supply a routine to calculate CRC values at boot or run time, however a limited reference implementation in C is provided in [Appendix C](#).

### 7.9.1 The `crc_table()` Operator

For any section that should be verified with a CRC, the linker command file must be modified to include the `crc_table()` operator. The specification of a CRC algorithm is optional.

**`crc_table(user_specified_table_name[, algorithm=xxx])`**

The linker uses the CRC algorithm from any specification given in a `crc_table()` operator. If that specification is omitted, the CRC32\_PRIME algorithm is used.

The CRC table generated for a particular `crc_table()` instance can be accessed through the table name provided as an argument to the `crc_table()` operator. The linker creates a symbol with this name and assigns the address of the CRC table as the value of the symbol. The CRC table can then be accessed from the application using the linker-generated symbol.

The `crc_table()` operator can be applied to an output section, a GROUP, a GROUP member, a UNION, or a UNION member. If applied to a GROUP or UNION, the operator is applied to each member of the GROUP or UNION.

You can include calls in your application to a routine that will verify CRC values for relevant sections. You must provide this routine. See below for more details on the data structures and suggested interface.

The linker includes CRC table information in the map file. This includes the CRC value as well as the algorithm used for the calculation.

### 7.9.2 Restrictions

It is important to note that the CRC generator used by the linker is parameterized as described in the `crc_tbl.h` header file (see [Example 7-31](#)). Any CRC calculation routine employed outside of the linker must function in the same way to ensure matching CRC values. The linker cannot detect a mismatch in the parameters. To understand these parameters, see *A Painless Guide to CRC Error Detection Algorithms* by Ross Williams, which is likely located at [http://www.ross.net/crc/download/crc\\_v3.txt](http://www.ross.net/crc/download/crc_v3.txt).

Only the CRC algorithm names and identifiers specified in `crc_tbl.h` are supported. All other names and ID values are reserved for future use.

The supported CRC algorithms are specified by published standards, including the Powerline Related Intelligent Metering Evolution (PRIME) standard and IEEE 802.15.4. The Viterbi, Complex Math and CRC Unit (VCU) module available on some C28x devices provides efficient instructions for CRC calculation using these algorithms. You might want to take advantage of the VCU module to compute the CRC at run time. For details, see the VCU module documentation in *TMS320x28xx, 28xxx DSP Peripherals Reference Guide*.

There are also restrictions which will be enforced by the linker.

- CRC can only be requested at final link time.
- CRC can only be applied to initialized sections.
- CRC can be requested for load addresses only.
- Certain restrictions also apply to CRC table names. For example, BINIT may not be used as a CRC table name.

### 7.9.3 Examples

The `crc_table()` operator is similar in syntax to the `table()` operator used for copy tables. A few simple examples of link command files follow.

#### Example 7-27. Using `crc_table()` Operator to Compute the CRC Value for `.text` Data

```
...
SECTIONS
{
  ...
  .section_to_be_verified: {a1.obj(.text)} crc_table(_my_crc_table_for_a1)
}
```

[Example 7-27](#) defines a section named “.section\_to\_be\_verified”, which contains the `.text` data from the `a1.obj` file. The `crc_table()` operator requests that the linker compute the CRC value for the `.text` data and store that value in a table named “`my_crc_table_for_a1`”. This table will contain all the information needed to invoke a user-supplied CRC calculation routine, and verify that the CRC calculated at run time matches the linker-generated CRC. The table can be accessed from application code using the symbol `my_crc_table_for_a1`, which should be declared of type “extern `CRC_TABLE`”. This symbol will be defined by the linker. The application code might resemble the following.

```
#include "crc_tbl.h"

extern CRC_TABLE my_crc_table_for_a1;

verify_a1_text_contents()
{
  ...
  /* Verify CRC value for .text sections of a1.obj. */
  if (my_check_CRC(&my_crc_table_for_a1)) puts("OK");
}
```

The `my_check_CRC()` routine is discussed in detail in [Section 7.9.4, Example 7-32](#).

#### Example 7-28. Specifying an Algorithm in the `crc_table()` Operator

```
...
SECTIONS
{
  ...
  .section_to_be_verified_2: {b1.obj(.text)} load=SLOW_MEM, run=FAST_MEM,
    crc_table(_my_crc_table_for_b1, algorithm=CRC8_PRIME)

  .TI.crctab: > CRCMEM
}
...
```

In [Example 7-28](#), the CRC algorithm is specified in the `crc_table()` operator. The specified algorithm is used to compute the CRC of the text data from `b1.obj`. The CRC tables generated by the linker are created in the special section `.TI.crctab`, which can be placed in the same manner as other sections. In this case, the CRC table `_my_crc_table_for_b1` is created in section `.TI.crctab:_my_crc_table_for_b1`, and that section is placed in the `CRCMEM` memory region.

**Example 7-29. Using a Single Table for Multiple Sections**

```

...
SECTIONS
{
    .section_to_be_verified_1: {a1.obj(.text)}
        crc_table(_my_crc_table_for_a1_and_c1)

    .section_to_be_verified_3: {c1.obj(.text)}
        crc_table(_my_crc_table_for_a1_and_c1, algorithm=CRC16_802_15_4)
}
...

```

In [Example 7-29](#) the same identifier, `_my_crc_table_for_a1_and_c1`, is specified for both `a1.obj` and `c1.obj`. The linker creates a single table that contains entries for both text sections. Multiple CRC algorithms can occur in a single table. In this case, `_my_crc_table_for_a1_and_c1` contains an entry for the text data from `a1.obj` using the default CRC algorithm, and an entry for the text data from `c1.obj` using the `CRC16_802_15_4` algorithm. The order of the entries is unspecified.

**Example 7-30. Applying the `crc_table()` Operator to a GROUP or UNION**

```

...
SECTIONS
{
    UNION
    {
        section1: {} crc_table(table1, algorithm=CRC16_ALT)
        section2:
    } crc_table(table2, algorithm=CRC32_PRIME)
}

```

When the `crc_table()` operator is applied to a GROUP or a UNION, the linker applies the table specification to the members of the GROUP or UNION.


In [Example 7-30](#) the linker creates two CRC tables, `table1` and `table2`. `table1` contains one entry for `section1`, using algorithm `CRC16_ALT`. Because both sections are members of the UNION, `table2` contains entries for `section1` and `section2`, using algorithm `CRC32_PRIME`. The order of the entries in `table2` is unspecified.

### 7.9.4 Interface

The CRC generation function uses a mechanism similar to the copy table functionality. Using the syntax shown above in the linker command file allows specification of code/data sections that have CRC values computed and stored in the run time image. This section describes the table data structures created by the linker, and how to access this information from application code.

The CRC tables contain entries as detailed in the run-time-support header file `crc_tbl.h`, as illustrated in [Figure 7-7](#).

**Figure 7-7. CRC\_TABLE Conceptual Model**

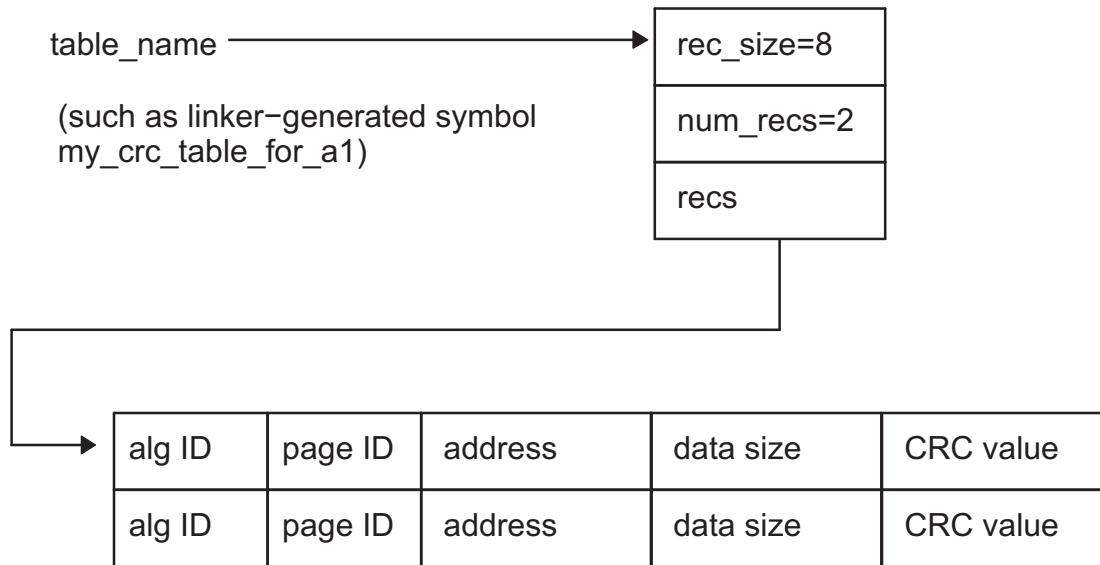

The `crc_tbl.h` header file is included in [Example 7-31](#). This file specifies the C structures created by the linker to manage CRC information. It also includes the specifications of the supported CRC algorithms. A full discussion of CRC algorithms is beyond the scope of this document, and the interested reader should consult the referenced document for a description of the fields shown in the table. The following fields are relevant to this document.

- Name – text identifier of the algorithm, used by the programmer in the link command file.
- ID – the numeric identifier of the algorithm, stored by the linker in the `crc_alg_ID` member of each table entry.
- Order – the number of bits used by the CRC calculation.
- Polynomial – used by the CRC computation engine.
- Initial Value – the initial value given to the CRC computation engine.

**Example 7-31. The CRC Table Header, `crc_tbl.h`**

```

/*****
/* crc_tbl.h
/*
/* PRELIMINARY - SUBJECT TO CHANGE
/*
/* Specification of CRC table data structures which can be automatically
/* generated by the linker (using the crc_table() operator in the linker
/* command file).
*****/
/*****
/*
/* The CRC generator used by the linker is based on concepts from the
/* document:
/* "A Painless Guide to CRC Error Detection Algorithms"
/*
/* Author : Ross Williams (ross@guest.adelaide.edu.au.).
/* Date : 3 June 1993.
/* Status : Public domain (C code).
/*
/* Description : For more information on the Rocksoft^tm Model CRC
/* Algorithm, see the document titled "A Painless Guide to CRC Error
/* Detection Algorithms" by Ross Williams (ross@guest.adelaide.edu.au.).
/* This document is likely to be in "ftp.adelaide.edu.au/pub/rocksoft" or
/* at http://www.ross.net/crc/download/crc_v3.txt.
/*
/* Note: Rocksoft is a trademark of Rocksoft Pty Ltd, Adelaide, Australia.
*****/

```

**Example 7-31. The CRC Table Header, `crc_tbl.h` (continued)**

```

#include <stdint.h>          /* For uintXX_t */

/*****
/* CRC Algorithm Specifiers                                     */
/*
/* The following specifications, based on the above cited document, are used */
/* by the linker to generate CRC values.                               */
/*
/*
/* ID Name                Order Polynomial Initial Ref Ref CRC XOR Zero */
/* Value In Out Value Pad */
/*-----*/
/* 0, "CRC32_PRIME",      32, 0x04c11db7, 0x00000000, 0, 0, 0x00000000, 1 */
/* 1, "CRC16_802_15_4",  16, 0x00001021, 0x00000000, 0, 0, 0x00000000, 1 */
/* 2, "CRC16_ALT",        16, 0x00008005, 0x00000000, 0, 0, 0x00000000, 1 */
/* 3, "CRC8_PRIME",       8, 0x00000007, 0x00000000, 0, 0, 0x00000000, 1 */
/*
/*
/* Users should specify the name, such as CRC32_PRIME, in the linker command */
/* file. The resulting CRC_RECORD structure will contain the corresponding */
/* ID value in the crc_alg_ID field.                                       */
/*****
#define CRC32_PRIME        0 /* Poly = 0x04c11db7 */ /* DEFAULT ALGORITHM */
#define CRC16_802_15_4    1 /* Poly = 0x00001021 */
#define CRC16_ALT          2 /* Poly = 0x00008005 */
#define CRC8_PRIME        3 /* Poly = 0x00000007 */

/*****
/* CRC Record Data Structure                                     */
/* NOTE: The list of fields and the size of each field        */
/* varies by target and memory model.                         */
/*****
typedef struct crc_record
{
uint16_t      crc_alg_ID; /* CRC algorithm ID */
uint16_t      page_id;   /* page number of data */
uint32_t      addr;      /* Starting address */
uint32_t      size;      /* size of data in 16-bit units */
uint32_t      crc_value;
} CRC_RECORD;

/*****
/* CRC Table Data Structure                                   */
/*****
typedef struct crc_table
{
uint16_t      rec_size;
uint16_t      num_recs;
CRC_RECORD     recs[1];
} CRC_TABLE;
    
```

In the `CRC_TABLE` struct, the array `recs[1]` is dynamically sized by the linker to accommodate the number of records contained in the table (`num_recs`). A user-supplied routine to verify CRC values should take a table name and check the CRC values for all entries in the table. An outline of such a routine is shown in [Example 7-32](#).

**Example 7-32. General Purpose CRC Check Routine**

```

/*****
/* General purpose CRC check routine. Given the address of a */
/* linker-generated CRC_TABLE data structure, verify the CRC */
/* of all object components that are designated with the */
/* corresponding LCF crc_table() operator.                 */
/*****
#include <crc_tbl.h>
    
```

**Example 7-32. General Purpose CRC Check Routine (continued)**

```

/*****
/* MY_CHECK_CRC() - returns 1 if CRCs match, 0 otherwise */
/*****
unsigned int my_check_CRC(CRC_TABLE *tp)
{
    int i;

    for (i = 0; i < tp-> num_recs; i++)
    {
        CRC_RECORD crc_rec = tp->recs[i];


        /*****
        /* COMPUTE CRC OF DATA STARTING AT crc_rec.addr */
        /* FOR crc_rec.size UNITS. USE */
        /* crc_rec.crc_alg_ID to select algorithm. */
        /* COMPARE COMPUTED VALUE TO crc_rec.crc_value. */
        /*****
    }
    if all CRCs match, return 1;
    else return 0;
}
    
```

**7.9.4.1 A Special Note Regarding 16-Bit char**

C2000 is a 16-bit word addressable target, which means that its char data type is 16 bits. However, CRC algorithms operate on 8-bit units, which we shall call "octets". When computing a CRC on a C2000 section, the data cannot be fed to the CRC loop char-by-char, it must be fed octet-by-octet.

The data needs to be fed to the CRC in the order it would if the C2000 were a 8-bit machine, so we need to consider which of the two octets in the char to feed first. C2000 is a little-endian machine, but it does not make sense to talk about the endianness of the bits in an indivisible unit such as char. By convention, we consider the data in a char to be stored least-significant octet first, then most-significant octet.

Abstractly, the CRC algorithm computes the CRC bit-by-bit in the order the bits appear in the data. For a machine with 8-bit chars, this order is considered to proceed from the MSB through the LSB of each byte starting with byte 0. However, for C2000, the CRC starts with the MSB through LSB of the LEAST significant octet of byte 0, then the MSB through LSB of the MOST significant octet of byte 0, and so on for the rest of the bytes.

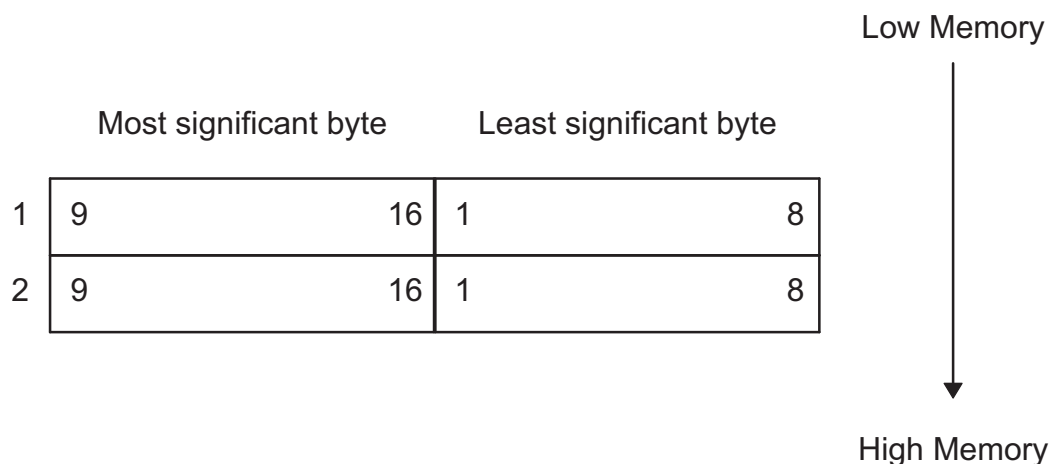**Figure 7-8. CRC Data Flow Example**




## 7.10 Partial (Incremental) Linking

An output file that has been linked can be linked again with additional modules. This is known as *partial linking* or *incremental linking*. Partial linking allows you to partition large applications, link each part separately, and then link all the parts together to create the final executable program.

Follow these guidelines for producing a file that you will relink:

- The intermediate files produced by the linker *must* have relocation information. Use the `--relocatable` option when you link the file the first time. (See [Section 7.4.2.2.](#))
- Intermediate files *must* have symbolic information. By default, the linker retains symbolic information in its output. Do not use the `--no_sym_table` option if you plan to relink a file, because `--no_sym_table` strips symbolic information from the output module. (See [Section 7.4.20.](#))
- Intermediate link operations should be concerned only with the formation of output sections and not with allocation. All allocation, binding, and MEMORY directives should be performed in the final link.
- If the intermediate files have global symbols that have the same name as global symbols in other files and you want them to be treated as static (visible only within the intermediate file), you must link the files with the `--make_static` option (see [Section 7.4.15.1.](#))
- If you are linking C code, do not use `--ram_model` or `--rom_model` until the final linker. Every time you invoke the linker with the `--ram_model` or `--rom_model` option, the linker attempts to create an entry point. (See [Section 7.4.22.](#))

The following example shows how you can use partial linking:

**Step 1:** Link the file `file1.com`; use the `--relocatable` option to retain relocation information in the output file `tempout1.out`.

```
c12000 -v28 --run_linker --relocatable --output_file=tempout1 file1.com
```

`file1.com` contains:

```
SECTIONS
{
    ss1: {
        f1.obj
        f2.obj
        .
        .
        .
        fn.obj
    }
}
```

**Step 2:** Link the file `file2.com`; use the `--relocatable` option to retain relocation information in the output file `tempout2.out`.

```
c12000 -v28 --run_linker --relocatable --output_file=tempout2 file2.com
```

`file2.com` contains:

```
SECTIONS
{
    ss2: {
        g1.obj
        g2.obj
        .
        .
        .
        gn.obj
    }
}
```

**Step 3:** Link `tempout1.out` and `tempout2.out`.

```
c12000 -v28 --run_linker --map_file=final.map --output_file=final.out tempout1.out
tempout2.out
```

## 7.11 Linking C/C++ Code

The C/C++ compiler produces assembly language source code that can be assembled and linked. For example, a C program consisting of modules prog1, prog2, etc., can be assembled and then linked to produce an executable file called prog.out:

```
cl2000 -v28 --run_linker --rom_model --output_file prog.out prog1.obj prog2.obj ... rts2800.lib
```

The `--rom_model` option tells the linker to use special conventions that are defined by the C/C++ environment.

The archive libraries shipped by TI contain C/C++ run-time-support functions.

C, C++, and mixed C and C++ programs can use the same run-time-support library. Run-time-support functions and variables that can be called and referenced from both C and C++ will have the same linkage.

For more information about the TMS320C28x C/C++ language, including the run-time environment and run-time-support functions, see the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.

### 7.11.1 Run-Time Initialization

All C/C++ programs must be linked with code to initialize and execute the program, called a *bootstrap* routine, also known as the *boot.obj* object module. The symbol `_c_int00` is defined as the program entry point and is the start of the C boot routine in *boot.obj*; referencing `_c_int00` ensures that *boot.obj* is automatically linked in from the run-time-support library. When a program begins running, it executes *boot.obj* first. The *boot.obj* symbol contains code and data for initializing the run-time environment and performs the following tasks:

- Sets up the system stack and configuration registers
- Processes the run-time *.cinit* initialization table and autoinitializes global variables (when the linker is invoked with the `--rom_model` option)
- Disables interrupts and calls `_main`

The run-time-support object libraries contain *boot.obj*. You can:

- Use the archiver to extract *boot.obj* from the library and then link the module in directly.
- Include the appropriate run-time-support library as an input file (the linker automatically extracts *boot.obj* when you use the `--ram_model` or `--rom_model` option).

### 7.11.2 Object Libraries and Run-Time Support

The *TMS320C28x Optimizing C/C++ Compiler User's Guide* describes additional run-time-support functions that are included in *rts.src*. If your program uses any of these functions, you must link the appropriate run-time-support library with your object files.

You can also create your own object libraries and link them. The linker includes and links only those library members that resolve undefined references.

### 7.11.3 Setting the Size of the Stack and Heap Sections

The C/C++ language uses two uninitialized sections called *.system* and *.stack* for the memory pool used by the `malloc( )` functions and the run-time stacks, respectively. You can set the size of these by using the `--heap_size` or `--stack_size` option and specifying the size of the section as a 4-byte constant immediately after the option. If the options are not used, the default size of the heap is 1K words and the default size of the stack is 1K words.

See [Section 7.4.12](#) for setting heap sizes and [Section 7.4.25](#) for setting stack sizes.

---

#### Linking the *.stack* Section

**NOTE:** The *.stack* section must be linked into the low 64K of data memory (PAGE 1) since the SP is a 16-bit register and cannot access memory locations beyond the first 64K.

---


### 7.11.4 Autoinitialization of Variables at Run Time

Autoinitializing variables at run time is the default method of autoinitialization. To use this method, invoke the linker with the `--rom_model` option.

Using this method, the `.cinit` section is loaded into memory along with all the other initialized sections. The linker defines a special symbol called `cinit` that points to the beginning of the initialization tables in memory. When the program begins running, the C boot routine copies data from the tables (pointed to by `.cinit`) into the specified variables in the `.bss` section. This allows initialization data to be stored in slow external memory and copied to fast external memory each time the program starts.

Figure 7-9 illustrates autoinitialization at run time. Use this method in any system where your application runs from code burned into slow external memory.

Figure 7-9. Autoinitialization at Run Time

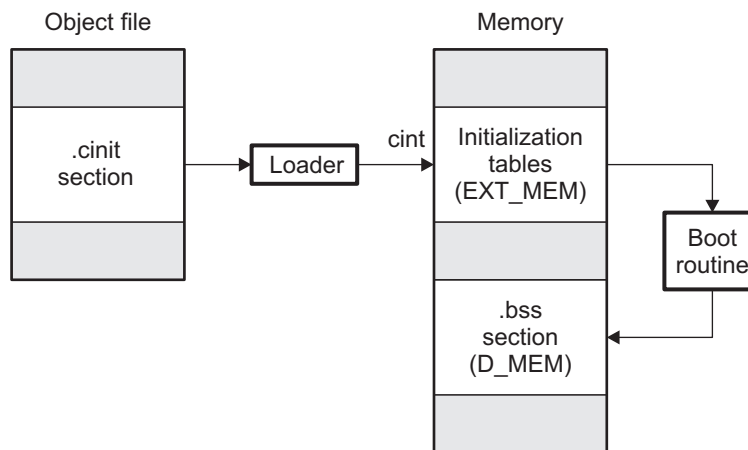

### 7.11.5 Initialization of Variables at Load Time


Initialization of variables at load time enhances performance by reducing boot time and by saving the memory used by the initialization tables. To use this method, invoke the linker with the `--ram_model` option.

When you use the `--ram_model` linker option, the linker sets the `STYP_COPY` bit in the `.cinit` section's header. This tells the loader not to load the `.cinit` section into memory. (The `.cinit` section occupies no space in the memory map.) The linker also sets the `cinit` symbol to `-1` (normally, `cinit` points to the beginning of the initialization tables). This indicates to the boot routine that the initialization tables are not present in memory; accordingly, no run-time initialization is performed at boot time.

A loader must be able to perform the following tasks to use initialization at load time:

- Detect the presence of the `.cinit` section in the object file.
- Determine that `STYP_COPY` is set in the `.cinit` section header, so that it knows not to copy the `.cinit` section into memory.
- Understand the format of the initialization tables.

Figure 7-10 illustrates the initialization of variables at load time.

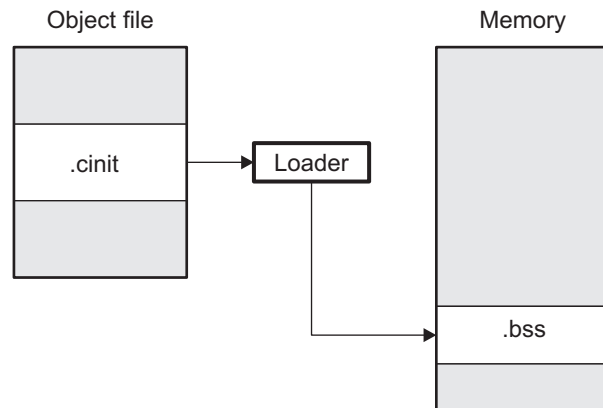**Figure 7-10. Initialization at Load Time**


### 7.11.6 The `--rom_model` and `--ram_model` Linker Options

The following list outlines what happens when you invoke the linker with the `--ram_model` or `--rom_model` option.

- The symbol `_c_int00` is defined as the program entry point. The `_c_int00` symbol is the start of the C boot routine in `boot.obj`; referencing `_c_int00` ensures that `boot.obj` is automatically linked in from the appropriate run-time-support library.
- The `.cinit` output section is padded with a termination record to designate to the boot routine (autoinitialize at run time) or the loader (initialize at load time) when to stop reading the initialization tables.
- When you initialize at load time (`--ram_model` option):
  - The linker sets `cinit` to `-1`. This indicates that the initialization tables are not in memory, so no initialization is performed at run time.
  - The `STYP_COPY` flag (`0010h`) is set in the `.cinit` section header. `STYP_COPY` is the special attribute that tells the loader to perform initialization directly and not to load the `.cinit` section into memory. The linker does not allocate space in memory for the `.cinit` section.
- When you autoinitialize at run time (`--rom_model` option), the linker defines `cinit` as the starting address of the `.cinit` section. The C boot routine uses this symbol as the starting point for autoinitialization.

---

#### Boot Loader

**NOTE:** A loader is not included as part of the C/C++ compiler tools. Use the TMS320C28x Code Composer Studio as a loader.

---

## 7.12 Linker Example

This example links three object files named demo.obj, ctrl.obj, and tables.obj and creates a program called demo.out.

Assume that target memory has the following program memory configuration:

| Address Range      |                      | Contents               |
|--------------------|----------------------|------------------------|
| <b>Memory Type</b> | <b>Address Range</b> | <b>Contents</b>        |
| Program            | 0x0f0000 to 0x3fffbf | SLOW_MEM               |
|                    | 0x3fffc0 to 0x3ffff  | Interrupt vector table |
| Data               | 0x000040 to 0x0001ff | Stack                  |
|                    | 0x000200 to 0x0007ff | FAST_MEM_1             |
|                    | 0x3ed000 to 0x3effff | FAST_MEM_2             |

The output sections are constructed in the following manner:

- Executable code, contained in the .text sections of demo.obj, fft.obj, and tables.obj, is linked into program memory ROM.
- Variables, contained in the var\_defs section of demo.obj, are linked into data memory in block FAST\_MEM\_2.
- Tables of coefficients in the .data sections of demo.obj, tables.obj, and fft.obj are linked into FAST\_MEM\_1. A hole is created with a length of 100 and a fill value of 0x07A1C.
- The xy section from demo.obj, which contains buffers and variables, is linked by default into page 1 of the block STACK, since it is not explicitly linked.
- Executable code, contained in the .text sections of demo.obj, fft.obj, and tables.obj, is linked into program memory ROM.
- Variables, contained in the var\_defs section of demo.obj, are linked into data memory in block FAST\_MEM\_2.
- Tables of coefficients in the .data sections of demo.obj, tables.obj, and fft.obj are linked into FAST\_MEM\_1. A hole is created with a length of 100 and a fill value of 0x07A1C.
- The xy section from demo.obj, which contains buffers and variables, is linked by default into page 1 of the block STACK, since it is not explicitly linked.

[Example 7-33](#) shows the link command file for this example. [Example 7-34](#) shows the map file.

**Example 7-33. Linker Command File, demo.cmd**

```

/*****
/****          Specify Linker Options          ****
/****          ****
/*****
--output_file=demo.out      /* Name the output file      */
--map_file=demo.map        /* Create an output map      */

/*****
/****          Specify the Input Files          ****
/****          ****
/*****

demo.obj
fft.obj
tables.obj

/*****
/****          Specify the Memory Configuration      ****
/****          ****
/*****

MEMORY
{
    PAGE 0: SLOW_MEM   (R):   origin=0x3f0000   length=0x00ffc0
           VECTORS    (R):   origin=0x3fffc0   length=0x000040

    PAGE 1: STACK     (RW):  origin=0x000040   length=0x0001c0
           FAST_MEM_1 (RW):  origin=0x000200   length=0x000600
           FAST_MEM_2 (RW):  origin=0x3ed000   length=0x003000
}

/*****
/****          Specify the Output Sections          ****
/****          ****
/*****

SECTIONS
{
    vectors      : { } > VECTORS page=0
    .text        : load = SLOW_MEM, page = 0 /* link in .text */

    .data        : fill = 07A1Ch, Load=FAST_MEM_1, page=1
    {
        tables.obj(.data)          /* .data input */
        fft.obj(.data)            /* .data input */
        . += 100h; /* create hole, fill with 0x07A1C */
    }

    var_defs     : { } > FAST_MEM_2 page=1 /* defs in RAM */
    .bss         : page=1, fill=0x0ffff /*.bss fill and link*/
}

/*****
/****          End of Command File          ****
/****          ****
/*****

```

Invoke the linker by entering the following command:

```
c12000 -v28 --run_linker demo.cmd
```

This creates the map file shown in [Example 7-34](#) and an output file called demo.out that can be run on a TMS320C28x.

**Example 7-34. Output Map File, demo.map**

```

OUTPUT FILE NAME: <demo.out>
ENTRY POINT SYMBOL: 0

MEMORY CONFIGURATION
-----
name          origin      length      attributes  fill
-----
PAGE 0:      SLOW_MEM    003f0000   0000ffc0   R
             VECTORS    003fffc0   00000040   R
PAGE 1:      STACK      00000040   000001c0   RW
             FAST_MEM_1  00000200   00000600   RW
             FAST_MEM_2  003ed000   00003000   RW

SECTION ALLOCATION MAP
output
section      page      origin      length      attributes/
-----
input sections
-----
vectors      0         003fffc0   00000000   UNINITIALIZED
.text        0         003f0000   0000001a
             003f0000   0000000e   demo.obj (.text)
             003f000e   00000000   tables.obj (.text)
             003fo00e   0000000c   fft.obj (.text)
var_defs     1         003ed000   00000002
             003ed000   00000002   demo.obj (var_defs)
.data        1         00000200   0000010c
             00000200   00000004   tables.obj (.data)
             00000204   00000000   fft.obj (.data)
             00000204   00000100   --HOLE-- [fill = 7alc]
             00000304   00000008   demo.obj (.data)
.bss         0         00000040   00000069
             00000040   00000068   demo.obj (.bss) [fill=ffff]
             000000a8   00000000   fft.obj (.bss)
             000000a8   00000001   tables.obj (.bss) [fill=ffff]
xy           1         000000a9   00000014   UNINITIALIZED
             000000a9   00000014   demo.obj (xy)

GLOBAL SYMBOLS: SORTED ALPHABETICALLY BY Name

address      name
-----
00000040     .bss
00000200     .data
003f0000     .text
00000040     ARRAY
000000a8     TEMP
00000040     __bss__
00000200     __data__
0000030c     __edata__
000000a9     __end__
003f001a     __etext__
003f0000     __text__
003f000e     _func1
003f0000     _main
0000030c     edata
000000a9     end
003f001a     etext

GLOBAL SYMBOLS: SORTED BY Symbol Address

address      name
-----
00000040     ARRAY
00000040     __bss__
00000040     .bss
000000a8     TEMP
000000a9     __end__
000000a9     end
00000200     __data__
00000200     .data
0000030c     edata
    
```

**Example 7-34. Output Map File, demo.map (continued)**

```
0000030c  ___edata__  
003f0000  _main  
003f0000  .text  
003f0000  ___text__  
003f000e  _func1  
003f001a  etext  
003f001a  ___etext__
```

```
[16 symbols]
```



## Absolute Lister Description

---

---


The TMS320C28x absolute lister is a debugging tool that accepts linked object files as input and creates .abs files as output. These .abs files can be assembled to produce a listing that shows the absolute addresses of object code. Manually, this could be a tedious process requiring many operations; however, the absolute lister utility performs these operations automatically.

| Topic                                          | Page       |
|------------------------------------------------|------------|
| <b>8.1 Producing an Absolute Listing .....</b> | <b>242</b> |
| <b>8.2 Invoking the Absolute Lister .....</b>  | <b>243</b> |
| <b>8.3 Absolute Lister Example .....</b>       | <b>244</b> |

## 8.1 Producing an Absolute Listing

Figure 8-1 illustrates the steps required to produce an absolute listing.

**Figure 8-1. Absolute Lister Development Flow**

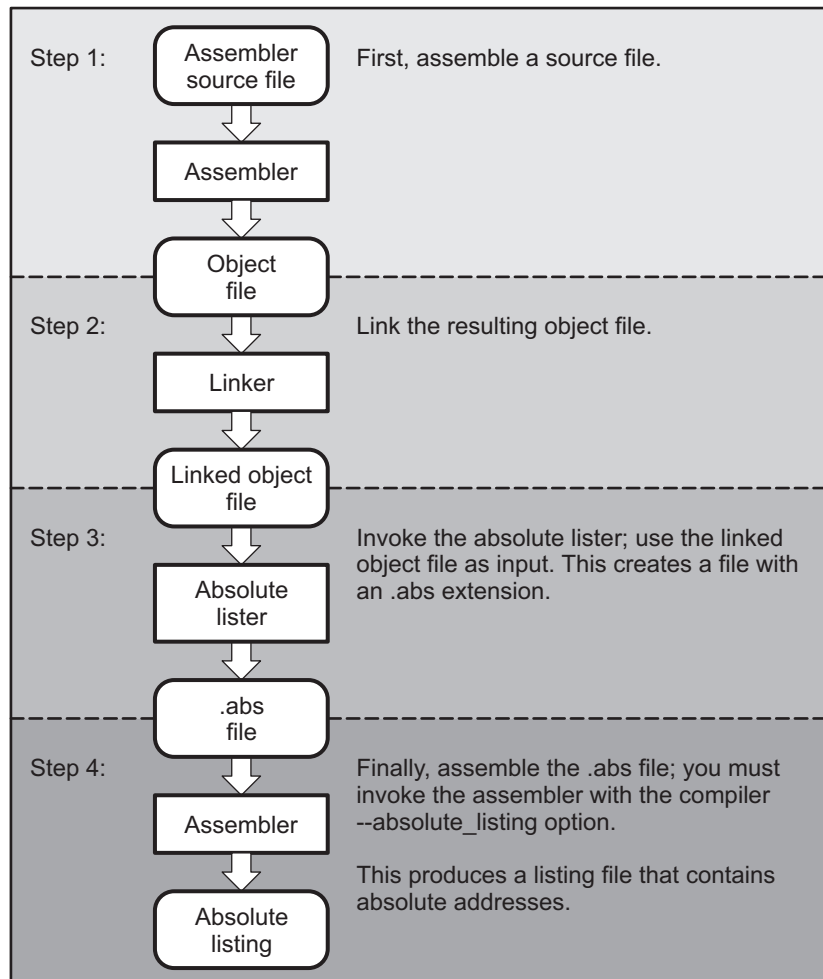

## 8.2 Invoking the Absolute Lister

The syntax for invoking the absolute lister is:

**abs2000** [-options] *input file*

**abs2000** is the command that invokes the absolute lister.

**options** identifies the absolute lister options that you want to use. Options are not case sensitive and can appear anywhere on the command line following the command. Precede each option with a hyphen (-). The absolute lister options are as follows:

- e** enables you to change the default naming conventions for filename extensions on assembly files, C source files, and C header files. The valid options are:
  - ea [.]asmext for assembly files (default is .asm)
  - ec [.]cext for C source files (default is .c)
  - eh [.]hext for C header files (default is .h)
  - ep [.]pext for CPP source files (default is cpp)
 The . in the extensions and the space between the option and the extension are optional.
- fs** specifies a directory for the output files. For example, to place the .abs file generated by the absolute lister in C:\ABSDIR use this command:  

```
abs2000 -fs C:\ABSDIR filename.out
```

 If the -fs option is not specified, the absolute lister generates the .abs files in the current directory.
- q** (quiet) suppresses the banner and all progress information.

**input file** names the linked object file. If you do not supply an extension, the absolute lister assumes that the input file has the default extension .out. If you do not supply an input filename when you invoke the absolute lister, the absolute lister prompts you for one.

The absolute lister produces an output file for each file that was linked. These files are named with the input filenames and an extension of .abs. Header files, however, do not generate a corresponding .abs file.

Assemble these files with the --absolute\_listing assembler option as follows to create the absolute listing:

**cl2000 -v28 --absolute\_listing filename .abs**

The -e options affect both the interpretation of filenames on the command line and the names of the output files. They should always precede any filename on the command line.

The -e options are useful when the linked object file was created from C files compiled with the debugging option (--symdebug:dwarf compiler option). When the debugging option is set, the resulting linked object file contains the name of the source files used to build it. In this case, the absolute lister does not generate a corresponding .abs file for the C header files. Also, the .abs file corresponding to a C source file uses the assembly file generated from the C source file rather than the C source file itself.

For example, suppose the C source file hello.csr is compiled with the debugging option set; the debugging option generates the assembly file hello.s. The hello.csr file includes hello.hsr. Assuming the executable file created is called hello.out, the following command generates the proper .abs file:

```
abs2000 -ea s -ec csr -eh hsr hello.out
```

An .abs file is not created for hello.hsr (the header file), and hello.abs includes the assembly file hello.s, not the C source file hello.csr.

### 8.3 Absolute Lister Example

This example uses three source files. The files module1.asm and module2.asm both include the file globals.def.

#### module1.asm

```
.text
.bss    array,100
.bss    dflag, 2
.copy   globals.def
MOV     ACC, #offset
MOV     ACC, #dflag
```

#### module2.asm

```
.bss    offset, 2
.copy   globals.def
MOV     ACC, #offset
MOV     ACC, #array
```

#### globals.def

```
.global dflag
.global array
.global offset
```

The following steps create absolute listings for the files module1.asm and module2.asm:

**Step 1:** First, assemble module1.asm and module2.asm:

```
c12000 -v28 module1
c12000 -v28 module2
```

This creates two object files called module1.obj and module2.obj.

**Step 2:** Next, link module1.obj and module2.obj using the following linker command file, called bttest.cmd:

```
--output_file=bttest.out
--map_file=bttest.map
module1.obj
module2.obj
MEMORY
{
    PAGE 0:    ROM:    origin=2000h    length=2000h
    PAGE 1:    RAM:    origin=8000h    length=8000h
}
SECTIONS
{
    .data:    >RAM
    .text:    >ROM
    .bss:     >RAM
}
}
```

**Invoke the linker:**

```
c12000 -v28 --run_linker bttest.cmd
```

This command creates an executable object file called bttest.out; use this new file as input for the absolute lister.

Step 3: Now, invoke the absolute lister:

```
abs2000 bttest.out
```

This command creates two files called module1.abs and module2.abs:

**module1.abs:**

```
.nolist
array      .setsym      000008000h
dflag     .setsym      000008064h
offset    .setsym      000008066h
.data     .setsym      000008000h
edata     .setsym      000008000h
.text     .setsym      000002000h
etext    .setsym      000002008h
.bss      .setsym      000008000h
end       .setsym      000008068h
         .setsect     ".text",000002000h
         .setsect     ".data",000008000h
         .setsect     ".bss",000008000h
         .list
         .text
         .copy      "module1.asm"
```

**module2.abs:**

```
.nolist
array      .setsym      000008000h
dflag     .setsym      000008064h
offset    .setsym      000008066h
.data     .setsym      000008000h
edata     .setsym      000008000h
.text     .setsym      000002000h
etext    .setsym      000002008h
.bss      .setsym      000008000h
end       .setsym      000008068h
         .setsect     ".text",000002004h
         .setsect     ".data",000008000h
         .setsect     ".bss",000008066h
         .list
         .text
         .copy      "module2.asm"
```

These files contain the following information that the assembler needs for Step 4:

- They contain `.setsym` directives, which equate values to global symbols. Both files contain global equates for the symbol `dflag`. The symbol `dflag` was defined in the file `globals.def`, which was included in `module1.asm` and `module2.asm`.
- They contain `.setsect` directives, which define the absolute addresses for sections.
- They contain `.copy` directives, which defines the assembly language source file to include.

The `.setsym` and `.setsect` directives are useful only for creating absolute listings, not normal assembly.

Step 4: Finally, assemble the `.abs` files created by the absolute lister (remember that you must use the `--absolute_listing` option when you invoke the assembler):

```
cl2000 -v28 --absolute_listing module1.abs
cl2000 -v28 --absolute_listing module2.abs
```

This command sequence creates two listing files called `module1.lst` and `module2.lst`; no object code is produced. These listing files are similar to normal listing files; however, the addresses shown are absolute addresses.

The absolute listing files created are `module1.lst` (see [Example 8-1](#)) and `module2.lst` (see [Example 8-2](#)).

**Example 8-1. module1.lst**

```

module1.abs                                     PAGE    1

 15 002000          .text
 16                .copy      "module1.asm"
 1 002000          .text
 2 008000          .bss    array,100
 3 008064          .bss    dflag,2
 4                .copy    globals.def
 1                .global  dflag
 2                .global  array
 3                .global  offset
 5 002000 FF20!    MOV     ACC,#offset
 002001 8066
 6 002002 FF20-    MOV     ACC,#dflag
 002003 8064

```

**Example 8-2. module2.lst**

```

module2.abs                                     PAGE    1

 15 002004          .text
 16                .copy      "module2.asm"
 1 008066          .bss    offset,2
 2                .copy    globals.def
 1                .global  dflag
 2                .global  array
 3                .global  offset
 3 002004 FF20-    MOV     ACC,#offset
 002005 8066
 4 002006 FF20!    MOV     ACC,#array
 002007 8000

```

## ***Cross-Reference Lister Description***

---

---


The TMS320C28x cross-reference lister is a debugging tool. This utility accepts linked object files as input and produces a cross-reference listing as output. This listing shows symbols, their definitions, and their references in the linked source files.

| <b>Topic</b>                                         | <b>Page</b> |
|------------------------------------------------------|-------------|
| <b>9.1 Producing a Cross-Reference Listing .....</b> | <b>248</b>  |
| <b>9.2 Invoking the Cross-Reference Lister .....</b> | <b>249</b>  |
| <b>9.3 Cross-Reference Listing Example .....</b>     | <b>250</b>  |

## 9.1 Producing a Cross-Reference Listing

Figure 9-1 illustrates the steps required to produce a cross-reference listing.

**Figure 9-1. The Cross-Reference Lister Development Flow**

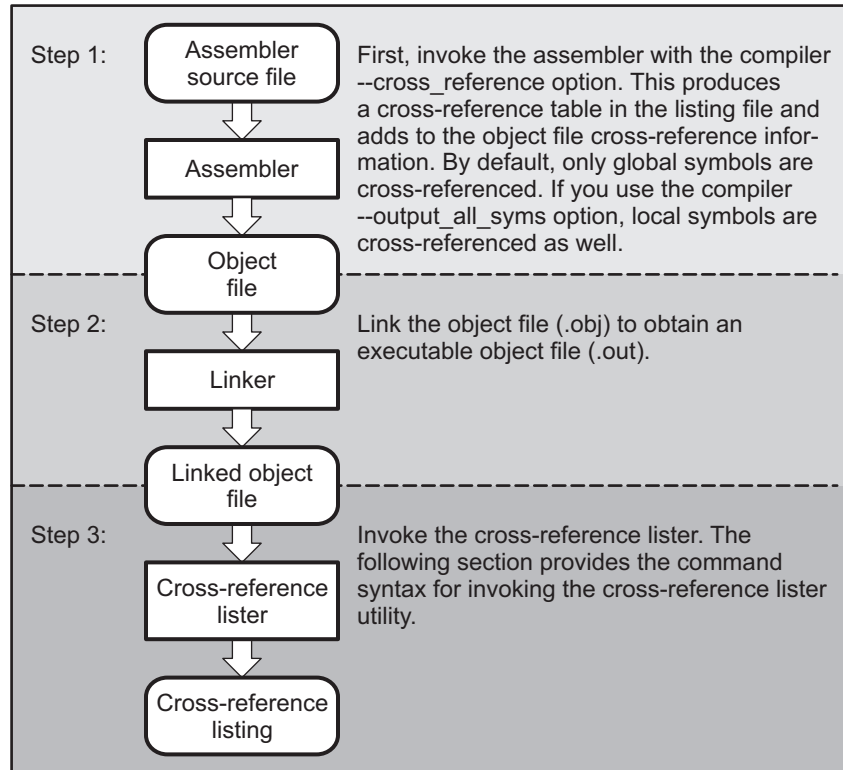



## 9.2 Invoking the Cross-Reference Lister

To use the cross-reference utility, the file must be assembled with the correct options and then linked into an executable file. Assemble the assembly language files with the `--cross_reference` option. This option creates a cross-reference listing and adds cross-reference information to the object file. By default, the assembler cross-references only global symbols, but if the assembler is invoked with the `--output_all_syms` option, local symbols are also added. Link the object files to obtain an executable file.

To invoke the cross-reference lister, enter the following:

```
xref2000 [options] [input filename] [output filename]
```

|                        |                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>xref2000</b>        | is the command that invokes the cross-reference utility.                                                                                                                                                                                                                                                                                                                                  |
| <i>options</i>         | identifies the cross-reference lister options you want to use. Options are not case sensitive and can appear anywhere on the command line following the command.                                                                                                                                                                                                                          |
| <b>-l</b>              | (lowercase L) specifies the number of lines per page for the output file. The format of the <code>-l</code> option is <code>-l<i>num</i></code> , where <i>num</i> is a decimal constant. For example, <code>-l30</code> sets the number of lines per page in the output file to 30. The space between the option and the decimal constant is optional. The default is 60 lines per page. |
| <b>-q</b>              | suppresses the banner and all progress information (run quiet).                                                                                                                                                                                                                                                                                                                           |
| <i>input filename</i>  | is a linked object file. If you omit the input filename, the utility prompts for a filename.                                                                                                                                                                                                                                                                                              |
| <i>output filename</i> | is the name of the cross-reference listing file. If you omit the output filename, the default filename is the input filename with an <code>.xrf</code> extension.                                                                                                                                                                                                                         |

### 9.3 Cross-Reference Listing Example

Example 9-1 is an example of cross-reference listing.

#### Example 9-1. Cross-Reference Listing

```

=====
Symbol: _SETUP
Filename      RTYP   AsmVal   LnkVal   DefLn   RefLn   RefLn   RefLn
-----
demo.asm      EDEF   '00000018 00000018   18     13     20
=====

Symbol: _fill_tab
Filename      RTYP   AsmVal   LnkVal   DefLn   RefLn   RefLn   RefLn
-----
ctrl.asm      EDEF   '00000000 00000040   10     5
=====

Symbol: _x42
Filename      RTYP   AsmVal   LnkVal   DefLn   RefLn   RefLn   RefLn
-----
demo.asm      EDEF   '00000000 00000000   7      4     18
=====

Symbol: gvar
Filename      RTYP   AsmVal   LnkVal   DefLn   RefLn   RefLn   RefLn
-----
tables.asm    EDEF   "00000000 08000000   11     10
=====
    
```

The terms defined below appear in the preceding cross-reference listing:

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Symbol</b>   | Name of the symbol listed                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Filename</b> | Name of the file where the symbol appears                                                                                                                                                                                                                                                                                                                                                                         |
| <b>RTYP</b>     | The symbol's reference type in this file. The possible reference types are:<br><b>STAT</b> The symbol is defined in this file and is not declared as global.<br><b>EDEF</b> The symbol is defined in this file and is declared as global.<br><b>EREF</b> The symbol is not defined in this file but is referenced as global.<br><b>UNDF</b> The symbol is not defined in this file and is not declared as global. |
| <b>AsmVal</b>   | This hexadecimal number is the value assigned to the symbol at assembly time. A value may also be preceded by a character that describes the symbol's attributes. <a href="#">Table 9-1</a> lists these characters and names.                                                                                                                                                                                     |
| <b>LnkVal</b>   | This hexadecimal number is the value assigned to the symbol after linking.                                                                                                                                                                                                                                                                                                                                        |
| <b>DefLn</b>    | The statement number where the symbol is defined.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>RefLn</b>    | The line number where the symbol is referenced. If the line number is followed by an asterisk (*), then that reference can modify the contents of the object. A blank in this column indicates that the symbol was never used.                                                                                                                                                                                    |

**Table 9-1. Symbol Attributes in Cross-Reference Listing**

| Character | Meaning                                    |
|-----------|--------------------------------------------|
| '         | Symbol defined in a .text section          |
| "         | Symbol defined in a .data section          |
| +         | Symbol defined in a .sect section          |
| -         | Symbol defined in a .bss or .usect section |



## Object File Utilities Descriptions

---



---

This chapter describes how to invoke the following miscellaneous utilities:

- The **object file display utility** prints the contents of object files, executable files, and/or archive libraries in both text and XML formats.
- The **disassembler** accepts object files and executable files as input and produces an assembly listing as output. This listing shows assembly instructions, their opcodes, and the section program counter values.
- The **name utility** prints a list of names defined and referenced in an object file, executable files, and/or archive libraries.
- The **strip utility** removes symbol table and debugging information from object and executable files.

| Topic                                                      | Page       |
|------------------------------------------------------------|------------|
| <b>10.1 Invoking the Object File Display Utility .....</b> | <b>254</b> |
| <b>10.2 Invoking the Disassembler .....</b>                | <b>255</b> |
| <b>10.3 Invoking the Name Utility .....</b>                | <b>255</b> |
| <b>10.4 Invoking the Strip Utility .....</b>               | <b>256</b> |

## 10.1 Invoking the Object File Display Utility

The object file display utility, *ofd2000*, prints the contents of object files (.obj), executable files (.out), and/or archive libraries (.lib) in both text and XML formats. Hidden symbols are listed as *no name*, while localized symbols are listed like any other local symbol.

To invoke the object file display utility, enter the following:

```
ofd2000 [options] input filename [input filename]
```

|                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ofd2000</b>                    | is the command that invokes the object file display utility.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>input filename</i>             | names the object file (.obj), executable file (.out), or archive library (.lib) source file. The filename must contain an extension.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <i>options</i>                    | identify the object file display utility options that you want to use. Options are not case sensitive and can appear anywhere on the command line following the command. Precede each option with a hyphen.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>--dwarf_display=attributes</b> | controls the DWARF display filter settings by specifying a comma-delimited list of <i>attributes</i> . When prefixed with no, an attribute is disabled instead of enabled.<br>Examples:            --dwarf_display=nodabbrev,nodline<br>--dwarf_display=all,nodabbrev<br>--dwarf_display=none,dinfo,types<br><br>The ordering of attributes is important (see --obj_display). The list of available display attributes can be obtained by invoking ofd2000 --dwarf_display=help.                                                                                                                                                                                                                                                                                                              |
| <b>-g</b>                         | appends DWARF debug information to program output.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>-h</b>                         | displays help                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>-o=filename</b>                | sends program output to <i>filename</i> rather than to the screen.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>--obj_display attributes</b>   | controls the object file display filter settings by specifying a comma-delimited list of <i>attributes</i> . When prefixed with no, an attribute is disabled instead of enabled.<br>Examples:            --obj_display=rawdata,nostrings<br>--obj_display=all,norawdata<br>--obj_display=none,header<br><br>The ordering of attributes is important. For instance, in "--obj_display=none,header", ofd2000 disables all output, then re-enables file header information. If the attributes are specified in the reverse order, (header,none), the file header is enabled, the all output is disabled, including the file header. Thus, nothing is printed to the screen for the given files. The list of available display attributes can be obtained by invoking ofd2000 --obj_display=help. |
| <b>-v</b>                         | prints verbose text output.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>-x</b>                         | displays output in XML format.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>--xml_indent=num</b>           | sets the number of spaces to indent nested XML tags.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

If an archive file is given as input to the object file display utility, each object file member of the archive is processed as if it was passed on the command line. The object file members are processed in the order in which they appear in the archive file.

If the object file display utility is invoked without any options, it displays information about the contents of the input files on the console screen.

### Object File Display Format

**NOTE:** The object file display utility produces data in a text format by default. This data is not intended to be used as input to programs for further processing of the information. XML format should be used for mechanical processing.

## 10.2 Invoking the Disassembler

The disassembler, *dis2000*, examines the output of the assembler or linker. This utility accepts an object file or executable file as input and writes the disassembled object code to standard output or a specified file.

To invoke the disassembler, enter the following:

```
dis2000 input filename[.] [output filename]
```

**dis2000** is the command that invokes the disassembler.  
*input filename*[.ext] is a COFF object file (.obj) or an executable file (.out).  
*output filename* is the name of the optional output file to which the disassembly will be written. If an output filename is not specified, the disassembly is written to standard output.

## 10.3 Invoking the Name Utility

The name utility, *nm2000*, prints the list of names defined and referenced in an object file, executable file, or archive library. It also prints the symbol value and an indication of the kind of symbol. Hidden symbols are listed as " ".

To invoke the name utility, enter the following:

```
nm2000 [-options] [input filenames]
```

**nm2000** is the command that invokes the name utility.  
*input filename* is an object file (.obj), executable file (.out), or archive library (.lib).  
*options* identifies the name utility options you want to use. Options are not case sensitive and can appear anywhere on the command line following the invocation. Precede each option with a hyphen (-). The name utility options are as follows:

- a** prints all symbols.
- c** also prints C\_NULL symbols for a COFF object module.
- d** also prints debug symbols for a COFF object module.
- f** prepends file name to each symbol.
- g** prints only global symbols.
- h** shows the current help screen.
- l** produces a detailed listing of the symbol information.
- n** sorts symbols numerically rather than alphabetically.
- o file** outputs to the given file.
- p** causes the name utility to not sort any symbols.
- q** (quiet mode) suppresses the banner and all progress information.
- r** sorts symbols in reverse order.
- t** also prints tag information symbols for a COFF object module.
- u** only prints undefined symbols.

## 10.4 Invoking the Strip Utility

The strip utility, *strip2000*, removes symbol table and debugging information from object and executable files.

To invoke the strip utility, enter the following:

```
strip2000 [-p] input filename [input filename]
```

**strip2000** is the command that invokes the strip utility.

*input filename* is an object file (.obj) or an executable file (.out).

*options* identifies the strip utility options you want to use. Options are not case sensitive and can appear anywhere on the command line following the invocation. Precede each option with a hyphen (-). The strip utility option is as follows:

**-o** *filename* writes the stripped output to filename.

**-p** removes all information not required for execution. This option causes more information to be removed than the default behavior, but the object file is left in a state that cannot be linked. This option should be used only with executable (.out) files.

When the strip utility is invoked without the -o option, the input object files are replaced with the stripped version.



## Hex Conversion Utility Description

The TMS320C28x assembler and linker create object files which are in binary formats that encourage modular programming and provide powerful and flexible methods for managing code segments and target system memory.

Most EPROM programmers do not accept object files as input. The hex conversion utility converts an object file into one of several standard ASCII hexadecimal formats, suitable for loading into an EPROM programmer. The utility is also useful in other applications requiring hexadecimal conversion of an object file (for example, when using debuggers and loaders).

The hex conversion utility can produce these output file formats:


- ASCII-Hex, supporting 16-bit addresses
- Extended Tektronix (Tektronix)
- Intel MCS-86 (Intel)
- Motorola Exorciser (Motorola-S), supporting 16-bit addresses
- Texas Instruments SDSMAC (TI-Tagged), supporting 16-bit addresses
- Texas Instruments TI-TXT format, supporting 16-bit addresses

| Topic                                                                                | Page       |
|--------------------------------------------------------------------------------------|------------|
| <b>11.1 The Hex Conversion Utility's Role in the Software Development Flow .....</b> | <b>258</b> |
| <b>11.2 Invoking the Hex Conversion Utility .....</b>                                | <b>259</b> |
| <b>11.3 Understanding Memory Widths .....</b>                                        | <b>262</b> |
| <b>11.4 The ROMS Directive .....</b>                                                 | <b>266</b> |
| <b>11.5 The SECTIONS Directive .....</b>                                             | <b>270</b> |
| <b>11.6 The Load Image Format (--load_image Option) .....</b>                        | <b>271</b> |
| <b>11.7 Excluding a Specified Section .....</b>                                      | <b>271</b> |
| <b>11.8 Assigning Output Filenames .....</b>                                         | <b>272</b> |
| <b>11.9 Image Mode and the --fill Option .....</b>                                   | <b>273</b> |
| <b>11.10 Building a Table for an On-Chip Boot Loader .....</b>                       | <b>274</b> |
| <b>11.11 Controlling the ROM Device Address .....</b>                                | <b>280</b> |
| <b>11.12 Control Hex Conversion Utility Diagnostics .....</b>                        | <b>281</b> |
| <b>11.13 Description of the Object Formats .....</b>                                 | <b>282</b> |
| <b>11.14 Hex Conversion Utility Error Messages .....</b>                             | <b>288</b> |

### 11.1 The Hex Conversion Utility's Role in the Software Development Flow

Figure 11-1 highlights the role of the hex conversion utility in the software development process.

Figure 11-1. The Hex Conversion Utility in the TMS320C28x Software Development Flow

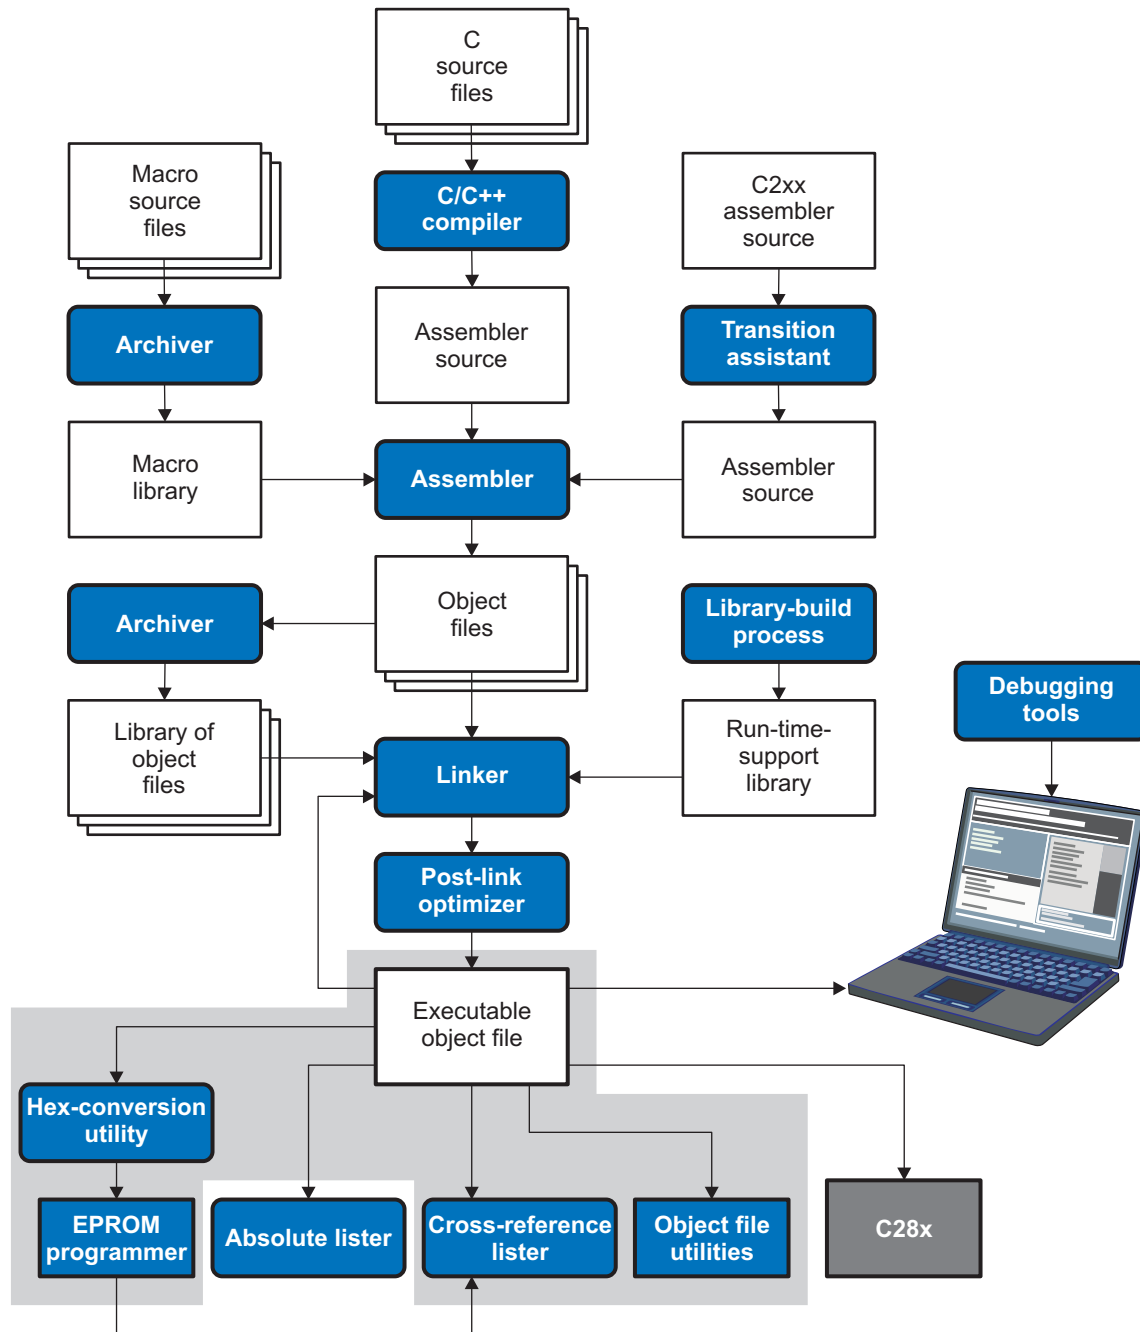

## 11.2 Invoking the Hex Conversion Utility

There are two basic methods for invoking the hex conversion utility:

- **Specify the options and filenames on the command line.** The following example converts the file `firmware.out` into TI-Tagged format, producing two output files, `firm.lsb` and `firm.msb`.

```
hex2000 -t firmware -o firm.lsb -o firm.msb
```

- **Specify the options and filenames in a command file.** You can create a file that stores command line options and filenames for invoking the hex conversion utility. The following example invokes the utility using a command file called `hexutil.cmd`:

```
hex2000 hexutil.cmd
```

In addition to regular command line information, you can use the hex conversion utility `ROMS` and `SECTIONS` directives in a command file.

### 11.2.1 Invoking the Hex Conversion Utility From the Command Line

To invoke the hex conversion utility, enter:

```
hex2000 [options] filename
```

**hex2000** is the command that invokes the hex conversion utility.

**options** supplies additional information that controls the hex conversion process. You can use options on the command line or in a command file. [Table 11-1](#) lists the basic options.

- All options are preceded by a hyphen and are not case sensitive.
- Several options have an additional parameter that must be separated from the option by at least one space.
- Options with multi-character names must be spelled exactly as shown in this document; no abbreviations are allowed.
- Options are not affected by the order in which they are used. The exception to this rule is the `--quiet` option, which must be used before any other options.

**filename** names an object file or a command file (for more information, see [Section 11.2.2](#)).

**Table 11-1. Basic Hex Conversion Utility Options**

| Option                                        | Alias                     | Description                                                                                                                                                                                                                                                                                                        | See                            |
|-----------------------------------------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| <b>General Options</b>                        |                           |                                                                                                                                                                                                                                                                                                                    |                                |
| <code>--byte</code>                           | <code>-byte</code>        | Number output locations by bytes rather than by target addressing                                                                                                                                                                                                                                                  | --                             |
| <code>--entry_point=addr</code>               | <code>-e</code>           | Specify the entry point at which to begin execution after boot loading                                                                                                                                                                                                                                             | <a href="#">Table 11-2</a>     |
| <code>--exclude={fname(sname)   sname}</code> | <code>-exclude</code>     | If the filename ( <i>fname</i> ) is omitted, all sections matching <i>sname</i> will be excluded.                                                                                                                                                                                                                  | <a href="#">Section 11.7</a>   |
| <code>--fill=value</code>                     | <code>-fill</code>        | Fill holes with <i>value</i>                                                                                                                                                                                                                                                                                       | <a href="#">Section 11.9.2</a> |
| <code>--help</code>                           | <code>-options, -h</code> | Display the syntax for invoking the utility and list available options. If the option is followed by another option or phrase, detailed information about that option or phrase is displayed. For example, to see information about options associated with generating a boot table, use <code>-help boot</code> . | <a href="#">Section 11.2.2</a> |
| <code>--image</code>                          | <code>-image</code>       | Select image mode                                                                                                                                                                                                                                                                                                  | <a href="#">Section 11.9.1</a> |
| <code>--linkerfill</code>                     | <code>-linkerfill</code>  | Include linker fill sections in images                                                                                                                                                                                                                                                                             | --                             |
| <code>--map=filename</code>                   | <code>-map</code>         | Generate a map file                                                                                                                                                                                                                                                                                                | <a href="#">Section 11.4.2</a> |
| <code>--memwidth=value</code>                 | <code>-memwidth</code>    | Define the system memory word width (default 16 bits)                                                                                                                                                                                                                                                              | <a href="#">Section 11.3.2</a> |
| <code>--olength=value</code>                  | <code>-olength</code>     | Specify maximum number of data items per line of output                                                                                                                                                                                                                                                            | --                             |
| <code>--order={LS MS}</code>                  | <code>-order</code>       | Specify data ordering (endianness)                                                                                                                                                                                                                                                                                 | <a href="#">Section 11.3.4</a> |
| <code>--outfile=filename</code>               | <code>-o</code>           | Specify an output filename                                                                                                                                                                                                                                                                                         | <a href="#">Section 11.8</a>   |

**Table 11-1. Basic Hex Conversion Utility Options (continued)**

| Option                               | Alias     | Description                                                                                                           | See                             |
|--------------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------|
| --quiet                              | -q        | Run quietly (when used, it must appear <i>before</i> other options)                                                   | <a href="#">Section 11.2.2</a>  |
| --romwidth= <i>value</i>             | -romwidth | Specify the ROM device width (default depends on format used)                                                         | <a href="#">Section 11.3.3</a>  |
| --zero                               | -zero, -z | Reset the address origin to 0 in image mode                                                                           | <a href="#">Section 11.9.3</a>  |
| <b>Diagnostic Options</b>            |           |                                                                                                                       |                                 |
| --diag_error= <i>id</i>              |           | Categorizes the diagnostic identified by <i>id</i> as an error                                                        | <a href="#">Section 11.12</a>   |
| --diag_remark= <i>id</i>             |           | Categorizes the diagnostic identified by <i>id</i> as a remark                                                        | <a href="#">Section 11.12</a>   |
| --diag_suppress= <i>id</i>           |           | Suppresses the diagnostic identified by <i>id</i>                                                                     | <a href="#">Section 11.12</a>   |
| --diag_warning= <i>id</i>            |           | Categorizes the diagnostic identified by <i>id</i> as a warning                                                       | <a href="#">Section 11.12</a>   |
| --display_error_number               |           | Displays a diagnostic's identifiers along with its text                                                               | <a href="#">Section 11.12</a>   |
| --issue_remarks                      |           | Issues remarks (nonserious warnings)                                                                                  | <a href="#">Section 11.12</a>   |
| --no_warnings                        |           | Suppresses warning diagnostics (errors are still issued)                                                              | <a href="#">Section 11.12</a>   |
| --set_error_limit= <i>count</i>      |           | Sets the error limit to <i>count</i> . The linker abandons linking after this number of errors. (The default is 100.) | <a href="#">Section 11.12</a>   |
| <b>Boot Table Options</b>            |           |                                                                                                                       |                                 |
| --boot                               | -boot     | Convert all sections into bootable form (use instead of a SECTIONS directive)                                         | <a href="#">Table 11-2</a>      |
| --bootorg= <i>addr</i>               | -bootorg  | Specify the source address of the boot loader table                                                                   | <a href="#">Table 11-2</a>      |
| --gpio8                              | -gpio8    | Specify table source as the GP I/O port, 8-bit mode. (Aliased by --can8)                                              | <a href="#">Table 11-2</a>      |
| --gpio16                             | -gpio16   | Specify table source as the GP I/O port, 16-bit mode                                                                  | <a href="#">Table 11-2</a>      |
| --lospcp= <i>value</i>               | -lospcp   | Specify the initial value for the LOSPCP register                                                                     | <a href="#">Table 11-2</a>      |
| --sci8                               | -sci8     | Specify table source as the SCI-A port, 8-bit mode                                                                    | <a href="#">Table 11-2</a>      |
| --spi8                               | -spi8     | Specify table source as the SPI-A port, 8-bit mode                                                                    | <a href="#">Table 11-2</a>      |
| --spibrr= <i>value</i>               | -spibrr   | Specify the initial value for the SPIBRR register                                                                     | <a href="#">Table 11-2</a>      |
| <b>Output Options</b>                |           |                                                                                                                       |                                 |
| --ascii                              | -a        | Select ASCII-Hex                                                                                                      | <a href="#">Section 11.13.1</a> |
| --binary                             | -b        | Select binary (Must have memory width of 8 bits.)                                                                     | --                              |
| --intel                              | -i        | Select Intel                                                                                                          | <a href="#">Section 11.13.2</a> |
| --motorola=1                         | -m1       | Select Motorola-S1                                                                                                    | <a href="#">Section 11.13.3</a> |
| --motorola=2                         | -m2       | Select Motorola-S2                                                                                                    | <a href="#">Section 11.13.3</a> |
| --motorola=3                         | -m3       | Select Motorola-S3 (default -m option)                                                                                | <a href="#">Section 11.13.3</a> |
| --tektronix                          | -x        | Select Tektronix (default format when no output option is specified)                                                  | <a href="#">Section 11.13.4</a> |
| --ti_tagged                          | -t        | Select TI-Tagged                                                                                                      | <a href="#">Section 11.13.5</a> |
| --ti_txt                             |           | Select TI-Txt                                                                                                         | <a href="#">Section 11.13.6</a> |
| <b>Load Image Options</b>            |           |                                                                                                                       |                                 |
| --load_image                         |           | Select load image                                                                                                     | <a href="#">Section 11.6</a>    |
| --section_name_prefix= <i>string</i> |           | Specify the section name prefix for load image object files                                                           | <a href="#">Section 11.6</a>    |

## 11.2.2 Invoking the Hex Conversion Utility With a Command File

A command file is useful if you plan to invoke the utility more than once with the same input files and options. It is also useful if you want to use the ROMS and SECTIONS hex conversion utility directives to customize the conversion process.

Command files are ASCII files that contain one or more of the following:

- **Options and filenames.** These are specified in a command file in exactly the same manner as on the command line.
- **ROMS directive.** The ROMS directive defines the physical memory configuration of your system as a list of address-range parameters. (See [Section 11.4.](#))
- **SECTIONS directive.** The hex conversion utility SECTIONS directive specifies which sections from the object file are selected. (See [Section 11.5.](#))
- **Comments.** You can add comments to your command file by using the `/*` and `*/` delimiters. For example:

```
/* This is a comment. */
```

To invoke the utility and use the options you defined in a command file, enter:

```
hex2000 command_filename
```

You can also specify other options and files on the command line. For example, you could invoke the utility by using both a command file and command line options:

```
hex2000 firmware.cmd --map=firmware.mxp
```

The order in which these options and filenames appear is not important. The utility reads all input from the command line and all information from the command file before starting the conversion process. However, if you are using the `-q` option, *it must appear as the first option on the command line or in a command file.*

The `--help` option displays the syntax for invoking the compiler and lists available options. If the `--help` option is followed by another option or phrase, detailed information about the option or phrase is displayed. For example, to see information about options associated with generating a boot table use `--help boot`.

The `--quiet` option suppresses the hex conversion utility's normal banner and progress information.

- Assume that a command file named `firmware.cmd` contains these lines:

```
firmware.out      /* input file */
--ti-tagged       /* TI-Tagged */
--outfile=firm.lsb /* output file */
--outfile=firm.msb /* output file */
```

You can invoke the hex conversion utility by entering:

```
hex2000 firmware.cmd
```

- This example shows how to convert a file called `appl.out` into eight hex files in Intel format. Each output file is one byte wide and 4K bytes long.

```
appl.out          /* input file */
--intel           /* Intel format */
--map=appl.mxp    /* map file */

ROMS
{
  ROW1: origin=0x00000000 len=0x4000 romwidth=8
        files={ appl.u0 appl.u1 appl.u2 appl.u3 }
  ROW2: origin=0x00004000 len=0x4000 romwidth=8
        files={ appl.u4 appl.u5 appl.u6 appl.u7 }
}

SECTIONS
{
  .text, .data, .cinit, .sect1, .vectors, .const:
}
```

### 11.3 Understanding Memory Widths


The hex conversion utility makes your memory architecture more flexible by allowing you to specify memory and ROM widths. To use the hex conversion utility, you must understand how the utility treats word widths. Three widths are important in the conversion process:

- Target width
- Memory width
- ROM width

The terms target word, memory word, and ROM word refer to a word of such a width.

Figure 11-2 illustrates the separate and distinct phases of the hex conversion utility's process flow.

**Figure 11-2. Hex Conversion Utility Process Flow**

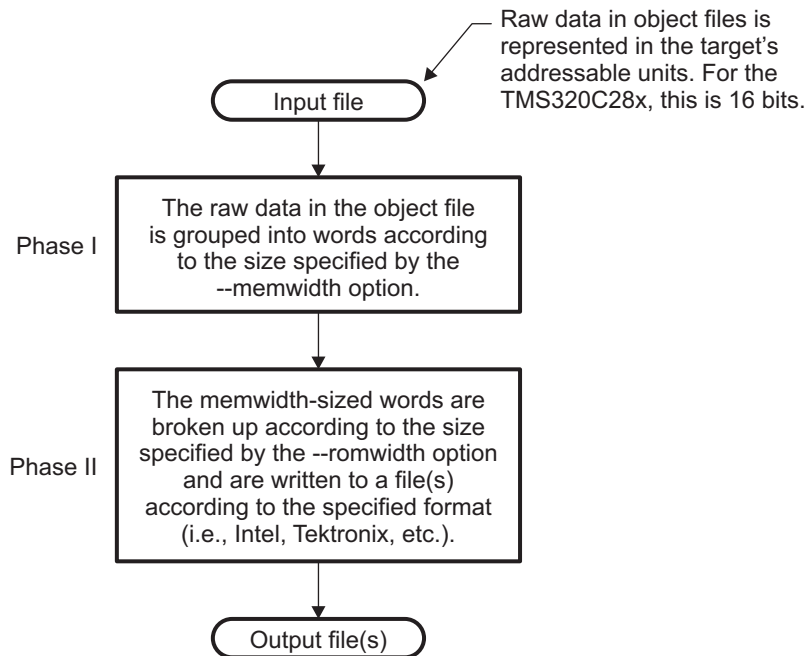

#### 11.3.1 Target Width

Target width is the unit size (in bits) of the target processor's word. The unit size corresponds to the data bus size on the target processor. The width is fixed for each target and cannot be changed. The TMS320C28x targets have a width of 16 bits.

### 11.3.2 Specifying the Memory Width

Memory width is the physical width (in bits) of the memory system. Usually, the memory system is physically the same width as the target processor width: a 16-bit processor has a 16-bit memory architecture. However, some applications require target words to be broken into multiple, consecutive, and narrower memory words.

By default, the hex conversion utility sets memory width to the target width (in this case, 16 bits).

You can change the memory width (except for TI-TXT format) by:

- Using the **--memwidth** option. This changes the memory width value for the entire file.
- Setting the **memwidth** parameter of the ROMS directive. This changes the memory width value for the address range specified in the ROMS directive and overrides the **--memwidth** option for that range. See [Section 11.4](#).

For both methods, use a value that is a power of 2 greater than or equal to 8.

You should change the memory width default value of 16 only when you need to break single target words into consecutive, narrower memory words.

---

#### Binary Format is 8 Bits Wide

**NOTE:** You cannot change the memory width of the Binary format. The Binary hex format supports an 8-bit memory width only.

---


#### TI-TXT Format is 8 Bits Wide

**NOTE:** You cannot change the memory width of the TI-TXT format. The TI-TXT hex format supports an 8-bit memory width only.

---

Figure 11-3 demonstrates how the memory width is related to object file data.

**Figure 11-3. Object File Data and Memory Widths**

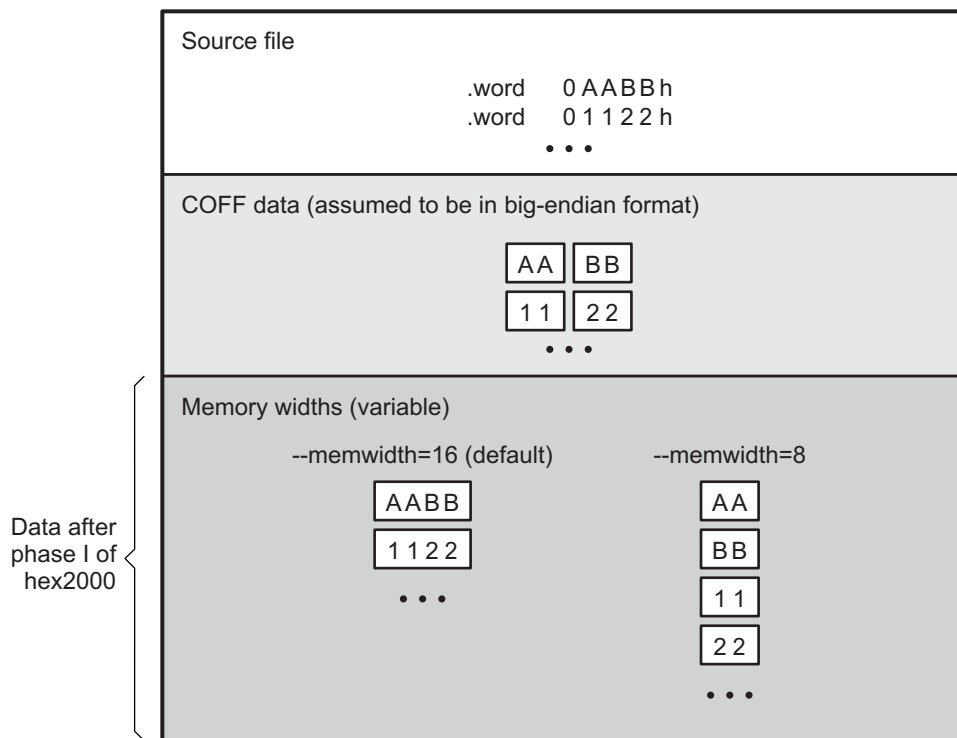

### 11.3.3 Partitioning Data Into Output Files

ROM width specifies the physical width (in bits) of each ROM device and corresponding output file (usually one byte or eight bits). The ROM width determines how the hex conversion utility partitions the data into output files. After the object file data is mapped to the memory words, the memory words are broken into one or more output files. The number of output files is determined by the following formulas:

- If memory width  $\geq$  ROM width:  
number of files = memory width  $\div$  ROM width
- If memory width  $<$  ROM width:  
number of files = 1

For example, for a memory width of 16, you could specify a ROM width value of 16 and get a single output file containing 16-bit words. Or you can use a ROM width value of 8 to get two files, each containing 8 bits of each word.

The default ROM width that the hex conversion utility uses depends on the output format:

- All hex formats except TI-Tagged are configured as lists of 8-bit bytes; the default ROM width for these formats is 8 bits.
- TI-Tagged is a 16-bit format; the default ROM width for TI-Tagged is 16 bits.

---

#### The TI-Tagged Format is 16 Bits Wide

**NOTE:** You cannot change the ROM width of the TI-Tagged format. The TI-Tagged format supports a 16-bit ROM width only.

---



---

#### TI-TXT Format is 8 Bits Wide

**NOTE:** You cannot change the ROM width of the TI-TXT format. The TI-TXT hex format supports only an 8-bit ROM width.

---

You can change ROM width (except for TI-Tagged and TI-TXT formats) by:

- Using the **--romwidth** option. This option changes the ROM width value for the entire object file.
- Setting the **romwidth** parameter of the ROMS directive. This parameter changes the ROM width value for a specific ROM address range and overrides the --romwidth option for that range. See [Section 11.4](#).

For both methods, use a value that is a power of 2 greater than or equal to 8.

If you select a ROM width that is wider than the natural size of the output format (16 bits for TI-Tagged or 8 bits for all others), the utility simply writes multibyte fields into the file.

[Figure 11-4](#) illustrates how the object file data, memory, and ROM widths are related to one another.

Memory width and ROM width are used only for grouping the object file data; they do not represent values. Thus, the byte ordering of the object file data is maintained throughout the conversion process. To refer to the partitions within a memory word, the bits of the memory word are always numbered from right to left as follows:


 




Figure 11-4. Data, Memory, and ROM Widths

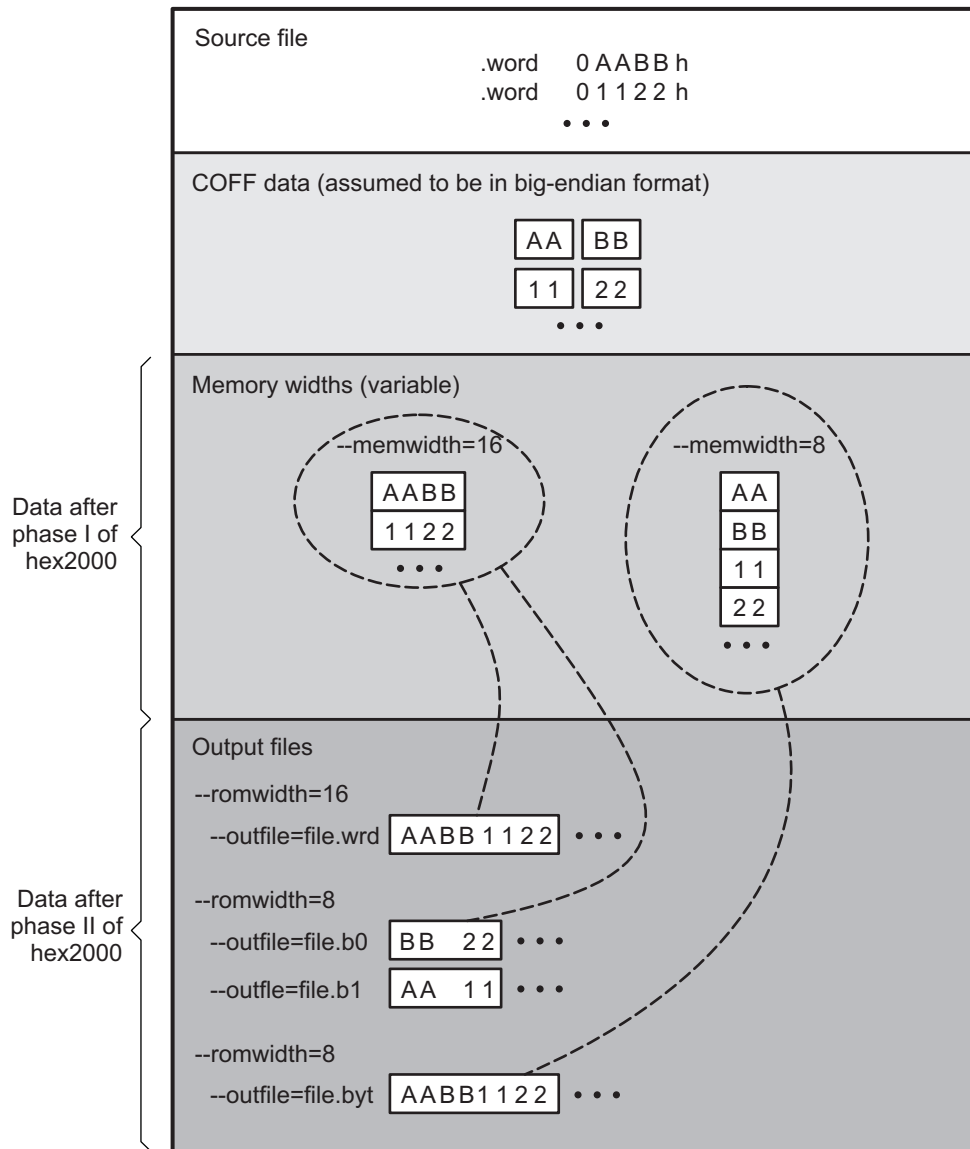

### 11.3.4 Specifying Word Order for Output Words

There are two ways to split a wide word into consecutive memory locations in the same hex conversion utility output file:

- **--order=MS** specifies **big-endian** ordering, in which the most significant part of the wide word occupies the first of the consecutive locations.
- **--order=LS** specifies **little-endian** ordering, in which the least significant part of the wide word occupies the first of the consecutive locations.

By default, the utility uses little-endian format. Unless your boot loader program expects big-endian format, avoid using **--order=MS**.

---

#### When the **--order** Option Applies

##### NOTE:

- This option applies only when you use a memory width with a value less than 16. Otherwise, **--order** is ignored.
  - This option does not affect the way memory words are split into output files. Think of the files as a set: the set contains a least significant file and a most significant file, but there is no ordering over the set. When you list filenames for a set of files, you always list the least significant first, regardless of the **--order** option.
- 

## 11.4 The ROMS Directive

The ROMS directive specifies the physical memory configuration of your system as a list of address-range parameters.

Each address range produces one set of files containing the hex conversion utility output data that corresponds to that address range. Each file can be used to program one single ROM device.

The ROMS directive is similar to the MEMORY directive of the TMS320C28x linker: both define the memory map of the target address space. Each line entry in the ROMS directive defines a specific address range. The general syntax is:

```

ROMS
{
    romname :    [origin=value,] [length=value,] [romwidth=value,]
                 [memwidth=value,] [fill=value]
                 [files={ filename1, filename2, ...}]
    romname :    [origin=value,] [length=value,] [romwidth=value,]
                 [memwidth=value,] [fill=value]
                 [files={ filename1, filename2, ...}]
    ...
}
    
```

|                |                                                                                                                                                                                                                                                                                                                                         |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ROMS</b>    | begins the directive definition.                                                                                                                                                                                                                                                                                                        |
| <i>romname</i> | identifies a memory range. The name of the memory range can be one to eight characters in length. The name has no significance to the program; it simply identifies the range, except when the output is for a load image in which case it denotes the section name. (Duplicate memory range names are allowed.)                        |
| <b>origin</b>  | specifies the starting address of a memory range. It can be entered as origin, org, or o. The associated value must be a decimal, octal, or hexadecimal constant. If you omit the origin value, the origin defaults to 0. The following table summarizes the notation you can use to specify a decimal, octal, or hexadecimal constant: |

| Constant    | Notation              | Example      |
|-------------|-----------------------|--------------|
| Hexadecimal | 0x prefix or h suffix | 0x77 or 077h |
| Octal       | 0 prefix              | 077          |
| Decimal     | No prefix or suffix   | 77           |

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>length</b>   | specifies the length of a memory range as the physical length of the ROM device. It can be entered as length, len, or l. The value must be a decimal, octal, or hexadecimal constant. If you omit the length value, it defaults to the length of the entire address space.                                                                                                                                                                                                                                                                            |
| <b>romwidth</b> | specifies the physical ROM width of the range in bits (see <a href="#">Section 11.3.3</a> ). Any value you specify here overrides the --romwidth option. The value must be a decimal, octal, or hexadecimal constant that is a power of 2 greater than or equal to 8.                                                                                                                                                                                                                                                                                 |
| <b>memwidth</b> | specifies the memory width of the range in bits (see <a href="#">Section 11.3.2</a> ). Any value you specify here overrides the --memwidth option. The value must be a decimal, octal, or hexadecimal constant that is a power of 2 greater than or equal to 8. <i>When using the memwidth parameter, you must also specify the paddr parameter for each section in the SECTIONS directive.</i> (See <a href="#">Section 11.5</a> .)                                                                                                                  |
| <b>fill</b>     | specifies a fill value to use for the range. In image mode, the hex conversion utility uses this value to fill any holes between sections in a range. A hole is an area between the input sections that comprises an output section that contains no actual code or data. The fill value must be a decimal, octal, or hexadecimal constant with a width equal to the target width. Any value you specify here overrides the --fill option. When using fill, you must also use the --image command line option. (See <a href="#">Section 11.9.2</a> .) |
| <b>files</b>    | identifies the names of the output files that correspond to this range. Enclose the list of names in curly braces and order them from <i>least significant</i> to <i>most significant</i> output file, where the bits of the memory word are numbered from right to left. The number of file names must equal the number of output files that the range generates. To calculate the number of output files, see <a href="#">Section 11.3.3</a> . The utility warns you if you list too many or too few filenames.                                     |

Unless you are using the --image option, all of the parameters that define a range are optional; the commas and equal signs are also optional. A range with no origin or length defines the entire address space. In image mode, an origin and length are required for all ranges.

Ranges must not overlap and must be listed in order of ascending address.

### 11.4.1 When to Use the ROMS Directive

If you do not use a ROMS directive, the utility defines a single default range that includes the entire address space. This is equivalent to a ROMS directive with a single range without origin or length.

Use the ROMS directive when you want to:

- **Program large amounts of data into fixed-size ROMs.** When you specify memory ranges corresponding to the length of your ROMs, the utility automatically breaks the output into blocks that fit into the ROMs.
- **Restrict output to certain segments.** You can also use the ROMS directive to restrict the conversion to a certain segment or segments of the target address space. The utility does not convert the data that falls outside of the ranges defined by the ROMS directive. Sections can span range boundaries; the utility splits them at the boundary into multiple ranges. If a section falls completely outside any of the ranges you define, the utility does not convert that section and issues no messages or warnings. Thus, you can exclude sections without listing them by name with the SECTIONS directive. However, if a section falls partially in a range and partially in unconfigured memory, the utility issues a warning and converts only the part within the range.
- **Use image mode.** When you use the --image option, you must use a ROMS directive. Each range is filled completely so that each output file in a range contains data for the whole range. Holes before, between, or after sections are filled with the fill value from the ROMS directive, with the value specified with the --fill option, or with the default value of 0.

### 11.4.2 An Example of the ROMS Directive

The ROMS directive in [Example 11-1](#) shows how 16K bytes of 16-bit memory could be partitioned for two 8K-byte 8-bit EPROMs. [Figure 11-5](#) illustrates the input and output files.


#### Example 11-1. A ROMS Directive Example

```
infile.out
--image
--memwidth 16

ROMS
{
  EPROM1: org = 0x00004000, len = 0x2000, romwidth = 8
         files = { rom4000.b0, rom4000.b1}

  EPROM2: org = 0x00006000, len = 0x2000, romwidth = 8,
         fill = 0xFF00FF00,
         files = { rom6000.b0, rom6000.b1}
}
```

Figure 11-5. The infile.out File Partitioned Into Four Output Files

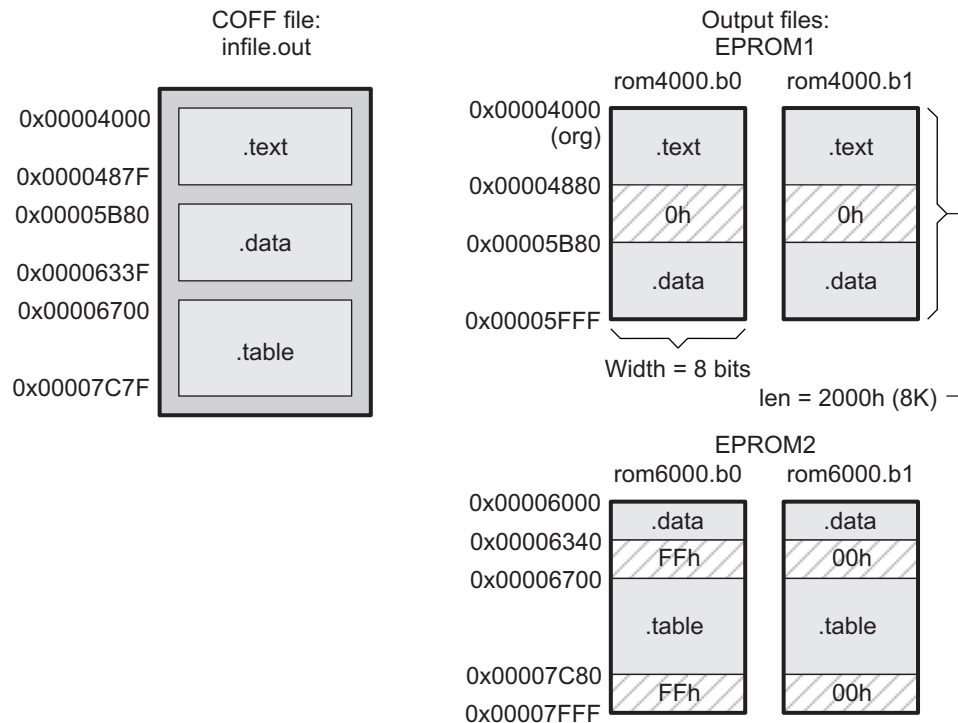

The map file (specified with the --map option) is advantageous when you use the ROMS directive with multiple ranges. The map file shows each range, its parameters, names of associated output files, and a list of contents (section names and fill values) broken down by address. [Example 11-2](#) is a segment of the map file resulting from the example in [Example 11-1](#).

**Example 11-2. Map File Output From [Example 11-1](#) Showing Memory Ranges**

```

-----
00004000..00005fff Page=0 Width=8 "EPROM1"
-----
OUTPUT FILES:  rom4000.b0  [b0..b7]
                rom4000.b1  [b8..b15]
CONTENTS: 00004000..0000487f .text
           00004880..00005b7f FILL = 00000000
           00005b80..00005fff .data
-----
00006000..00007fff Page=0 Width=8 "EPROM2"
-----
OUTPUT FILES:  rom6000.b0  [b0..b7]
                rom6000.b1  [b8..b15]
CONTENTS: 00006000..0000633f .data
           00006340..000066ff FILL = ff00ff00
           00006700..00007c7f .table
           00007c80..00007fff FILL = ff00ff00

```

EPROM1 defines the address range from 0x00004000 through 0x00005FFF with the following sections:

| This section ... | Has this range ...            |
|------------------|-------------------------------|
| .text            | 0x00004000 through 0x0000487F |
| .data            | 0x00005B80 through 0x00005FFF |

The rest of the range is filled with 0h (the default fill value), converted into two output files:

- rom4000.b0 contains bits 0 through 7
- rom4000.b1 contains bits 8 through 15

EPROM2 defines the address range from 0x00006000 through 0x00007FFF with the following sections:

| This section ... | Has this range ...            |
|------------------|-------------------------------|
| .data            | 0x00006000 through 0x0000633F |
| .table           | 0x00006700 through 0x00007C7F |

The rest of the range is filled with 0xFF0 (from the specified fill value). The data from this range is converted into two output files:

- rom6000.b0 contains bits 0 through 7
- rom6000.b1 contains bits 8 through 15

## 11.5 The SECTIONS Directive

You can convert specific sections of the object file by name with the hex conversion utility SECTIONS directive. You can also specify those sections that you want to locate in ROM at a different address than the *load* address specified in the linker command file. If you:

- Use a SECTIONS directive, the utility converts only the sections that you list in the directive and ignores all other sections in the object file.
- Do not use a SECTIONS directive, the utility converts all initialized sections that fall within the configured memory.

Uninitialized sections are *never* converted, whether or not you specify them in a SECTIONS directive.

---

### Sections Generated by the C/C++ Compiler

**NOTE:** The TMS320C28x C/C++ compiler automatically generates these sections:

- **Initialized sections:** .text, .const, and .cinit
  - **Uninitialized sections:** .bss, .stack, and .systemem
- 

Use the SECTIONS directive in a command file. (See [Section 11.2.2](#).) The general syntax for the SECTIONS directive is:

#### SECTIONS

```
{
  oname(sname)[:] [paddr=value]
  oname(sname)[:] [paddr=boot]
  oname(sname)[:] [boot]
  ...
}
```

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SECTIONS</b>     | begins the directive definition.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <i>oname</i>        | identifies the object filename the section is located within. The filename is optional when only a single input file is given, but required otherwise.                                                                                                                                                                                                                                                                                                   |
| <i>sname</i>        | identifies a section in the input file. If you specify a section that does not exist, the utility issues a warning and ignores the name.                                                                                                                                                                                                                                                                                                                 |
| <b>paddr=</b> value | specifies the physical ROM address at which this section should be located. This value overrides the section load address given by the linker. This value must be a decimal, octal, or hexadecimal constant. It can also be the word <b>boot</b> (to indicate a boot table section for use with a boot loader). <i>If your file contains multiple sections, and if one section uses a paddr parameter, then all sections must use a paddr parameter.</i> |
| <b>boot</b>         | configures a section for loading by a boot loader. This is equivalent to using <b>paddr=boot</b> . Boot sections have a physical address determined by the location of the boot table. The origin of the boot table is specified with the --bootorg option.                                                                                                                                                                                              |

For more similarity with the linker's SECTIONS directive, you can use colons after the section names (in place of the equal sign on the boot keyboard). For example, the following statements are equivalent:

```
SECTIONS { .text: .data: boot }
SECTIONS { .text: .data = boot }
```

In the example below, the object file contains six initialized sections: .text, .data, .const, .vectors, .coeff, and .tables. Suppose you want only .text and .data to be converted. Use a SECTIONS directive to specify this:

```
SECTIONS { .text: .data: }
```

To configure both of these sections for boot loading, add the boot keyword:

```
SECTIONS { .text = boot .data = boot }
```

For more information about --boot and other command line options associated with boot tables, see [Section 11.2](#) and .

## 11.6 The Load Image Format (--load\_image Option)

A load image is an object file which contains the load addresses and initialized sections of one or more executable files. The load image object file can be used for ROM masking or can be relinked in a subsequent link step.

### 11.6.1 Load Image Section Formation

The load image sections are formed by collecting the initialized sections from the input executables. There are two ways the load image sections are formed:

- **Using the ROMS Directive.** Each memory range that is given in the ROMS directive denotes a load image section. The romname is the section name. The origin and length parameters are required. The memwidth, romwidth, and files parameters are invalid and are ignored.

When using the ROMS directive and the load\_image option, the --image option is required.

- **Default Load Image Section Formation.** If no ROMS directive is given, the load image sections are formed by combining contiguous initialized sections in the input executables. Sections with gaps smaller than the target word size are considered contiguous.

The default section names are image\_1, image\_2, ... If another prefix is desired, the --section\_name\_prefix=*prefix* option can be used.

### 11.6.2 Load Image Characteristics

All load image sections are initialized data sections. In the absence of a ROMS directive, the load/run address of the load image section is the load address of the first input section in the load image section. If the SECTIONS directive was used and a different load address was given using the paddr parameter, this address will be used.

The load image format always creates a single load image object file. The format of the load image object file is determined based on the input files. The file is not marked executable and does not contain an entry point. The default load image object file name is ti\_load\_image.obj. This can be changed using the --outfile option. Only one --outfile option is valid when creating a load image, all other occurrences are ignored.

---

#### Concerning Load Image Format

**NOTE:** These options are invalid when creating a load image:

- --memwidth
- --romwidth
- --order
- --zero
- --byte

If a boot table is being created, either using the SECTIONS directive or the --boot option, the ROMS directive must be used.

---

## 11.7 Excluding a Specified Section

The --exclude *section\_name* option can be used to inform the hex utility to ignore the specified section. If a SECTIONS directive is used, it overrides the --exclude option.

For example, if a SECTIONS directive containing the section name *mysect* is used and an --exclude *mysect* is specified, the SECTIONS directive takes precedence and *mysect* is not excluded.

The --exclude option has a limited wildcard capability. The \* character can be placed at the beginning or end of the name specifier to indicate a suffix or prefix, respectively. For example, --exclude sect\* disqualifies all sections that begin with the characters sect.

If you specify the `--exclude` option on the command line with the `*` wildcard, enter quotes around the section name and wildcard. For example, `--exclude"sect*"`. Using quotes prevents the `*` from being interpreted by the hex conversion utility. If `--exclude` is in a command file, then the quotes should not be specified.

If multiple object files are given, the object file in which the section to be excluded can be given in the form `oname(sname)`. If the object filename is not provided, all sections matching the section name are excluded. Wildcards cannot be used for the filename, but can appear within the parentheses.

## 11.8 Assigning Output Filenames

When the hex conversion utility translates your object file into a data format, it partitions the data into one or more output files. When multiple files are formed by splitting memory words into ROM words, *filenames are always assigned in order from least to most significant*, where bits in the memory words are numbered from right to left. This is true, regardless of target or endian ordering.

The hex conversion utility follows this sequence when assigning output filenames:

1. **It looks for the ROMS directive.** If a file is associated with a range in the ROMS directive and you have included a list of files (`files = { . . . }`) on that range, the utility takes the filename from the list. For example, assume that the target data is 16-bit words being converted to two files, each eight bits wide. To name the output files using the ROMS directive, you could specify:

```
ROMS
{
    RANGE1: romwidth=8, files={ xyz.b0 xyz.b1 }
}
```

The utility creates the output files by writing the least significant bits to `xyz.b0` and the most significant bits to `xyz.b1`.

2. **It looks for the `--outfile` options.** You can specify names for the output files by using the `--outfile` option. If no filenames are listed in the ROMS directive and you use `--outfile` options, the utility takes the filename from the list of `--outfile` options. The following line has the same effect as the example above using the ROMS directive:

```
--outfile=xyz.b0 --outfile=xyz.b1
```

If both the ROMS directive and `--outfile` options are used together, the ROMS directive overrides the `--outfile` options.

3. **It assigns a default filename.** If you specify no filenames or fewer names than output files, the utility assigns a default filename. A default filename consists of the base name from the input file plus a 2- to 3-character extension. The extension has three parts:

- (a) A format character, based on the output format (see [Section 11.13](#)):

|          |                |
|----------|----------------|
| <b>a</b> | for ASCII-Hex  |
| <b>i</b> | for Intel      |
| <b>m</b> | for Motorola-S |
| <b>t</b> | for TI-Tagged  |
| <b>x</b> | for Tektronix  |

- (b) The range number in the ROMS directive. Ranges are numbered starting with 0. If there is no ROMS directive, or only one range, the utility omits this character.

- (c) The file number in the set of files for the range, starting with 0 for the least significant file.

For example, assume `a.out` is for a 16-bit target processor and you are creating Intel format output. With no output filenames specified, the utility produces two output files named `a.i0`, `a.i1`, `a.i2`, `a.i3`.

If you include the following ROMS directive when you invoke the hex conversion utility, you would have four output files:

```
ROMS
{
    range1: o = 0x1000 l = 0x1000
    range2: o = 0x2000 l = 0x1000
}
```



| These output files ... | Contain data in these locations ... |
|------------------------|-------------------------------------|
| a.i00 and a.i01        | 0x1000 through 0x1FFF               |
| a.i10 and a.i11        | 0x2000 through 0x2FFF               |

## 11.9 Image Mode and the --fill Option

This section points out the advantages of operating in image mode and describes how to produce output files with a precise, continuous image of a target memory range.

### 11.9.1 Generating a Memory Image

With the --image option, the utility generates a memory image by completely filling all of the mapped ranges specified in the ROMS directive.

An object file consists of blocks of memory (sections) with assigned memory locations. Typically, all sections are not adjacent: there are holes between sections in the address space for which there is no data. When such a file is converted *without* the use of image mode, the hex conversion utility bridges these holes by using the address records in the output file to skip ahead to the start of the next section. In other words, there may be discontinuities in the output file addresses. Some EPROM programmers do not support address discontinuities.

In image mode, there are no discontinuities. Each output file contains a continuous stream of data that corresponds exactly to an address range in target memory. Any holes before, between, or after sections are filled with a fill value that you supply.

An output file converted by using image mode still has address records, because many of the hexadecimal formats require an address on each line. However, in image mode, these addresses are always contiguous.

---

#### Defining the Ranges of Target Memory

**NOTE:** If you use image mode, you must also use a ROMS directive. In image mode, each output file corresponds directly to a range of target memory. You must define the ranges. If you do not supply the ranges of target memory, the utility tries to build a memory image of the entire target processor address space. This is potentially a huge amount of output data. To prevent this situation, the utility requires you to explicitly restrict the address space with the ROMS directive.

---

### 11.9.2 Specifying a Fill Value

The --fill option specifies a value for filling the holes between sections. The fill value must be specified as an integer constant following the --fill option. The width of the constant is assumed to be that of a word on the target processor. For example, specifying --fill=0x0FF results in a fill pattern of 0x0FF. The constant value is not sign extended.

The hex conversion utility uses a default fill value of 0 if you do not specify a value with the fill option. *The --fill option is valid only when you use --image; otherwise, it is ignored.*

### 11.9.3 Steps to Follow in Using Image Mode

- Step 1:** Define the ranges of target memory with a ROMS directive. See [Section 11.4](#).
- Step 2:** Invoke the hex conversion utility with the --image option. You can optionally use the --zero option to reset the address origin to 0 for each output file. If you do not specify a fill value with the ROMS directive and you want a value other than the default of 0, use the --fill option.

## 11.10 Building a Table for an On-Chip Boot Loader

Some C28x devices, such as the F2810/12, have a built-in boot loader that initializes memory with one or more blocks of code or data. The boot loader uses a special table stored in memory or loaded from a device peripheral to initialize code or data. The hex conversion utility supports the boot loader by automatically building the boot table.

### 11.10.1 Description of the Boot Table

The input for a boot loader is the boot table. The boot table contains records that instruct the on-chip loader to copy blocks of data contained in the table to specified destination addresses. The table can be stored in memory (such as EPROM) or read in through a device peripheral (such as a serial or communications port).

The hex conversion utility automatically builds the boot table for the boot loader. Using the utility, you specify the sections you want the boot loader to initialize and the table location. The hex conversion utility builds a complete image of the table according to the format specified and converts it into hexadecimal in the output files. Then, you can burn the table into ROM or load it by other means.

The boot loader supports loading from memory that is narrower than the normal width of memory. For example, you can boot a 16-bit TMS320C28x from a single 8-bit EPROM by using the `--memwidth` option to configure the width of the boot table. The hex conversion utility automatically adjusts the table's format and length. See the boot loader example in the *TMS320C28x DSP CPU and Instruction Set Reference Guide* for an illustration of a boot table.

### 11.10.2 The Boot Table Format

The boot table format is simple. Typically, there is a header record containing a key value that indicates memory width, entry point, and values for control registers. Each subsequent block has a header containing the size and destination address of the block followed by data for the block. Multiple blocks can be entered. The table ends with a header containing size zero. See the boot loader section in the *TMS320C28x DSP CPU and Instruction Set Reference Guide* for more information.

### 11.10.3 How to Build the Boot Table

[Table 11-2](#) summarizes the hex conversion utility options available for the boot loader.

**Table 11-2. Boot-Loader Options**

| Option                           | Description                                                                                                                                                                                    |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--boot</code>              | Convert all sections into bootable form (use instead of a SECTIONS directive).                                                                                                                 |
| <code>--bootorg=value</code>     | Specify the source address of the boot-loader table.                                                                                                                                           |
| <code>--entry_point=value</code> | Specify the entry point at which to begin execution after boot loading. The <i>value</i> can be an address or a global symbol.                                                                 |
| <code>--gpio8</code>             | Specify the source of the boot-loader table as the GP I/O port, 8-bit mode                                                                                                                     |
| <code>--gpio16</code>            | Specify the source of the boot-loader table as the GP I/O port, 16-bit mode                                                                                                                    |
| <code>--lospcp=value</code>      | Specify the initial value for the LOSPCP register. The value is used only for the spi8 boot table format and is ignored for all other formats. A value greater than 0x7F is truncated to 0x7F. |
| <code>--sci8</code>              | Specify the source of the boot-loader table as the SCI-A port, 8-bit mode                                                                                                                      |
| <code>--spi8</code>              | Specify the source of the boot-loader table as the SPI-A port, 8-bit mode                                                                                                                      |
| <code>--spibrr=value</code>      | Specify the initial value for the SPIBRR register. The value is used only for the spi8 boot table format and is ignored for all other formats. A value greater than 0x7F is truncated to 0x7F. |

### 11.10.3.1 Building the Boot Table

To build the boot table, follow these steps:

- Step 1: **Link the file.** Each block of the boot table data corresponds to an initialized section in the object file. Uninitialized sections are not converted by the hex conversion utility (see [Section 11.5](#)).  
When you select a section for placement in a boot-loader table, the hex conversion utility places the section's *load address* in the destination address field for the block in the boot table. The section content is then treated as raw data for that block. *The hex conversion utility does not use the section run address.* When linking, you need not worry about the ROM address or the construction of the boot table; the hex conversion utility handles this.
- Step 2: **Identify the bootable sections.** You can use the `--boot` option to tell the hex conversion utility to configure all sections for boot loading. Or, you can use a `SECTIONS` directive to select specific sections to be configured (see [Section 11.5](#)). If you use a `SECTIONS` directive, the `--boot` option is ignored.
- Step 3: **Set the boot table format.** Specify the `--gpio8`, `--gpio16`, `--sci8`, or `--spi8` options to set the source format of the boot table. You do not need to specify the `memwidth` and `romwidth` as the utility will set these formats automatically. If `--memwidth` and `--romwidth` are used after a format option, they override the default for the format.
- Step 4: **Set the ROM address of the boot table.** Use the `--bootorg` option to set the source address of the complete table. For example, if you are using the C28x and booting from memory location `0x3FF000`, specify `--bootorg=0x3FF000`. The address field for the boot table in the hex conversion utility output file will then start at `0x3FF000`.
- Step 5: **Set boot-loader-specific options.** Set entry point and control register values as needed.
- Step 6: **Describe your system memory configuration.** See [Section 11.3](#) and [Section 11.4](#).

### 11.10.3.2 Leaving Room for the Boot Table

The complete boot table is similar to a single section containing all of the header records and data for the boot loader. The address of this section is the boot table origin. As part of the normal conversion process, the hex conversion utility converts the boot table to hexadecimal format and maps it into the output files like any other section.

Be sure to leave room in your system memory for the boot table, especially when you are using the `ROMS` directive. The boot table cannot overlap other nonboot sections or unconfigured memory. Usually, this is not a problem; typically, a portion of memory in your system is reserved for the boot table. Simply configure this memory as one or more ranges in the `ROMS` directive, and use the `--bootorg` option to specify the starting address.

### 11.10.4 Booting From a Device Peripheral

You can choose to boot from the F2810/12 serial or parallel port by using the `--gpio9`, `--gpio16`, `--sci8`, or `--spi8` boot table format option. The initial value for the `LOSPCP` register can be specified with the `--lospcp` option. The initial value for the `SPIBRR` register can be specified with the `--spibr` option. Only the `--spi8` format uses these control register values in the boot table.

If the register values are not specified for the `--spi8` format, the hex conversion utility uses the default values `0x02` for `LOSPCP` and `0x7F` for `SPIBRR`. When the boot table format options are specified and the `ROMS` directive is not specified, the ASCII format hex utility output does not produce the address record.

### 11.10.5 Setting the Entry Point for the Boot Table

After completing the boot load process, execution starts at the default entry point specified by the linker and contained in the object file. By using the `--entry_point` option with the hex conversion utility, you can set the entry point to a different address.

For example, if you want your program to start running at address `0x0123` after loading, specify `--entry_point=0x0123` on the command line or in a command file. You can determine the `--entry_point` address by looking at the map file that the linker generates.

---

**Valid Entry Points**

**NOTE:** The value can be a constant, or it can be a symbol that is externally defined (for example, with a `.global`) in the assembly source.

---

### 11.10.6 Using the C28x Boot Loader

This subsection explains how to use the hex conversion utility with the boot loader for C28x devices. The C28x boot loader accepts the formats listed in [Table 11-3](#).

**Table 11-3. Boot Table Source Formats**

| Format                      | Option   |
|-----------------------------|----------|
| Parallel boot GP I/O 8 bit  | --gpio8  |
| Parallel boot GP I/O 16 bit | --gpio16 |
| 8-bit SCI boot              | --sci8   |
| 8-bit SPI boot              | --spi8   |

The F2810/12 can boot through the SCI-A 8-bit, SPI-A 8-bit, GP I/O 8-bit, or GP I/O 16-bit interface. The format of the boot table is shown in [Table 11-4](#).

**Table 11-4. Boot Table Format**

| Description                                    | Word    | Content                                                  |
|------------------------------------------------|---------|----------------------------------------------------------|
| Boot table header                              | 1       | Key value (0x10AA or 0x08AA)                             |
|                                                | 2-9     | Register initialization value or reserved for future use |
|                                                | 10-11   | Entry point                                              |
| Block header                                   | 12      | Block size in number of words (n1)                       |
|                                                | 13-14   | Destination address of the block                         |
| Block data                                     | 15      | Raw data for the block (n1 words)                        |
| Block header                                   | 16 + n1 | Block size in number of words                            |
|                                                | .       | Destination address of the block                         |
| Block data                                     | .       | Raw data for the block                                   |
| Additional block headers and data, as required | ...     | Content as appropriate                                   |
| Block header with size 0                       |         | 0x0000; indicates the end of the boot table.             |

The C28x can boot through either the serial 8-bit or parallel interface with either 8- or 16-bit data. The format is the same for any combination: the boot table consists of a field containing the destination address, a field containing the length, and a block containing the data. You can boot only one section. If you are booting from an 8-bit channel, 16-bit words are stored in the table with MSBs first; the hex conversion utility automatically builds the table in the correct format. Use the following options to specify the boot table source:

- To boot from a SCI-A port, specify `--spi8` when invoking the utility. Do not specify `--memwidth` or `--romwidth`.
- To boot from a SPI-A port, specify `--sci8` when invoking the utility. Do not specify `--memwidth` or `--romwidth`. Use `--lospcp` to set the initial value for the LOSPCP register and `--spibrr` to set the initial value for the SPIBRR register. If the register values are not specified for the `--spi8` format, the hex conversion utility uses the default value 0x02 for LOSPCP and 0x7F for SPIBRR.
- To load from a general-purpose parallel I/O port, invoke the utility with `--gpio8` or `--gpio16`. Do not specify `--memwidth` or `--romwidth`.

The command file in [Example 11-3](#) allows you to boot the `.text` and `.cinit` sections of `test.out` from a 16-bit-wide EPROM at location 0x3FFC00. The map file `test.map` is also generated.

**Example 11-3. Sample Command File for Booting From 8-Bit SPI Boot**


```

/*-----*/
/* Hex converter command file.                               */
/*-----*/
test.out           /* Input COFF file */
--ascii           /* Select ASCII format */
--map=test.map    /* Specify the map file */
--outfile=test_spi8.hex /* Hex utility out file */
--boot            /* Consider all the input sections as boot sections */
--spi8           /* Specify the SPI 8-bit boot format */
--lospcp=0x3F    /* Set the initial value for the LOSPCP as 0x3F */
                 /* The -spibrr option is not specified to show that */
                 /* the hex utility uses the default value (0x7F) */
--entry_point=0x3F0000 /* Set the entry point */

```

The command file in Example 11-3 generates the out file in Figure 11-6. The control register values are coded in the boot table header and that header has the address that is specified with the --entry\_point option.

**Figure 11-6. Sample Hex Converter Out File for Booting From 8-Bit SPI Boot**

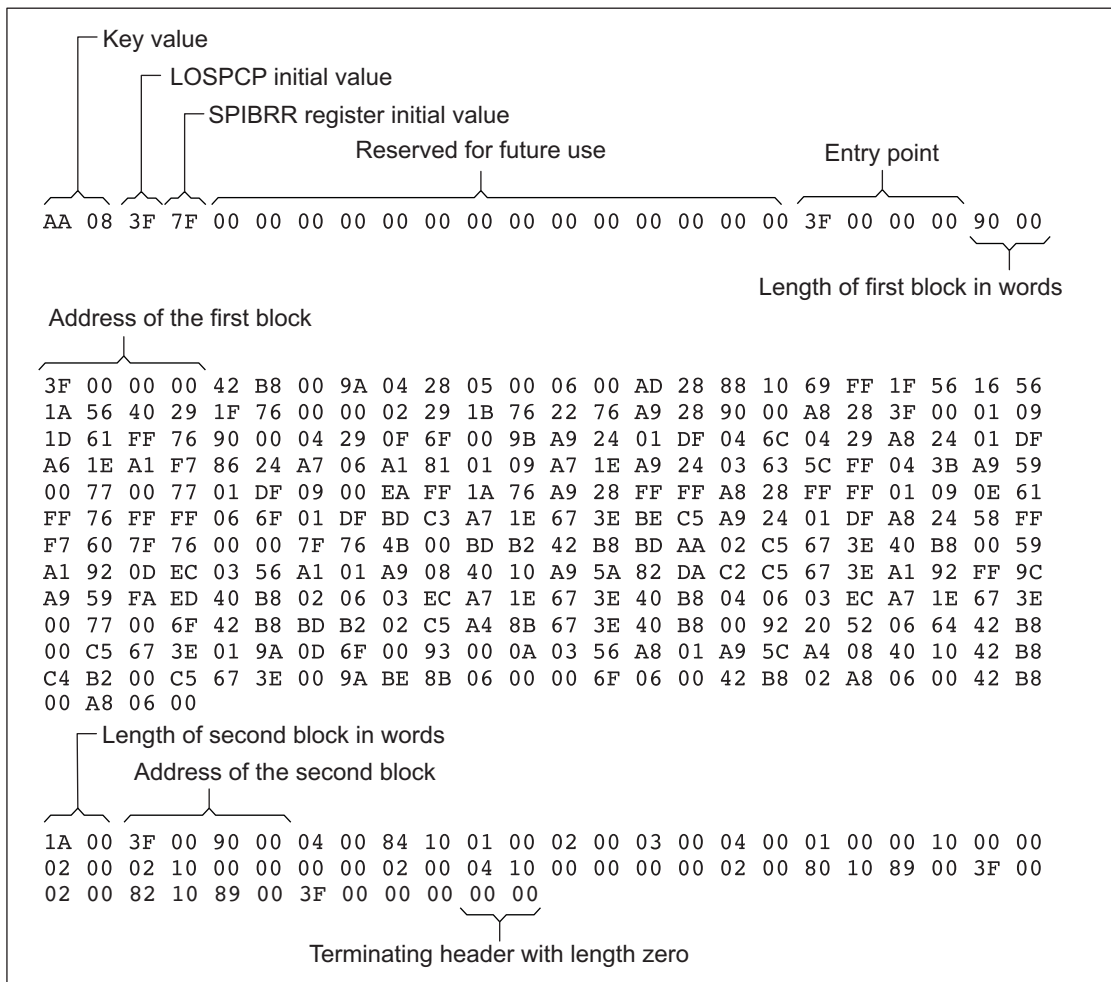

The command file in Example 11-4 allows you to boot the .text and .cinit sections of test.out from the 16-bit parallel GP I/O port. The map file test.map is also generated.


**Example 11-4. Sample Command File for C28x 16-Bit Parallel Boot GP I/O**

```

/*-----*/
/* Hex converter command file.                                     */
/*-----*/
test.out                /* Input COFF file */
--ascii                /* Select ASCII format */
--map=test.map         /* Specify the map file */
--outfile=test_gpio16.hex /* Hex utility out file */
--gpio16              /* Specify the 16-bit GP I/O boot format */

SECTIONS
{
    .text: paddr=BOOT
    .cinit: paddr=BOOT
}
    
```

The command file in [Example 11-4](#) generates the out file in [Figure 11-7](#).

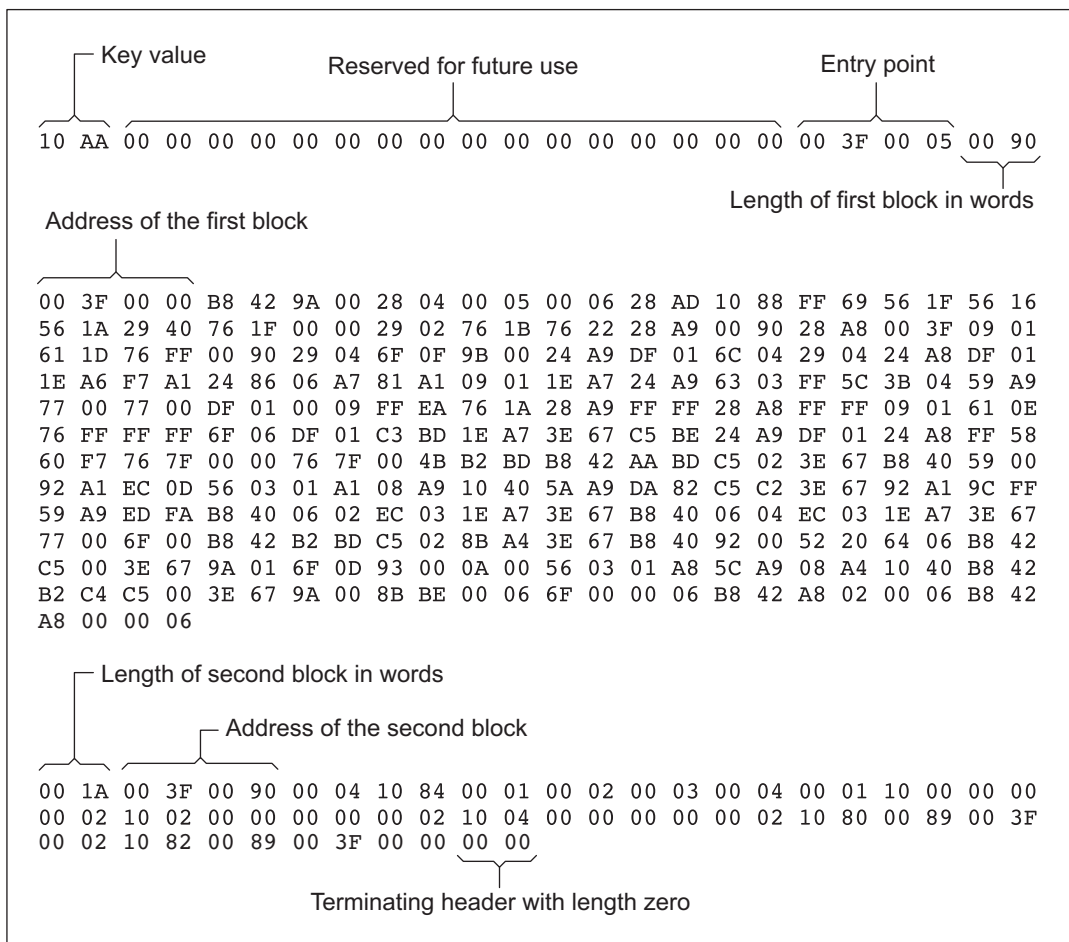**Figure 11-7. Sample Hex Converter Out File for C28x 16-Bit Parallel Boot GP I/O**


The command file in [Example 11-5](#) allows you to boot the .text and .cinit sections of test.out from a 16-bit wide EPROM from the SCI-A 8-bit port. The map file test.map is also generated.

**Example 11-5. Sample Command File for Booting From 8-Bit SCI Boot**

```


/*-----*/
/* Hex converter command file. */
/*-----*/
test.out          /* Input COFF file */
-ascii           /* Select ASCII format */
--map=test.map   /* Specify the map file */
--outfile=test_sci8.hex /* Hex utility out file */
--sci8          /* Specify the SCI 8-bit boot format */

SECTIONS
{
    .text: paddr=BOOT
    .cinit: paddr=BOOT
}

```

The command file in [Example 11-5](#) generates the out file in [Figure 11-8](#).

**Figure 11-8. Sample Hex Converter Out File for Booting From 8-Bit SCI Boot**

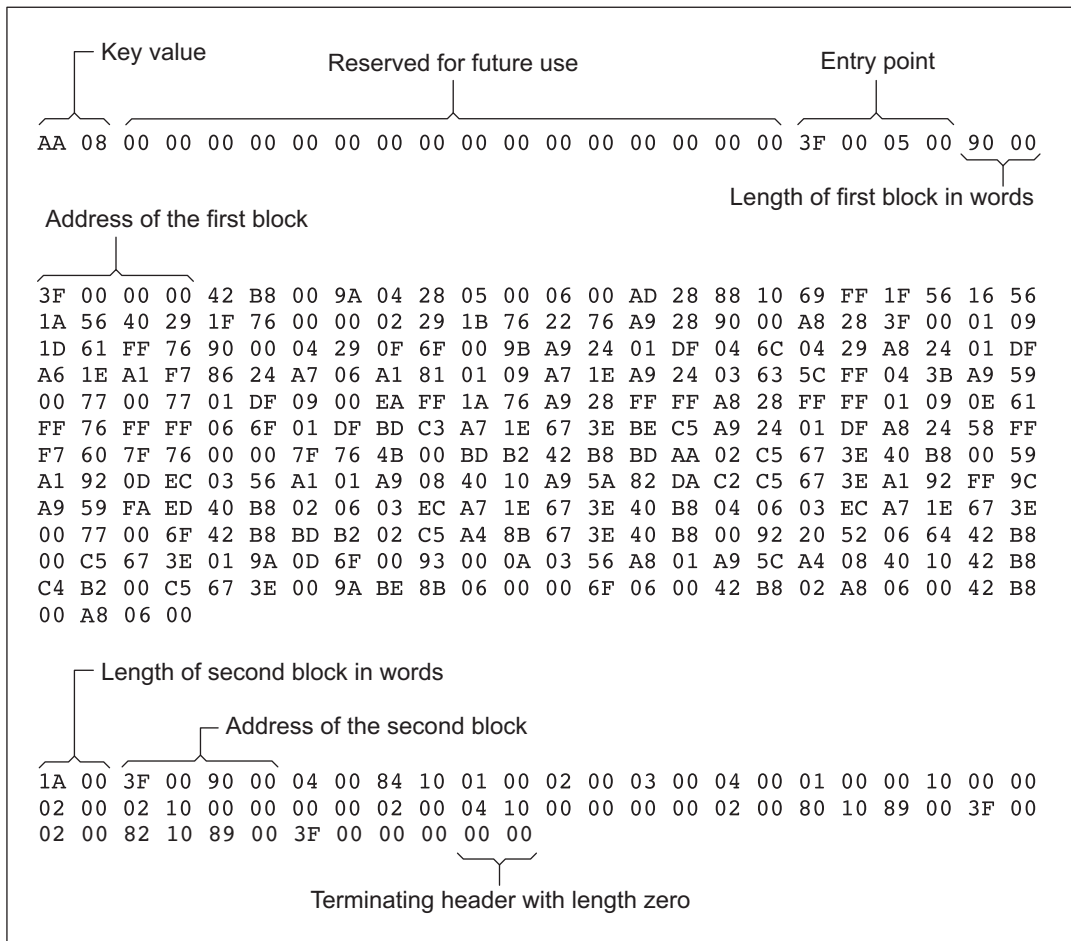

## 11.11 Controlling the ROM Device Address

The hex conversion utility output address field corresponds to the ROM device address. The EPROM programmer burns the data into the location specified by the hex conversion utility output file address field. The hex conversion utility offers some mechanisms to control the starting address in ROM of each section. However, many EPROM programmers offer direct control of the location in ROM in which the data is burned.

The address field of the hex-conversion utility output file is controlled by the following items, which are listed from low to high priority:

1. **The linker command file.** By default, the address field of the hex conversion utility output file is the load address (as given in the linker command file).
2. **The `paddr` parameter of the `SECTIONS` directive.** When the `paddr` parameter is specified for a section, the hex conversion utility bypasses the section load address and places the section in the address specified by `paddr`.
3. **The `--zero` option.** When you use the `--zero` option, the utility resets the address origin to 0 for each output file. Since each file starts at 0 and counts upward, any address records represent offsets from the beginning of the file (the address within the ROM) rather than actual target addresses of the data. You must use the `--zero` option in conjunction with the `--image` option to force the starting address in each output file to be zero. If you specify the `--zero` option without the `--image` option, the utility issues a warning and ignores the `--zero` option.
4. **The `--byte` option.** Some EPROM programmers may require the output file address field to contain a byte count rather than a word count. If you use the `--byte` option, the output file address increments once for each byte. For example, if the starting address is 0h, the first line contains eight words, and you use no `--byte` option, the second line would start at address 8 (8h). If the starting address is 0h, the first line contains eight words, and you use the `--byte` option, the second line would start at address 16 (010h). The data in both examples are the same; `--byte` affects only the calculation of the output file address field, not the actual target processor address of the converted data.  
The `--byte` option causes the address records in an output file to refer to byte locations within the file, whether the target processor is byte-addressable or not.



## 11.12 Control Hex Conversion Utility Diagnostics

The hex conversion utility uses certain C/C++ compiler options to control hex-converter-generated diagnostics.

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>--diag_error=<i>id</i></b>         | Categorizes the diagnostic identified by <i>id</i> as an error. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_error=<i>id</i></code> to recategorize the diagnostic as an error. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                         |
| <b>--diag_remark=<i>id</i></b>        | Categorizes the diagnostic identified by <i>id</i> as a remark. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_remark=<i>id</i></code> to recategorize the diagnostic as a remark. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                        |
| <b>--diag_suppress=<i>id</i></b>      | Suppresses the diagnostic identified by <i>id</i> . To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_suppress=<i>id</i></code> to suppress the diagnostic. You can only suppress discretionary diagnostics.                                                                                                                                                                                                                                                                                                                                               |
| <b>--diag_warning=<i>id</i></b>       | Categorizes the diagnostic identified by <i>id</i> as a warning. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate link. Then use <code>--diag_warning=<i>id</i></code> to recategorize the diagnostic as a warning. You can only alter the severity of discretionary diagnostics.                                                                                                                                                                                                                                                                                                     |
| <b>--display_error_number</b>         | Displays a diagnostic's numeric identifier along with its text. Use this option in determining which arguments you need to supply to the diagnostic suppression options ( <code>--diag_suppress</code> , <code>--diag_error</code> , <code>--diag_remark</code> , and <code>--diag_warning</code> ). This option also indicates whether a diagnostic is discretionary. A discretionary diagnostic is one whose severity can be overridden. A discretionary diagnostic includes the suffix <code>-D</code> ; otherwise, no suffix is present. See the <i>TMS320C28x Optimizing C/C++ Compiler User's Guide</i> for more information on understanding diagnostic messages. |
| <b>--issue_remarks</b>                | Issues remarks (nonserious warnings), which are suppressed by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>--no_warnings</b>                  | Suppresses warning diagnostics (errors are still issued).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>--set_error_limit=<i>count</i></b> | Sets the error limit to <i>count</i> , which can be any decimal value. The linker abandons linking after this number of errors. (The default is 100.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>--verbose_diagnostics</b>          | Provides verbose diagnostics that display the original source with line-wrap and indicate the position of the error in the source line                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### 11.13 Description of the Object Formats

The hex conversion utility has options that identify each format. [Table 11-5](#) specifies the format options. They are described in the following sections.

- You need to use only one of these options on the command line. If you use more than one option, the last one you list overrides the others.
- The default format is Tektronix (--tektronix option).

**Table 11-5. Options for Specifying Hex Conversion Formats**

| Option       | Alias | Format      | Address Bits | Default Width |
|--------------|-------|-------------|--------------|---------------|
| --ascii      | -a    | ASCII-Hex   | 16           | 8             |
| --intel      | -i    | Intel       | 32           | 8             |
| --motorola=1 | -m1   | Motorola-S1 | 16           | 8             |
| --motorola=2 | -m2   | Motorola-S2 | 24           | 8             |
| --motorola=3 | -m3   | Motorola-S3 | 32           | 8             |
| --ti-tagged  | -t    | TI-Tagged   | 16           | 16            |
| --ti_txt     |       | TI_TXT      | 8            | 8             |
| --tektronix  | -x    | Tektronix   | 32           | 8             |


**Address bits** determine how many bits of the address information the format supports. Formats with 16-bit addresses support addresses up to 64K only. The utility truncates target addresses to fit in the number of available bits.

The **default width** determines the default output width of the format. You can change the default width by using the --romwidth option or by using the romwidth parameter in the ROMS directive. You cannot change the default width of the TI-Tagged format, which supports a 16-bit width only.

#### 11.13.1 ASCII-Hex Object Format (--ascii Option)

The ASCII-Hex object format supports 16-bit addresses. The format consists of a byte stream with bytes separated by spaces. [Figure 11-9](#) illustrates the ASCII-Hex format.

**Figure 11-9. ASCII-Hex Object Format**

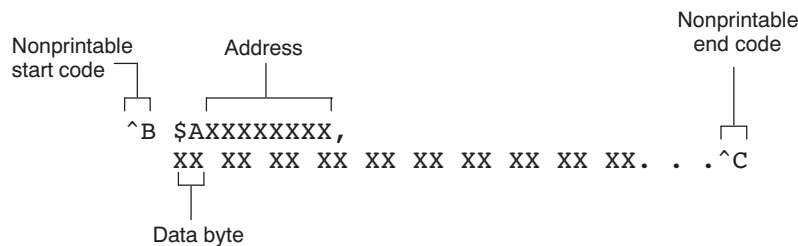

The file begins with an ASCII STX character (ctrl-B, 02h) and ends with an ASCII ETX character (ctrl-C, 03h). Address records are indicated with \$XXXXXXXX, in which XXXXXXXX is a 8-digit (16-bit) hexadecimal address. The address records are present only in the following situations:

- When discontinuities occur
- When the byte stream does not begin at address 0

You can avoid all discontinuities and any address records by using the --image and --zero options. This creates output that is simply a list of byte values.

### 11.13.2 Intel MCS-86 Object Format (--intel Option)

The Intel object format supports 16-bit addresses and 32-bit extended addresses. Intel format consists of a 9-character (4-field) prefix (which defines the start of record, byte count, load address, and record type), the data, and a 2-character checksum suffix.

The 9-character prefix represents three record types:

| Record Type | Description                    |
|-------------|--------------------------------|
| 00          | Data record                    |
| 01          | End-of-file record             |
| 04          | Extended linear address record |


Record type 00, the data record, begins with a colon ( : ) and is followed by the byte count, the address of the first data byte, the record type (00), and the checksum. The address is the least significant 16 bits of a 32-bit address; this value is concatenated with the value from the most recent 04 (extended linear address) record to create a full 32-bit address. The checksum is the 2s complement (in binary form) of the preceding bytes in the record, including byte count, address, and data bytes.

Record type 01, the end-of-file record, also begins with a colon ( : ), followed by the byte count, the address, the record type (01), and the checksum.

Record type 04, the extended linear address record, specifies the upper 16 address bits. It begins with a colon ( : ), followed by the byte count, a dummy address of 0h, the record type (04), the most significant 16 bits of the address, and the checksum. The subsequent address fields in the data records contain the least significant bytes of the address.

Figure 11-10 illustrates the Intel hexadecimal object format.

Figure 11-10. Intel Hexadecimal Object Format

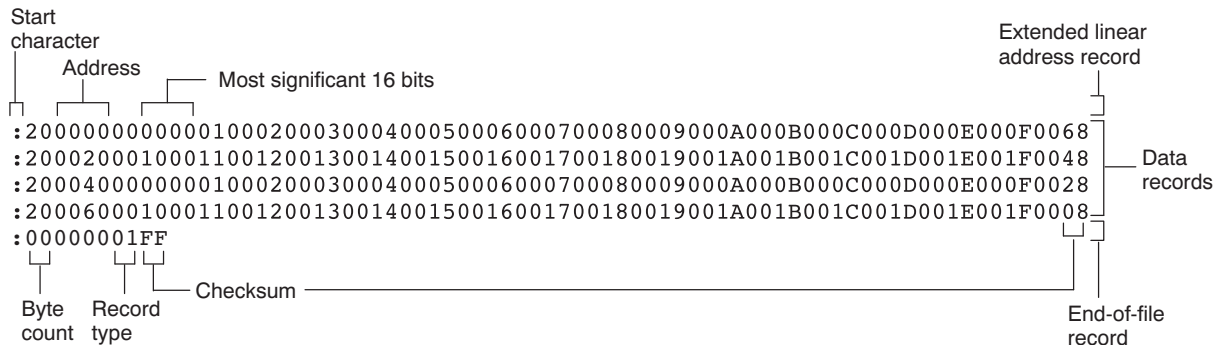



### 11.13.4 Extended Tektronix Object Format (--tektronix Option)

The Tektronix object format supports 32-bit addresses and has two types of records:

- Data records** contains the header field, the load address, and the object code.
- Termination records** signifies the end of a module.


The header field in the data record contains the following information:

| Item         | Number of ASCII Characters | Description                                                                                    |
|--------------|----------------------------|------------------------------------------------------------------------------------------------|
| %            | 1                          | Data type is Tektronix format                                                                  |
| Block length | 2                          | Number of characters in the record, minus the %                                                |
| Block type   | 1                          | 6 = data record<br>8 = termination record                                                      |
| Checksum     | 2                          | A 2-digit hex sum modulo 256 of all values in the record except the % and the checksum itself. |

The load address in the data record specifies where the object code will be located. The first digit specifies the address length; this is always 8. The remaining characters of the data record contain the object code, two characters per byte.

Figure 11-12 illustrates the Tektronix object format.

**Figure 11-12. Extended Tektronix Object Format**

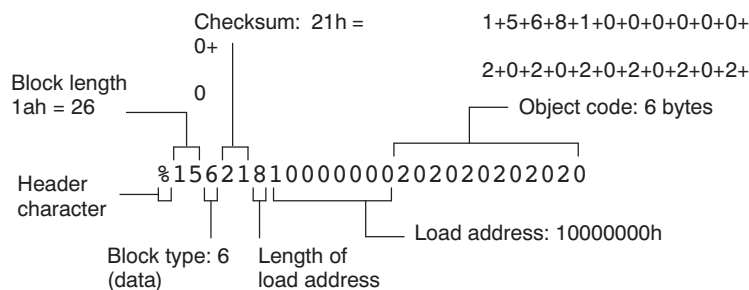

### 11.13.5 Texas Instruments SDSMAC (TI-Tagged) Object Format (--ti\_tagged Option)

The Texas Instruments SDSMAC (TI-Tagged) object format supports 16-bit addresses, including start-of-file record, data records, and end-of-file record. Each data records consists of a series of small fields and is signified by a tag character:

| Tag Character | Description                               |
|---------------|-------------------------------------------|
| K             | Followed by the program identifier        |
| 7             | Followed by a checksum                    |
| 8             | Followed by a dummy checksum (ignored)    |
| 9             | Followed by a 16-bit load address         |
| B             | Followed by a data word (four characters) |
| F             | Identifies the end of a data record       |
| *             | Followed by a data byte (two characters)  |

Figure 11-13 illustrates the tag characters and fields in TI-Tagged object format.

Figure 11-13. TI-Tagged Object Format



If any data fields appear before the first address, the first field is assigned address 0000h. Address fields may be expressed but not required for any data byte. The checksum field, preceded by the tag character 7, is the 2s complement of the sum of the 8-bit ASCII values of characters, beginning with the first tag character and ending with the checksum tag character (7 or 8). The end-of-file record is a colon (:).

### 11.13.6 TI-TXT Hex Format (--ti\_txt Option)


The TI-TXT hex format supports 16-bit hexadecimal data. It consists of section start addresses, data byte, and an end-of-file character. These restrictions apply:

- The number of sections is unlimited.
- Each hexadecimal start address must be even.
- Each line must have 16 data bytes, except the last line of a section.
- Data bytes are separated by a single space.
- The end-of-file termination tag q is mandatory.

The data record contains the following information:

| Item  | Description                            |
|-------|----------------------------------------|
| @ADDR | Hexadecimal start address of a section |
| DATAn | Hexadecimal data byte                  |
| q     | End-of-file termination character      |

**Figure 11-14. TI-TXT Object Format**

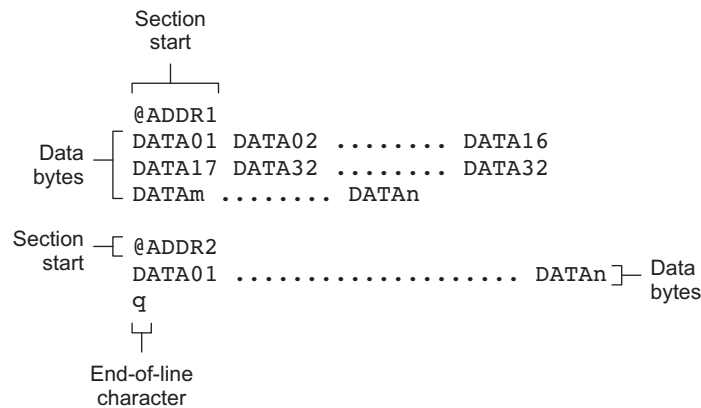

#### Example 11-6. TI-TXT Object Format

```
@F000
31 40 00 03 B2 40 80 5A 20 01 D2 D3 22 00 D2 E3
21 00 3F 40 E8 FD 1F 83 FE 23 F9 3F
@FFFE
00 F0
Q
```

## 11.14 Hex Conversion Utility Error Messages

### section mapped to reserved memory

*Description* A section is mapped into a memory area that is designated as reserved in the processor memory map.

*Action* Correct section or boot-loader address. For valid memory locations, refer to the *TMS320C28x CPU and Instruction Set Reference Guide*.

### sections overlapping

*Description* Two or more COFF section load addresses overlap, or a boot table address overlaps another section.

*Action* This problem may be caused by an incorrect translation from load address to hexadecimal output-file address that is performed by the hex-conversion utility when memory width is less than data width. See [Section 11.3](#) and [Section 11.11](#).

### unconfigured memory error

*Description* The COFF file contains a section whose load address falls outside the memory range defined in the ROMS directive.

*Action* Correct the ROM range as defined by the ROMS directive to cover the memory range needed, or modify the section load address. Remember that if the ROMS directive is not used, the memory range defaults to the entire processor address space. For this reason, removing the ROMS directive could also be a workaround.



## Sharing C/C++ Header Files With Assembly Source

---

---

You can use the `.cdecls` assembler directive to share C headers containing declarations and prototypes between C and assembly code. Any legal C/C++ can be used in a `.cdecls` block and the C/C++ declarations will cause suitable assembly to be generated automatically, allowing you to reference the C/C++ constructs in assembly code.

| Topic                                                            | Page       |
|------------------------------------------------------------------|------------|
| <b>12.1 Overview of the <code>.cdecls</code> Directive .....</b> | <b>290</b> |
| <b>12.2 Notes on C/C++ Conversions .....</b>                     | <b>290</b> |
| <b>12.3 Notes on C++ Specific Conversions .....</b>              | <b>294</b> |
| <b>12.4 Special Assembler Support .....</b>                      | <b>295</b> |

## 12.1 Overview of the `.cdecls` Directive

The `.cdecls` directive allows programmers in mixed assembly and C/C++ environments to share C headers containing declarations and prototypes between the C and assembly code. Any legal C/C++ can be used in a `.cdecls` block and the C/C++ declarations will cause suitable assembly to be generated automatically. This allows the programmer to reference the C/C++ constructs in assembly code — calling functions, allocating space, and accessing structure members — using the equivalent assembly mechanisms. While function and variable definitions are ignored, most common C/C++ elements are converted to assembly: enumerations, (non function-like) macros, function and variable prototypes, structures, and unions.

See [the `.cdecls` topic](#) for details on the syntax of the `.cdecls` assembler directive.

The `.cdecls` directive can appear anywhere in an assembly source file, and can occur multiple times within a file. However, the C/C++ environment created by one `.cdecls` is **not** inherited by a later `.cdecls`; the C/C++ environment starts over for each `.cdecls` instance.

For example, the following code causes the warning to be issued:

```
.cdecls C,NOLIST
%{
    #define ASMTEST 1
%}

.cdecls C,NOLIST
%{
    #ifndef ASMTEST
        #warn "ASMTEST not defined!" /* will be issued */
    #endif
%}
```

Therefore, a typical use of the `.cdecls` block is expected to be a single usage near the beginning of the assembly source file, in which all necessary C/C++ header files are included.

Use the compiler `--include_path=path` options to specify additional include file paths needed for the header files used in assembly, as you would when compiling C files.

Any C/C++ errors or warnings generated by the code of the `.cdecls` are emitted as they normally would for the C/C++ source code. C/C++ errors cause the directive to fail, and any resulting converted assembly is not included.

C/C++ constructs that cannot be converted, such as function-like macros or variable definitions, cause a comment to be output to the converted assembly file. For example:

```
; ASM HEADER WARNING - variable definition 'ABCD' ignored
```

The prefix `ASM HEADER WARNING` appears at the beginning of each message. To see the warnings, either the `WARN` parameter needs to be specified so the messages are displayed on `STDERR`, or else the `LIST` parameter needs to be specified so the warnings appear in the listing file, if any.

Finally, note that the converted assembly code does not appear in the same order as the original C/C++ source code and C/C++ constructs may be simplified to a normalized form during the conversion process, but this should not affect their final usage.

## 12.2 Notes on C/C++ Conversions

The following sections describe C and C++ conversion elements that you need to be aware of when sharing header files with assembly source.

### 12.2.1 Comments

Comments are consumed entirely at the C level, and do not appear in the resulting converted assembly file.

### 12.2.2 Conditional Compilation (#if/#else/#ifdef/etc.)

Conditional compilation is handled entirely at the C level during the conversion step. Define any necessary macros either on the command line (using the compiler `--define=name=value` option) or within a `.cdecls` block using `#define`. The `#if`, `#ifdef`, etc. C/C++ directives are **not** converted to assembly `.if`, `.else`, `.elseif`, and `.endif` directives.

### 12.2.3 Pragmas

Pragmas found in the C/C++ source code cause a warning to be generated as they are not converted. They have no other effect on the resulting assembly file. See [the .cdecls topic](#) for the `WARN` and `NOWARN` parameter discussion for where these warnings are created.

### 12.2.4 The #error and #warning Directives

These preprocessor directives are handled completely by the compiler during the parsing step of conversion. If one of these directives is encountered, the appropriate error or warning message is emitted. These directives are not converted to `.emsg` or `.wmsg` in the assembly output.

### 12.2.5 Predefined symbol \_\_ASM\_HEADER\_\_

The C/C++ macro `__ASM_HEADER__` is defined in the compiler while processing code within `.cdecls`. This allows you to make changes in your code, such as not compiling definitions, during the `.cdecls` processing.

---

#### Be Careful With the \_\_ASM\_HEADER\_\_ Macro

**NOTE:** You must be very careful not to use this macro to introduce any changes in the code that could result in inconsistencies between the code processed while compiling the C/C++ source and while converting to assembly.

---

### 12.2.6 Usage Within C/C++ asm( ) Statements

The `.cdecls` directive is not allowed within C/C++ `asm( )` statements and will cause an error to be generated.

### 12.2.7 The #include Directive

The C/C++ `#include` preprocessor directive is handled transparently by the compiler during the conversion step. Such `#includes` can be nested as deeply as desired as in C/C++ source. The assembly directives `.include` and `.copy` are not used or needed within a `.cdecls`. Use the command line `--include_path` option to specify additional paths to be searched for included files, as you would for C compilation.

### 12.2.8 Conversion of #define Macros

Only object-like macros are converted to assembly. Function-like macros have no assembly representation and so cannot be converted. Pre-defined and built-in C/C++ macros are not converted to assembly (i.e., `__FILE__`, `__TIME__`, `__TI_COMPILER_VERSION__`, etc.). For example, this code is converted to assembly because it is an object-like macro:

```
#define NAME Charley
```

This code is not converted to assembly because it is a function-like macro:

```
#define MAX(x,y) (x>y ? x : y)
```

Some macros, while they are converted, have no functional use in the containing assembly file. For example, the following results in the assembly substitution symbol `FOREVER` being set to the value `while(1)`, although this has no useful use in assembly because `while(1)` is not legal assembly code.

```
#define FOREVER while(1)
```

Macro values are **not** interpreted as they are converted. For example, the following results in the assembler substitution symbol `OFFSET` being set to the literal string value `5+12` and **not** the value `17`. This happens because the semantics of the C/C++ language require that macros are evaluated in context and not when they are parsed.

```
#define OFFSET 5+12
```

Because macros in C/C++ are evaluated in their usage context, C/C++ printf escape sequences such as `\n` are not converted to a single character in the converted assembly macro. See [Section 12.2.11](#) for suggestions on how to use C/C++ macro strings.

Macros are converted using the new `.define` directive (see [Section 12.4.2](#)), which functions similarly to the `.asg` assembler directive. The exception is that `.define` disallows redefinitions of register symbols and mnemonics to prevent the conversion from corrupting the basic assembly environment. To remove a macro from the assembly scope, `.undef` can be used following the `.cdecls` that defines it (see [Section 12.4.3](#)).

The macro functionality of `#` (stringize operator) is only useful within functional macros. Since functional macros are not supported by this process, `#` is not supported either. The concatenation operator `##` is only useful in a functional context, but can be used degenerately to concatenate two strings and so it is supported in that context.

### 12.2.9 The `#undef` Directive

Symbols undefined using the `#undef` directive before the end of the `.cdecls` are not converted to assembly.

### 12.2.10 Enumerations

Enumeration members are converted to `.enum` elements in assembly. For example:

```
enum state { ACTIVE=0x10, SLEEPING=0x01, INTERRUPT=0x100, POWEROFF, LAST};
```

is converted to the following assembly code:

```
state      .enum
ACTIVE     .emember 16
SLEEPING   .emember 1
INTERRUPT  .emember 256
POWEROFF   .emember 257
LAST       .emember 258
           .endenum
```

The members are used via the pseudo-scoping created by the `.enum` directive.

The usage is similar to that for accessing structure members, `enum_name.member`.

This pseudo-scoping is used to prevent enumeration member names from corrupting other symbols within the assembly environment.

### 12.2.11 C Strings

Because C string escapes such as `\n` and `\t` are not converted to hex characters `0x0A` and `0x09` until their use in a string constant in a C/C++ program, C macros whose values are strings cannot be represented as expected in assembly substitution symbols. For example:

```
#define MSG "\tHI\n"
```

becomes, in assembly:

```
.define """\tHI\n"",MSG ; 6 quoted characters! not 5!
```

When used in a C string context, you expect this statement to be converted to 5 characters (tab, H, I, newline, NULL), but the `.string` assembler directive does not know how to perform the C escape conversions.

You can use the `.cstring` directive to cause the escape sequences and NULL termination to be properly handled as they would in C/C++. Using the above symbol `MSG` with a `.cstring` directive results in 5 characters of memory being allocated, the same characters as would result if used in a C/C++ strong context. (See [Section 12.4.7](#) for the `.cstring` directive syntax.)

### 12.2.12 C/C++ Built-In Functions

The C/C++ built-in functions, such as `sizeof( )`, are not translated to their assembly counterparts, if any, if they are used in macros. Also, their C expression values are not inserted into the resulting assembly macro because macros are evaluated in context and there is no active context when converting the macros to assembly.

Suitable functions such as `$_sizeof( )` are available in assembly expressions. However, as the basic types such as `int/char/float` have no type representation in assembly, there is no way to ask for `$_sizeof(int)`, for example, in assembly.

### 12.2.13 Structures and Unions

C/C++ structures and unions are converted to assembly `.struct` and `.union` elements. Padding and ending alignments are added as necessary to make the resulting assembly structure have the same size and member offsets as the C/C++ source. The primary purpose is to allow access to members of C/C++ structures, as well as to facilitate debugging of the assembly code. For nested structures, the assembly `.tag` feature is used to refer to other structures/unions.

The alignment is also passed from the C/C++ source so that the assembly symbol is marked with the same alignment as the C/C++ symbol. (See [Section 12.2.3](#) for information about pragmas, which may attempt to modify structures.) Because the alignment of structures is stored in the assembly symbol, built-in assembly functions like `$_sizeof( )` and `$_alignof( )` can be used on the resulting structure name symbol.

When using unnamed structures (or unions) in typedefs, such as:

```
typedef struct { int a_member; } mystrname;
```

This is really a shorthand way of writing:

```
struct temporary_name { int a_member; };
typedef temporary_name mystrname;
```

The conversion processes the above statements in the same manner: generating a temporary name for the structure and then using `.define` to output a typedef from the temporary name to the user name. You should use your *mystrname* in assembly the same as you would in C/C++, but do not be confused by the assembly structure definition in the list, which contains the temporary name. You can avoid the temporary name by specifying a name for the structure, as in:

```
typedef struct a_st_name { ... } mystrname;
```

If a shorthand method is used in C to declare a variable with a particular structure, for example:

```
extern struct a_name { int a_member; } a_variable;
```

Then after the structure is converted to assembly, a `.tag` directive is generated to declare the structure of the external variable, such as:

```
_a_variable .tag a_st_name
```

This allows you to refer to `_a_variable.a_member` in your assembly code.

### 12.2.14 Function/Variable Prototypes

Non-static function and variable prototypes (not definitions) will result in a `.global` directive being generated for each symbol found.

See [Section 12.3.1](#) for C++ name mangling issues.

Function and variable definitions will result in a warning message being generated (see the `WARN/NOWARN` parameter discussion for where these warnings are created) for each, and they will not be represented in the converted assembly.

The assembly symbol representing the variable declarations will not contain type information about those symbols. Only a `.global` will be issued for them. Therefore, it is your responsibility to ensure the symbol is used appropriately.

See [Section 12.2.13](#) for information on variables names which are of a structure/union type.

### 12.2.15 C Constant Suffixes

The C constant suffixes u, l, and f are passed to the assembly unchanged. The assembler will ignore these suffixes if used in assembly expressions.

### 12.2.16 Basic C/C++ Types

Only complex types (structures and unions) in the C/C++ source code are converted to assembly. Basic types such as int, char, or float are not converted or represented in assembly beyond any existing .int, .char, .float, etc. directives that previously existed in assembly.

Typedefs of basic types are therefore also not represented in the converted assembly.

## 12.3 Notes on C++ Specific Conversions

The following sections describe C++ specific conversion elements that you need to be aware of when sharing header files with assembly source.

### 12.3.1 Name Mangling

Symbol names may be mangled in C++ source files. When mangling occurs, the converted assembly will use the mangled names to avoid symbol name clashes. You can use the demangler (dem2000) to demangle names and identify the correct symbols to use in assembly.

To defeat name mangling in C++ for symbols where polymorphism (calling a function of the same name with different kinds of arguments) is not required, use the following syntax:

```
extern "C" void somefunc(int arg);
```

The above format is the short method for declaring a single function. To use this method for multiple functions, you can also use the following syntax:

```
extern "C"
{
    void somefunc(int arg);
    int  anotherfunc(int arg);
    ...
}
```

### 12.3.2 Derived Classes

Derived classes are only partially supported when converting to assembly because of issues related to C++ scoping which does not exist in assembly. The greatest difference is that base class members do not automatically become full (top-level) members of the derived class. For example:

```
-----
class base
{
    public:
        int b1;
};

class derived : public base
{
    public:
        int d1;
}
```

In C++ code, the class derived would contain both integers b1 and d1. In the converted assembly structure "derived", the members of the base class must be accessed using the name of the base class, such as derived.\_\_b\_base.b1 rather than the expected derived.b1.

A non-virtual, non-empty base class will have \_\_b\_ prepended to its name within the derived class to signify it is a base class name. That is why the example above is derived.\_\_b\_base.b1 and not simply derived.base.b1.

### 12.3.3 Templates

No support exists for templates.

### 12.3.4 Virtual Functions

No support exists for virtual functions, as they have no assembly representation.

## 12.4 Special Assembler Support

### 12.4.1 Enumerations (*.enum/.emember/.endenum*)

New directives have been created to support a pseudo-scoping for enumerations.

The format of these new directives is:

```

ENUM_NAME      .enum
MEMBER1        .emember [value]
MEMBER2        .emember [value]
...
                .endenum

```

The **.enum** directive begins the enumeration definition and **.endenum** terminates it.

The enumeration name (*ENUM\_NAME*) cannot be used to allocate space; its size is reported as zero.

The format to use the value of a member is *ENUM\_NAME.MEMBER*, similar to a structure member usage.

The **.emember** directive optionally accepts the value to set the member to, just as in C/C++. If not specified, the member takes a value one more than the previous member. As in C/C++, member names cannot be duplicated, although values can be. Unless specified with **.emember**, the first enumeration member will be given the value 0 (zero), as in C/C++.

The **.endenum** directive cannot be used with a label, as structure **.endstruct** directives can, because the **.endenum** directive has no value like the **.endstruct** does (containing the size of the structure).

Conditional compilation directives (*.if/.else/.elseif/.endif*) are the only other non-enumeration code allowed within the *.enum/.endenum* sequence.

### 12.4.2 The *.define* Directive

The new **.define** directive functions in the same manner as the **.asg** directive, except that **.define** disallows creation of a substitution symbol that has the same name as a register symbol or mnemonic. It does not create a new symbol name space in the assembler, rather it uses the existing substitution symbol name space. The syntax for the directive is:

```
.define substitution string , substitution symbol name
```

The **.define** directive is used to prevent corruption of the assembly environment when converting C/C++ headers.

### 12.4.3 The *.undefine/.unasg* Directives

The **.undef** directive is used to remove the definition of a substitution symbol created using **.define** or **.asg**. This directive will remove the named symbol from the substitution symbol table from the point of the **.undef** to the end of the assembly file. The syntax for these directives is:

```
.undefine substitution symbol name
```

```
.unasg substitution symbol name
```

This can be used to remove from the assembly environment any C/C++ macros that may cause a problem.

Also see [Section 12.4.2](#), which covers the **.define** directive.

#### 12.4.4 The `$defined( )` Directive

The `$defined` directive returns true/1 or false/0 depending on whether the name exists in the current substitution symbol table or the standard symbol table. In essence `$defined` returns TRUE if the assembler has any user symbol in scope by that name. This differs from `$isdefed` in that `$isdefed` only tests for NON-substitution symbols. The syntax is:

```
$defined( substitution symbol name )
```

A statement such as ".if `$defined(macroname)`" is then similar to the C code "#ifdef `macroname`".

See [Section 12.4.2](#) and [Section 12.4.3](#) for the use of `.define` and `.undef` in assembly.

#### 12.4.5 The `$sizeof Built-In Function`

The new assembly built-in function `$sizeof( )` can be used to query the size of a structure in assembly. It is an alias for the already existing `$structsz( )`. The syntax is:

```
$sizeof( structure name )
```

The `$sizeof` function can then be used similarly to the C built-in function `sizeof( )`.

The assembler's `$sizeof( )` built-in function cannot be used to ask for the size of basic C/C++ types, such as `$sizeof(int)`, because those basic type names are not represented in assembly. Only complex types are converted from C/C++ to assembly.

Also see [Section 12.2.12](#), which notes that this conversion does not happen automatically if the C/C++ `sizeof( )` built-in function is used within a macro.

#### 12.4.6 Structure/Union Alignment & `$alignof( )`

The assembly `.struct` and `.union` directives now take an optional second argument which can be used to specify a minimum alignment to be applied to the symbol name. This is used by the conversion process to pass the specific alignment from C/C++ to assembly.

The assembly built-in function `$alignof( )` can be used to report the alignment of these structures. This can be used even on assembly structures, and the function will return the minimum alignment calculated by the assembler.

#### 12.4.7 The `.cstring Directive`

You can use the new `.cstring` directive to cause the escape sequences and NULL termination to be properly handled as they would in C/C++.

```
.cstring "String with C escapes.\nWill be NULL terminated.\012"
```

See [Section 12.2.11](#) for more information on the new `.cstring` directive.



## Symbolic Debugging Directives

---

---

The assembler supports several directives that the TMS320C28x C/C++ compiler uses for symbolic debugging. These directives differ for the two debugging formats, DWARF and COFF.

These directives are not meant for use by assembly-language programmers. They require arguments that can be difficult to calculate manually, and their usage must conform to a predetermined agreement between the compiler, the assembler, and the debugger. This appendix documents these directives for informational purposes only.

| Topic                                   | Page       |
|-----------------------------------------|------------|
| <b>A.1 DWARF Debugging Format .....</b> | <b>298</b> |
| <b>A.2 COFF Debugging Format .....</b>  | <b>298</b> |
| <b>A.3 Debug Directive Syntax .....</b> | <b>299</b> |

## A.1 DWARF Debugging Format

A subset of the DWARF symbolic debugging directives are always listed in the assembly language file that the compiler creates for program analysis purposes. To list the complete set used for full symbolic debug, invoke the compiler with the `--symdebug:dwarf` option, as shown below:

```
cl2000 -v28 --symdebug:dwarf --keep_asm input_file
```

The `--keep_asm` option instructs the compiler to retain the generated assembly file.

To disable the generation of all symbolic debug directives, invoke the compiler with the `-symdebug:none` option:

```
cl2000 -v28 --symdebug:none --keep_asm input_file
```

The DWARF debugging format consists of the following directives:

- The **.dwtag** and **.dwendtag** directives define a Debug Information Entry (DIE) in the `.debug_info` section.
- The **.dwattr** directive adds an attribute to an existing DIE.
- The **.dwpsn** directive identifies the source position of a C/C++ statement.
- The **.dwcie** and **.dwentry** directives define a Common Information Entry (CIE) in the `.debug_frame` section.
- The **.dwfde** and **.dwentry** directives define a Frame Description Entry (FDE) in the `.debug_frame` section.
- The **.dwcfi** directive defines a call frame instruction for a CIE or FDE.

## A.2 COFF Debugging Format

COFF symbolic debug is now obsolete. These directives are supported for backwards-compatibility only. The decision to switch to DWARF as the symbolic debug format was made to overcome many limitations of COFF symbolic debug, including the absence of C++ support.

The COFF debugging format consists of the following directives:

- The **.sym** directive defines a global variable, a local variable, or a function. Several parameters allow you to associate various debugging information with the variable or function.
- The **.stag**, **.etag**, and **.utag** directives define structures, enumerations, and unions, respectively. The **.member** directive specifies a member of a structure, enumeration, or union. The **.eos** directive ends a structure, enumeration, or union definition.
- The **.func** and **.endfunc** directives specify the beginning and ending lines of a C/C++ function.
- The **.block** and **.endblock** directives specify the bounds of C/C++ blocks.
- The **.file** directive defines a symbol in the symbol table that identifies the current source filename.
- The **.line** directive identifies the line number of a C/C++ source statement.

### A.3 Debug Directive Syntax

Table A-1 is an alphabetical listing of the symbolic debugging directives. For information on the C/C++ compiler, refer to the *TMS320C28x Optimizing C/C++ Compiler User's Guide*.

**Table A-1. Symbolic Debugging Directives**

| Label     | Directive          | Arguments                                                                                                  |
|-----------|--------------------|------------------------------------------------------------------------------------------------------------|
|           | <b>.block</b>      | [beginning line number]                                                                                    |
|           | <b>.dwattr</b>     | DIE label , DIE attribute name ( DIE attribute value )[, DIE attribute name ( attribute value ) [, ...]    |
|           | <b>.dwcfi</b>      | call frame instruction opcode[, operand[, operand]]                                                        |
| CIE label | <b>.dwcie</b>      | version , return address register                                                                          |
|           | <b>.dwendentry</b> |                                                                                                            |
|           | <b>.dwendtag</b>   |                                                                                                            |
|           | <b>.dwfde</b>      | CIE label                                                                                                  |
|           | <b>.dwpsn</b>      | " filename " , line number , column number                                                                 |
| DIE label | <b>.dwtag</b>      | DIE tag name , DIE attribute name ( DIE attribute value )[, DIE attribute name ( attribute value ) [, ...] |
|           | <b>.endblock</b>   | [ending line number]                                                                                       |
|           | <b>.endfunc</b>    | [ending line number[, register mask[, frame size]]]                                                        |
|           | <b>.eos</b>        |                                                                                                            |
|           | <b>.etag</b>       | name[, size]                                                                                               |
|           | <b>.file</b>       | " filename "                                                                                               |
|           | <b>.func</b>       | [beginning line number]                                                                                    |
|           | <b>.line</b>       | line number[, address]                                                                                     |
|           | <b>.member</b>     | name , value[, type , storage class , size , tag , dims]                                                   |
|           | <b>.stag</b>       | name[, size]                                                                                               |
|           | <b>.sym</b>        | name , value[, type , storage class , size , tag , dims]                                                   |
|           | <b>.utag</b>       | name[, size]                                                                                               |



## XML Link Information File Description

---

---

The TMS320C28x linker supports the generation of an XML link information file via the `--xml_link_info file` option. This option causes the linker to generate a well-formed XML file containing detailed information about the result of a link. The information included in this file includes all of the information that is currently produced in a linker-generated map file.

As the linker evolves, the XML link information file may be extended to include additional information that could be useful for static analysis of linker results.

This appendix enumerates all of the elements that are generated by the linker into the XML link information file.

| Topic                                               | Page       |
|-----------------------------------------------------|------------|
| <b>B.1 XML Information File Element Types .....</b> | <b>302</b> |
| <b>B.2 Document Elements .....</b>                  | <b>302</b> |

## B.1 XML Information File Element Types

These element types will be generated by the linker:

- **Container elements** represent an object that contains other elements that describe the object. Container elements have an id attribute that makes them accessible from other elements.
- **String elements** contain a string representation of their value.
- **Constant elements** contain a 32-bit unsigned long representation of their value (with a 0x prefix).
- **Reference elements** are empty elements that contain an idref attribute that specifies a link to another container element.

In [Section B.2](#), the element type is specified for each element in parentheses following the element description. For instance, the <link\_time> element lists the time of the link execution (string).

## B.2 Document Elements

The root element, or the document element, is <link\_info>. All other elements contained in the XML link information file are children of the <link\_info> element. The following sections describe the elements that an XML information file can contain.

### B.2.1 Header Elements

The first elements in the XML link information file provide general information about the linker and the link session:

- The <banner> element lists the name of the executable and the version information (string).
- The <copyright> element lists the TI copyright information (string).
- The <link\_time> is a timestamp representation of the link time (unsigned 32-bit int).
- The <output\_file> element lists the name of the linked output file generated (string).
- The <entry\_point> element specifies the program entry point, as determined by the linker (container) with two entries:
  - The <name> is the entry point symbol name, if any (string).
  - The <address> is the entry point address (constant).

#### Example B-1. Header Element for the hi.out Output File

```
<banner>TMS320Cxx Linker          Version x.xx (Jan 6 2008)</banner>
<copyright>Copyright (c) 1996-2008 Texas Instruments Incorporated</copyright>
<link_time>0x43dfd8a4</link_time>
<output_file>hi.out</output_file>
<entry_point>
  <name>_c_int00</name>
  <address>0xaf80</address>
</entry_point>
```

## B.2.2 Input File List

The next section of the XML link information file is the input file list, which is delimited with a `<input_file_list>` container element. The `<input_file_list>` can contain any number of `<input_file>` elements.

Each `<input_file>` instance specifies the input file involved in the link. Each `<input_file>` has an `id` attribute that can be referenced by other elements, such as an `<object_component>`. An `<input_file>` is a container element enclosing the following elements:

- The `<path>` element names a directory path, if applicable (string).
- The `<kind>` element specifies a file type, either archive or object (string).
- The `<file>` element specifies an archive name or filename (string).
- The `<name>` element specifies an object file name, or archive member name (string).

### Example B-2. Input File List for the hi.out Output File

```

<input_file_list>
  <input_file id="f1-1">
    <kind>object</kind>
    <file>hi.obj</file>
    <name>hi.obj</name>
  </input_file>
  <input_file id="f1-2">
    <path>/tools/lib/</path>
    <kind>archive</kind>
    <file>rtsxxx.lib</file>
    <name>boot.obj</name>
  </input_file>
  <input_file id="f1-3">
    <path>/tools/lib/</path>
    <kind>archive</kind>
    <file>rtsxxx.lib</file>
    <name>exit.obj</name>
  </input_file>
  <input_file id="f1-4">
    <path>/tools/lib/</path>
    <kind>archive</kind>
    <file>rtsxxx.lib</file>
    <name>printf.obj</name>
  </input_file>
  ...
</input_file_list>

```

### B.2.3 Object Component List

The next section of the XML link information file contains a specification of all of the object components that are involved in the link. An example of an object component is an input section. In general, an object component is the smallest piece of object that can be manipulated by the linker.

The `<object_component_list>` is a container element enclosing any number of `<object_component>` elements.

Each `<object_component>` specifies a single object component. Each `<object_component>` has an `id` attribute so that it can be referenced directly from other elements, such as a `<logical_group>`. An `<object_component>` is a container element enclosing the following elements:

- The `<name>` element names the object component (string).
- The `<load_address>` element specifies the load-time address of the object component (constant).
- The `<run_address>` element specifies the run-time address of the object component (constant).
- The `<size>` element specifies the size of the object component (constant).
- The `<input_file_ref>` element specifies the source file where the object component originated (reference).

#### Example B-3. Object Component List for the fl-4 Input File

```

<object_component id="oc-20">
  <name>.text</name>
  <load_address>0xac00</load_address>
  <run_address>0xac00</run_address>
  <size>0xc0</size>
  <input_file_ref idref="fl-4"/>
</object_component>
<object_component id="oc-21">
  <name>.data</name>
  <load_address>0x80000000</load_address>
  <run_address>0x80000000</run_address>
  <size>0x0</size>
  <input_file_ref idref="fl-4"/>
</object_component>
<object_component id="oc-22">
  <name>.bss</name>
  <load_address>0x80000000</load_address>
  <run_address>0x80000000</run_address>
  <size>0x0</size>
  <input_file_ref idref="fl-4"/>
</object_component>
  
```



## B.2.4 Logical Group List

The `<logical_group_list>` section of the XML link information file is similar to the output section listing in a linker-generated map file. However, the XML link information file contains a specification of GROUP and UNION output sections, which are not represented in a map file. There are three kinds of list items that can occur in a `<logical_group_list>`:

- The `<logical_group>` is the specification of a section or GROUP that contains a list of object components or logical group members. Each `<logical_group>` element is given an id so that it may be referenced from other elements. Each `<logical_group>` is a container element enclosing the following elements:
  - The `<name>` element names the logical group (string).
  - The `<load_address>` element specifies the load-time address of the logical group (constant).
  - The `<run_address>` element specifies the run-time address of the logical group (constant).
  - The `<size>` element specifies the size of the logical group (constant).
  - The `<contents>` element lists elements contained in this logical group (container). These elements refer to each of the member objects contained in this logical group:
    - The `<object_component_ref>` is an object component that is contained in this logical group (reference).
    - The `<logical_group_ref>` is a logical group that is contained in this logical group (reference).
- The `<overlay>` is a special kind of logical group that represents a UNION, or a set of objects that share the same memory space (container). Each `<overlay>` element is given an id so that it may be referenced from other elements (like from an `<allocated_space>` element in the placement map). Each `<overlay>` contains the following elements:
  - The `<name>` element names the overlay (string).
  - The `<run_address>` element specifies the run-time address of overlay (constant).
  - The `<size>` element specifies the size of logical group (constant).
  - The `<contents>` container element lists elements contained in this overlay. These elements refer to each of the member objects contained in this logical group:
    - The `<object_component_ref>` is an object component that is contained in this logical group (reference).
    - The `<logical_group_ref>` is a logical group that is contained in this logical group (reference).
- The `<split_section>` is another special kind of logical group that represents a collection of logical groups that is split among multiple memory areas. Each `<split_section>` element is given an id so that it may be referenced from other elements. The id consists of the following elements.
  - The `<name>` element names the split section (string).
  - The `<contents>` container element lists elements contained in this split section. The `<logical_group_ref>` elements refer to each of the member objects contained in this split section, and each element referenced is a logical group that is contained in this split section (reference).

**Example B-4. Logical Group List for the fl-4 Input File**

```

<logical_group_list>
  ...
  <logical_group id="lg-7">
    <name>.text</name>
    <load_address>0x20</load_address>
    <run_address>0x20</run_address>
    <size>0xb240</size>
    <contents>
      <object_component_ref idref="oc-34"/>
      <object_component_ref idref="oc-108"/>
      <object_component_ref idref="oc-e2"/>
      ...
    </contents>
  </logical_group>
  ...
  <overlay id="lg-b">
    <name>UNION_1</name>
    <run_address>0xb600</run_address>
    <size>0xc0</size>
    <contents>
      <object_component_ref idref="oc-45"/>
      <logical_group_ref idref="lg-8"/>
    </contents>
  </overlay>
  ...
  <split_section id="lg-12">
    <name>.task_scn</name>
    <size>0x120</size>
    <contents>
      <logical_group_ref idref="lg-10"/>
      <logical_group_ref idref="lg-11"/>
    </contents>
    ...
  </split_section>
</logical_group_list>

```

## B.2.5 Placement Map

The `<placement_map>` element describes the memory placement details of all named memory areas in the application, including unused spaces between logical groups that have been placed in a particular memory area.

The `<memory_area>` is a description of the placement details within a named memory area (container). The description consists of these items:

- The `<name>` names the memory area (string).
- The `<page_id>` gives the id of the memory page in which this memory area is defined (constant).
- The `<origin>` specifies the beginning address of the memory area (constant).
- The `<length>` specifies the length of the memory area (constant).
- The `<used_space>` specifies the amount of allocated space in this area (constant).
- The `<unused_space>` specifies the amount of available space in this area (constant).
- The `<attributes>` lists the RWXI attributes that are associated with this area, if any (string).
- The `<fill_value>` specifies the fill value that is to be placed in unused space, if the fill directive is specified with the memory area (constant).
- The `<usage_details>` lists details of each allocated or available fragment in this memory area. If the fragment is allocated to a logical group, then a `<logical_group_ref>` element is provided to facilitate access to the details of that logical group. All fragment specifications include `<start_address>` and `<size>` elements.
  - The `<allocated_space>` element provides details of an allocated fragment within this memory area (container):
    - The `<start_address>` specifies the address of the fragment (constant).
    - The `<size>` specifies the size of the fragment (constant).
    - The `<logical_group_ref>` provides a reference to the logical group that is allocated to this fragment (reference).
  - The `<available_space>` element provides details of an available fragment within this memory area (container):
    - The `<start_address>` specifies the address of the fragment (constant).
    - The `<size>` specifies the size of the fragment (constant).

### Example B-5. Placement Map for the fl-4 Input File

```

<placement_map>
  <memory_area>
    <name>PMEM</name>
    <page_id>0x0</page_id>
    <origin>0x20</origin>
    <length>0x100000</length>
    <used_space>0xb240</used_space>
    <unused_space>0xf4dc0</unused_space>
    <attributes>RWXI</attributes>
    <usage_details>
      <allocated_space>
        <start_address>0x20</start_address>
        <size>0xb240</size>
        <logical_group_ref idref="lg-7"/>
      </allocated_space>
      <available_space>
        <start_address>0xb260</start_address>
        <size>0xf4dc0</size>
      </available_space>
    </usage_details>
  </memory_area>
  ...
</placement_map>

```

## B.2.6 Far Call Trampoline List

The `<far_call_trampoline_list>` is a list of `<far_call_trampoline>` elements. The linker supports the generation of far call trampolines to help a call site reach a destination that is out of range. A far call trampoline function is guaranteed to reach the called function (callee) as it may utilize an indirect call to the called function.

The `<far_call_trampoline_list>` enumerates all of the far call trampolines that are generated by the linker for a particular link. The `<far_call_trampoline_list>` can contain any number of `<far_call_trampoline>` elements. Each `<far_call_trampoline>` is a container enclosing the following elements:

- The `<callee_name>` element names the destination function (string).
- The `<callee_address>` is the address of the called function (constant).
- The `<trampoline_object_component_ref>` is a reference to an object component that contains the definition of the trampoline function (reference).
- The `<trampoline_address>` is the address of the trampoline function (constant).
- The `<caller_list>` enumerates all call sites that utilize this trampoline to reach the called function (container).
- The `<trampoline_call_site>` provides the details of a trampoline call site (container) and consists of these items:
  - The `<caller_address>` specifies the call site address (constant).
  - The `<caller_object_component_ref>` is the object component where the call site resides (reference).

### Example B-6. Fall Call Trampoline List for the fl-4 Input File

```

<far_call_trampoline_list>
...
  <far_call_trampoline>
    <callee_name>_foo</callee_name>
    <callee_address>0x08000030</callee_address>
    <trampoline_object_component_ref idref="oc-123"/>
    <trampoline_address>0x2020</trampoline_address>
    <caller_list>
      <call_site>
        <caller_address>0x1800</caller_address>
        <caller_object_component_ref idref="oc-23"/>
      </call_site>
      <call_site>
        <caller_address>0x1810</caller_address>
        <caller_object_component_ref idref="oc-23"/>
      </call_site>
    </caller_list>
  </far_call_trampoline>
...
</far_call_trampoline_list>

```

## B.2.7 Symbol Table

The **<symbol\_table>** contains a list of all of the global symbols that are included in the link. The list provides information about a symbol's name and value. In the future, the `symbol_table` list may provide type information, the object component in which the symbol is defined, storage class, etc.

The **<symbol>** is a container element that specifies the name and value of a symbol with these elements:

- The **<name>** element specifies the symbol name (string).
- The **<value>** element specifies the symbol value (constant).

### Example B-7. Symbol Table for the fl-4 Input File

```

<symbol_table>
  <symbol>
    <name>_c_int00</name>
    <value>0xaf80</value>
  </symbol>
  <symbol>
    <name>_main</name>
    <value>0xb1e0</value>
  </symbol>
  <symbol>
    <name>_printf</name>
    <value>0xac00</value>
  </symbol>
  ...
</symbol_table>

```



## ***CRC Reference Implementation***

---

---

This appendix contains source code in C for a reference implementation of a CRC calculation routine that is compatible with the linker-generated CRC tables. This code is found in the file labeled `ref_crc.c`.

This appendix also contains source code for a simple example application using linker-generated CRC tables and copy tables. The application contains several tasks which share a common run area. Linker-generated copy tables move the tasks from their load addresses to the run address. The application also uses the reference CRC calculation routine to compute CRC values which are compared against the linker-generated values.

This code is for reference only, and no warranty is made as to suitability for any purpose.

| <b>Topic</b>                                                        | <b>Page</b> |
|---------------------------------------------------------------------|-------------|
| <b>C.1</b> <b>Compilation Instructions</b> .....                    | <b>312</b>  |
| <b>C.2</b> <b>Reference CRC Calculation Routine</b> .....           | <b>312</b>  |
| <b>C.3</b> <b>Linker-Generated Copy Tables and CRC Tables</b> ..... | <b>315</b>  |

## C.1 Compilation Instructions

1. Run a stand-alone test of the reference implementation of CRC computation.

- For C2000 on Linux:

```
cl2000 -v28 -ml -D=_RUN_MAIN ref_crc.c -z -o ref_crc_c2000 -l lnk2800_ml .cmd
<Linking>
```

Run ref\_crc\_c2000 with an appropriate simulator:

```
- CRC-32-PRIME: 4beab53b
- CRC-8-PRIME: 70
- CRC16_802_15_4: 1bd3
```

- For GCC on Linux:

```
gcc -D_RUN_MAIN -o ref_crc_gcc ref_crc.c
./ref_crc_gcc
```

Run ref\_crc\_gcc with an appropriate simulator:

```
- CRC-32-PRIME: 4beab53b
- CRC-8-PRIME: 70
- CRC16_802_15_4: 1bd3
```

2. Run a simple example program using copy tables and CRC tables.

- For C2000 on Linux:

```
cl2000 -c -v28 -ml *.c
cl2000 -z -lex1.cmd
<Linking>
```

Run ex1.out with an appropriate simulator:

```
- CRC-32-PRIME: 4beab53b
- CRC-8-PRIME: 70
- CRC16_802_15_4: 1bd3
```

## C.2 Reference CRC Calculation Routine

### Example C-1. Reference Implementation of a CRC Calculation Function: ref\_crc.c

```

/*****
/* Reference implementation of a CRC calculation function          */
/*                                                                */
/* gen_crc is the interface function which should be called from the  */
/* application.  There is also a stand-alone test mode that can be used  */
/* if _RUN_MAIN is defined.                                           */
*****/

/-----*/
/* This file does NOT implement a general-purpose CRC function.      */
/* Specifically, it does not handle parameterization by initial value, bit */
/* reflection, or final XOR value.  This implementation is intended only to */
/* implement the CRC functions used by the linker for C28x CRC tables.  The */
/* algorithms used by the linker are selected to match the CRC algorithms in */
/* the PRIME and IEEE 802.15.4-2006 standards, which use the polynomials */
/* supported by the C28x VCU hardware.  To understand CRCs in general, */
/* especially what other parameters exist, see:                       */
/*                                                                */
/* "A Painless Guide To CRC Error Detection Algorithms" likely at:    */
/*   http://www.ross.net/crc/download/crc_v3.txt                      */
/* Author : Ross Williams (ross@guest.adelaide.edu.au).             */
/* Date   : 3 June 1993.                                             */
/* Status : Public domain (C code).                                  */
/-----*/

#include <stdio.h>
#include <stdlib.h>
#include <limits.h>

/-----*/

```



**Example C-1. Reference Implementation of a CRC Calculation Function: ref\_crc.c (continued)**

```

/* These are the CRC algorithms supported by the linker, which match the */
/* polynomials supported in C28x VCU hardware, which match the PRIME and */
/* IEEE 802.15.4-2006 standards. These must match the values in crc_tbl.h. */
/*-----*/
#define CRC32_PRIME      0
#define CRC16_802_15_4  1
#define CRC16_ALT       2
#define CRC8_PRIME      3

typedef struct crc_config_t
{
    int id;
    int degree;
    unsigned long poly;
} crc_config_t;

const crc_config_t crc_config[] = { { CRC32_PRIME,    32, 0x04c11db7 },
                                     { CRC16_802_15_4, 16,  0x1021 },
                                     { CRC16_ALT,     16,  0x8005 },
                                     { CRC8_PRIME,     8,   0x07 } };

unsigned long crc_table[256] = { 0 };

const crc_config_t *find_config(int id) {
    size_t i;
    for (i = 0; i < sizeof(crc_config) / sizeof(*crc_config); i++)
        if (crc_config[i].id == id)
            return &crc_config[i];

    fprintf(stderr, "invalid config id %d\n", id);
    exit(EXIT_FAILURE);
    return NULL;
}

/*-----*/
/* Table-driven version */
/*-----*/
unsigned long generate_mask(int degree)
{
    unsigned long half = (1ul << (degree / 2)) - 1;
    return half << (degree / 2) | half;
}

void generate_crc_table(const crc_config_t *config)
{
    int i, j;

    unsigned long bit, crc;
    unsigned long high_bit = (1ul << (config->degree - 1));
    unsigned long mask     = generate_mask(config->degree);

    for (i = 0; i < 256; i++)
    {
        crc = (unsigned long)i << config->degree - 8;

        for (j = 0; j < 8; j++)
        {
            bit = crc & high_bit;
            crc <<= 1;
            if (bit) crc ^= config->poly;
        }

        crc_table[i] = crc & mask;
    }
}

/*****
/* gen_crc - Return the CRC value for the data using the given CRC algorithm */
/*          int id          : identifies the CRC algorithm */

```

**Example C-1. Reference Implementation of a CRC Calculation Function: ref\_crc.c (continued)**

```

/*      char *data      : the data                                */
/*      size_t len      : the size of the data                    */
/*****
unsigned long gen_crc(int id, const unsigned char *data, size_t len)

{
    /*-----*/
    /* Note: this is not a general-purpose CRC function.  It does not handle */
    /* parameterization by initial value, bit reflection, or final XOR      */
    /* value.  This CRC function is specialized to the CRC algorithms in the  */
    /* linker used for C28x CRC tables.                                       */
    /*-----*/

    /*-----*/
    /* This CRC function is not intended to be optimal; it is written such   */
    /* that it works and generates the same result on all 8-bit and 16-bit   */
    /* targets, including C27x, C28x, other TI DSPs, and typical desktops.   */
    /*-----*/

    const crc_config_t *config = find_config(id);

    unsigned long crc = 0;
    unsigned long mask = generate_mask(config->degree);

    size_t i;

    generate_crc_table(config);

    for (i = 0; i < len; i++)
    {
        unsigned int datum = data[i];

        /*-----*/
        /* This loop handles 16-bit chars when we compile on 16-bit machines. */
        /*-----*/
        int n;

        for (n = 0; n @ (CHAR_BIT / 8); n++)
        {
            /*-----*/
            /* For 16-bit machines, we need to feed the octets in an          */
            /* arbitrary order.  For C2000, the arbitrary order we choose is    */
            /* to feed the LEAST significant octet of char 0 first.  The        */
            /* first octet fed to the CRC is the LEAST-significant octet of    */
            /* char 0; the second octet is the MOST-significant octet of char  */
            /* 0.  See the "Special Note regarding 16-bit char" in the         */
            /* Assembly Language Tools User's Guide.                          */
            /*-----*/

            #if __TMS320C28XX__
                /*-----*/
                /* Using __byte is not necessary; we use it here to illustrate */
                /* how it relates to octet order.                               */
                /*-----*/
                unsigned long octet = __byte((int*)&datum, n);
            #else
                unsigned long octet = ((datum >> (8 * n)) & 0xff);
            #endif

            unsigned long term1 = (crc << 8);
            int          idx   = ((crc >> (config->degree - 8)) & 0xff) ^ octet;

            crc = term1 ^ crc_table[idx];
        }

        return crc & mask;
    }

    #ifdef _RUN_MAIN
    /*****
    /* main - If requested, compute the CRC of test data using each algorithm. */
    */
    */

```

**Example C-1. Reference Implementation of a CRC Calculation Function: `ref_crc.c` (continued)**

```

/*****
int main(void)
{
  #if CHAR_BIT == 16
    const unsigned char data[] = { 'a', 'b', 'c', 'd' };
  #elif CHAR_BIT == 8
    /*-----*/
    /* This represents "abcd" as it would appear in C2000 memory if we view */
    /* C2000 memory as octets, least-significant octet first; see "a special */
    /* note regarding 16-bit char" in Assembly Language Tools User's Guide. */
    /*-----*/
    const unsigned char data[] = { 'a', 0, 'b', 0, 'c', 0, 'd', 0 };
  #endif

  /* CRC_8_PRIME: 0x70 */
  /* CRC_16_802: 0x1bd3 */
  /* CRC_32_PRIME: 0x4beab53b */

  const unsigned char *p = (const unsigned char *)data;

  unsigned long crc;

  crc = gen_crc(CRC32_PRIME, p, sizeof data);
  printf("CRC_32_PRIME: %08lx\n", crc);

  crc = gen_crc(CRC8_PRIME, p, sizeof data);
  printf("CRC_8_PRIME: %02lx\n", crc);

  crc = gen_crc(CRC16_802_15_4, p, sizeof data);
  printf("CRC16_802_15_4: %04lx\n", crc);

  return 0;
}
*****/

```

### C.3 Linker-Generated Copy Tables and CRC Tables

Three tasks exist in separate load areas. As each is needed, it is copied into the common run area and executed. A separate copy table is generated for each task (see `table()` operator in `ex1.cmd`). CRC values for the task functions are verified as well. See [Example C-7](#) for the `crc_table()` operator calls.

**Example C-2. Main Routine for Example Application: `ex1.cmd`**

```

#include <stdio.h>
#include <cpy_tbl.h>
#include <crc_tbl.h>

extern COPY_TABLE task1_ctbl;
extern COPY_TABLE task2_ctbl;
extern COPY_TABLE task3_ctbl;

extern CRC_TABLE task1_crctbl;
extern CRC_TABLE union_crctbl;

/*****
/* copy_in -      provided by the RTS library to copy code from its load   */
/*               address to its run address.                               */
/* my_check_CRC - verify that the CRC values stored in the given table     */
/*               match the computed value at run time, using load address. */
/* taskX -       perform a simple task. These routines share the same run */
/*               address.                                                  */
*****/
extern void copy_in(COPY_TABLE *tp);
extern unsigned int my_check_CRC(CRC_TABLE *tp);
extern void task1(void);
extern void task2(void);
extern void task3(void);

```

**Example C-2. Main Routine for Example Application: ex1.cmd (continued)**

```

int x = 0;

main()
{
    unsigned int ret_val = 0;
    unsigned int CRC_ok = 1;

    printf("Start task copy test with CRC checking.\n");

    printf("Check CRC of task1 section.\n");
    ret_val = my_check_CRC(&task1_crc_tbl);
    if (ret_val == 1)
        printf("\nPASSED: CRCs for task1_crc_tbl match.\n");
    else
    {
        CRC_ok = 0;
        printf("\nFAILED: CRCs for task1_crc_tbl do NOT match.\n");
    }

    /******
    /* Copy task1 into the run area and execute it.          */
    /******
    copy_in(&task1_ctbl);
    task1();

    printf("Check CRC of UNION.\n");
    if ((ret_val = my_check_CRC(&union_crc_tbl)) == 1)
        printf("\nPASSED: CRCs for union_crc_tbl match.\n");
    else
    {
        CRC_ok = 0;
        printf("\nFAILED: CRCs for union_crc_tbl do NOT match.\n");
    }
    copy_in(&task2_ctbl);
    task2();
    copy_in(&task3_ctbl);
    task3();

    printf("Copy table and CRC tasks %s!!\n",
        ((CRC_ok == 1 && x == 6) ? "PASSED" : "FAILED"));
}

```

**Example C-3. Checking CRC Values: check\_crc.c**

```

#include <stdio.h>
#include "crc_tbl.h"

/******
/* gen_crc() - computes the CRC value of data using the CRC algorithm ID   */
/*          specified. Found in ref_crc.c                                  */
/******
unsigned long gen_crc(int id, const unsigned char *data, size_t len);

/******
/* my_check_CRC() - verify the CRC values for all records stored in the    */
/*          given CRC table. Print diagnostic information also.          */
/******
unsigned int my_check_CRC(CRC_TABLE *tp)
{
    int i;
    unsigned int ret_val = 1;
    uint32_t my_crc;

    printf("\n\tTABLE INFO: rec size=%d, num_rec=%d.",
        tp->rec_size, tp->num_recs);

    for (i = 0; i < tp->num_recs; i++)

```

**Example C-3. Checking CRC Values: *check\_crc.c* (continued)**

```

{
    CRC_RECORD crc_rec = tp->recs[i];

    /*****
    /* COMPUTE CRC OF DATA STARTING AT crc_rec.addr */
    /* FOR crc_rec.size UNITS. USE */
    /* crc_rec.crc_alg_ID to select algorithm. */
    /* COMPARE COMPUTED VALUE TO crc_rec.crc_value. */
    *****/
    my_crc = gen_crc(crc_rec.crc_alg_ID, (unsigned char *)crc_rec.addr,
                    crc_rec.size);
    printf("\n\tCRC record: page=%x, alg=%x, addr = %lx, size=%lx, "
           "\n\t\tcrc=%lx, my_crc=%lx.",
           crc_rec.page_id, crc_rec.crc_alg_ID,
           crc_rec.addr, crc_rec.size, crc_rec.crc_value, my_crc);

    if (my_crc == crc_rec.crc_value)
        printf("\n\tCRCs match for record %d.\n", i);
    else
    {
        ret_val = 0;
        printf("\n\tCRCs DO NOT match for record %d.\n", i);
    }
}
return ret_val;
}

```

**Example C-4. Task1 Routine: *task1.c***

```

#include <stdio.h>

extern int x;

#pragma CODE_SECTION(task1, ".task1_scn")
void task1(void) { printf("hit task1, x is %d\n", x); x += 1; }

```

**Example C-5. Task2 Routine: *task2.c***

```

#include <stdio.h>

extern int x;

#pragma CODE_SECTION(task2, ".task2_scn")
void task2(void) { printf("hit task2, x is %d\n", x); x += 2; }

```

**Example C-6. Task3 Routine: *task3.c***

```

#include <stdio.h>

extern int x;

#pragma CODE_SECTION(task3, ".task3_scn")
void task3(void) { printf("hit task3, x is %d\n", x); x += 3; }

```

**Example C-7. Example 1 Command File: ex1.cmd**

```

/*****
/* Linker Generated Copy Tables - Example #1
/*
/* 3 separate tasks are loaded into 3 separate areas of target memory.
/* They all must be run in a common area of memory (overlay). Before
/* each task is run, it is copied into its run space using a linker
/* generated copy table for each task.
/*
/* Two linker generated CRC tables are created. One is for .task1_scn
/* and the other is for the UNION. The UNION table will contain CRC
/* records for .task1_scn, .task2_scn and .task3_scn.
*****/
-c
-x

ex1.obj
task1.obj
task2.obj
task3.obj
check_crc.obj
ref_crc.obj

-o ex1.out
-m ex1.map

-stack 0x1000
-heap 0x800
-farheap 0x800

MEMORY
{
PAGE 0 : RESET(R) : origin = 0x000000, length = 0x00002
          VECTORS(R) : origin = 0x000002, length = 0x003FE
          PROG(R) : origin = 0x3f0000, length = 0x10000
PAGE 1 : RAM1 (RW) : origin = 0x000402 , length = 0x003FE
PAGE 1 : RAM2 (RW) : origin = 0x001000 , length = 0x04000
PAGE 1 : RAM3 (RW) : origin = 0x3e0000 , length = 0x08000
}

SECTIONS
{
    UNION
    {
        .task2_scn: load = RAM3, PAGE = 1, table(_task2_ctbl)
        .task3_scn: load = RAM3, PAGE = 1, table(_task3_ctbl)
        .task1_scn: load = RAM3, PAGE = 1, table(_task1_ctbl),
                    crc_table(_task1_crctbl)
    } run = PROG, PAGE = 0, crc_table(_union_crctbl, algorithm=CRC16_ALT)

    vectors : load = VECTORS, PAGE = 0
    .text : load = PROG, PAGE = 0
    .data : load = 440h, PAGE = 1
    .cinit : > PROG, PAGE = 0
    .bss : > RAM2, PAGE = 1
    .ebss : > RAM3, PAGE = 1
    .econst : > RAM3, PAGE = 1
    .const : > RAM2, PAGE = 1
    .reset : > RESET, PAGE = 0
    .stack : > RAM2, PAGE = 1
    .systemem : > RAM2, PAGE = 1
    .esystemem : > RAM3, PAGE = 1

    .ovly > RAM2, PAGE = 1
}
    
```

---

---

## Glossary

---

---

**ABI**— Application binary interface.

**absolute address**— An address that is permanently assigned to a TMS320C28x memory location.

**absolute lister**— A debugging tool that allows you to create assembler listings that contain absolute addresses.

**alignment**— A process in which the linker places an output section at an address that falls on an  $n$ -byte boundary, where  $n$  is a power of 2. You can specify alignment with the SECTIONS linker directive.

**allocation**— A process in which the linker calculates the final memory addresses of output sections.

**ANSI**— American National Standards Institute; an organization that establishes standards voluntarily followed by industries.

**archive library**— A collection of individual files grouped into a single file by the archiver.

**archiver**— A software program that collects several individual files into a single file called an archive library. With the archiver, you can add, delete, extract, or replace members of the archive library.

**ASCII**— American Standard Code for Information Interchange; a standard computer code for representing and exchanging alphanumeric information.

**assembler**— A software program that creates a machine-language program from a source file that contains assembly language instructions, directives, and macro definitions. The assembler substitutes absolute operation codes for symbolic operation codes and absolute or relocatable addresses for symbolic addresses.

**assembly-time constant**— A symbol that is assigned a constant value with the .set directive.

**big endian**— An addressing protocol in which bytes are numbered from left to right within a word. More significant bytes in a word have lower numbered addresses. Endian ordering is hardware-specific and is determined at reset. See also *little endian*

**binding**— A process in which you specify a distinct address for an output section or a symbol.

**block**— A set of statements that are grouped together within braces and treated as an entity.

**.bss section**— One of the default object file sections. You use the assembler .bss directive to reserve a specified amount of space in the memory map that you can use later for storing data. The .bss section is uninitialized.

**byte**— Per ANSI/ISO C, the smallest addressable unit that can hold a character.

**C/C++ compiler**— A software program that translates C source statements into assembly language source statements.

**COFF**— Common object file format; a system of object files configured according to a standard developed by AT&T. These files are relocatable in memory space.

**command file**— A file that contains options, filenames, directives, or commands for the linker or hex conversion utility.

- comment**— A source statement (or portion of a source statement) that documents or improves readability of a source file. Comments are not compiled, assembled, or linked; they have no effect on the object file.
- compiler program**— A utility that lets you compile, assemble, and optionally link in one step. The compiler runs one or more source modules through the compiler (including the parser, optimizer, and code generator), the assembler, and the linker.
- conditional processing**— A method of processing one block of source code or an alternate block of source code, according to the evaluation of a specified expression.
- configured memory**— Memory that the linker has specified for allocation.
- constant**— A type whose value cannot change.
- cross-reference lister**— A utility that produces an output file that lists the symbols that were defined, what file they were defined in, what reference type they are, what line they were defined on, which lines referenced them, and their assembler and linker final values. The cross-reference lister uses linked object files as input.
- cross-reference listing**— An output file created by the assembler that lists the symbols that were defined, what line they were defined on, which lines referenced them, and their final values.
- .data section**— One of the default object file sections. The .data section is an initialized section that contains initialized data. You can use the .data directive to assemble code into the .data section.
- directives**— Special-purpose commands that control the actions and functions of a software tool (as opposed to assembly language instructions, which control the actions of a device).
- ELF**— Executable and linking format; a system of object files configured according to the System V Application Binary Interface specification.
- emulator**— A hardware development system that duplicates the TMS320C28x operation.
- entry point**— A point in target memory where execution starts.
- environment variable**— A system symbol that you define and assign to a string. Environmental variables are often included in Windows batch files or UNIX shell scripts such as .cshrc or .profile.
- epilog**— The portion of code in a function that restores the stack and returns.
- executable module**— A linked object file that can be executed in a target system.
- expression**— A constant, a symbol, or a series of constants and symbols separated by arithmetic operators.
- external symbol**— A symbol that is used in the current program module but defined or declared in a different program module.
- field**— For the TMS320C28x, a software-configurable data type whose length can be programmed to be any value in the range of 1-16 bits.
- global symbol**— A symbol that is either defined in the current module and accessed in another, or accessed in the current module but defined in another.
- GROUP**— An option of the SECTIONS directive that forces specified output sections to be allocated contiguously (as a group).
- hex conversion utility**— A utility that converts object files into one of several standard ASCII hexadecimal formats, suitable for loading into an EPROM programmer.
- high-level language debugging**— The ability of a compiler to retain symbolic and high-level language information (such as type and function definitions) so that a debugging tool can use this information.



- hole**— An area between the input sections that compose an output section that contains no code.
- incremental linking**— Linking files in several passes. Incremental linking is useful for large applications, because you can partition the application, link the parts separately, and then link all of the parts together.
- initialization at load time**— An autoinitialization method used by the linker when linking C/C++ code. The linker uses this method when you invoke it with the `--ram_model` link option. This method initializes variables at load time instead of run time.
- initialized section**— A section from an object file that will be linked into an executable module.
- input section**— A section from an object file that will be linked into an executable module.
- ISO**— International Organization for Standardization; a worldwide federation of national standards bodies, which establishes international standards voluntarily followed by industries.
- label**— A symbol that begins in column 1 of an assembler source statement and corresponds to the address of that statement. A label is the only assembler statement that can begin in column 1.
- linker**— A software program that combines object files to form an object module that can be allocated into system memory and executed by the device.
- listing file**— An output file, created by the assembler, that lists source statements, their line numbers, and their effects on the section program counter (SPC).
- little endian**— An addressing protocol in which bytes are numbered from right to left within a word. More significant bytes in a word have higher numbered addresses. Endian ordering is hardware-specific and is determined at reset. See also *big endian*
- loader**— A device that places an executable module into system memory.
- macro**— A user-defined routine that can be used as an instruction.
- macro call**— The process of invoking a macro.
- macro definition**— A block of source statements that define the name and the code that make up a macro.
- macro expansion**— The process of inserting source statements into your code in place of a macro call.
- macro library**— An archive library composed of macros. Each file in the library must contain one macro; its name must be the same as the macro name it defines, and it must have an extension of `.asm`.
- map file**— An output file, created by the linker, that shows the memory configuration, section composition, section allocation, symbol definitions and the addresses at which the symbols were defined for your program.
- member**— The elements or variables of a structure, union, archive, or enumeration.
- memory map**— A map of target system memory space that is partitioned into functional blocks.
- mnemonic**— An instruction name that the assembler translates into machine code.
- model statement**— Instructions or assembler directives in a macro definition that are assembled each time a macro is invoked.
- named section**— An initialized section that is defined with a `.sect` directive.
- object file**— An assembled or linked file that contains machine-language object code.
- object library**— An archive library made up of individual object files.
- object module**— A linked, executable object file that can be downloaded and executed on a target system.

- operand**— An argument of an assembly language instruction, assembler directive, or macro directive that supplies information to the operation performed by the instruction or directive.
- optimizer**— A software tool that improves the execution speed and reduces the size of C programs.
- options**— Command-line parameters that allow you to request additional or specific functions when you invoke a software tool.
- output module**— A linked, executable object file that is downloaded and executed on a target system.
- output section**— A final, allocated section in a linked, executable module.
- overlay page**— A section of physical memory that is mapped into the same address range as another section of memory. A hardware switch determines which range is active.
- partial linking**— Linking files in several passes. Incremental linking is useful for large applications because you can partition the application, link the parts separately, and then link all of the parts together.
- quiet run**— An option that suppresses the normal banner and the progress information.
- raw data**— Executable code or initialized data in an output section.
- relocation**— A process in which the linker adjusts all the references to a symbol when the symbol's address changes.
- ROM width**— The width (in bits) of each output file, or, more specifically, the width of a single data value in the hex conversion utility file. The ROM width determines how the utility partitions the data into output files. After the target words are mapped to memory words, the memory words are broken into one or more output files. The number of output files is determined by the ROM width.
- run address**— The address where a section runs.
- run-time-support library**— A library file, rts.src, that contains the source for the run time-support functions.
- section**— A relocatable block of code or data that ultimately will be contiguous with other sections in the memory map.
- section program counter (SPC)**— An element that keeps track of the current location within a section; each section has its own SPC.
- sign extend**— A process that fills the unused MSBs of a value with the value's sign bit.
- simulator**— A software development system that simulates TMS320C28x operation.
- source file**— A file that contains C/C++ code or assembly language code that is compiled or assembled to form an object file.
- static variable**— A variable whose scope is confined to a function or a program. The values of static variables are not discarded when the function or program is exited; their previous value is resumed when the function or program is reentered.
- storage class**— An entry in the symbol table that indicates how to access a symbol.
- string table**— A table that stores symbol names that are longer than eight characters (symbol names of eight characters or longer cannot be stored in the symbol table; instead they are stored in the string table). The name portion of the symbol's entry points to the location of the string in the string table.
- structure**— A collection of one or more variables grouped together under a single name.
- subsection**— A relocatable block of code or data that ultimately will occupy continuous space in the memory map. Subsections are smaller sections within larger sections. Subsections give you tighter control of the memory map.
- symbol**— A string of alphanumeric characters that represents an address or a value.

- symbolic debugging**— The ability of a software tool to retain symbolic information that can be used by a debugging tool such as a simulator or an emulator.
- tag**— An optional *type* name that can be assigned to a structure, union, or enumeration.
- target memory**— Physical memory in a system into which executable object code is loaded.
- .text section**— One of the default object file sections. The .text section is initialized and contains executable code. You can use the .text directive to assemble code into the .text section.
- unconfigured memory**— Memory that is not defined as part of the memory map and cannot be loaded with code or data.
- uninitialized section**— A object file section that reserves space in the memory map but that has no actual contents. These sections are built with the .bss and .usect directives.
- UNION**— An option of the SECTIONS directive that causes the linker to allocate the same address to multiple sections.
- union**— A variable that can hold objects of different types and sizes.
- unsigned value**— A value that is treated as a nonnegative number, regardless of its actual sign.
- variable**— A symbol representing a quantity that can assume any of a set of values.
- veneer**— A sequence of instructions that serves as an alternate entry point into a routine if a state change is required.
- well-defined expression**— A term or group of terms that contains only symbols or assembly-time constants that have been defined before they appear in the expression.
- word**— A 16-bit addressable location in target memory

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

|                             |                                                                    |
|-----------------------------|--------------------------------------------------------------------|
| Audio                       | <a href="http://www.ti.com/audio">www.ti.com/audio</a>             |
| Amplifiers                  | <a href="http://amplifier.ti.com">amplifier.ti.com</a>             |
| Data Converters             | <a href="http://dataconverter.ti.com">dataconverter.ti.com</a>     |
| DLP® Products               | <a href="http://www.dlp.com">www.dlp.com</a>                       |
| DSP                         | <a href="http://dsp.ti.com">dsp.ti.com</a>                         |
| Clocks and Timers           | <a href="http://www.ti.com/clocks">www.ti.com/clocks</a>           |
| Interface                   | <a href="http://interface.ti.com">interface.ti.com</a>             |
| Logic                       | <a href="http://logic.ti.com">logic.ti.com</a>                     |
| Power Mgmt                  | <a href="http://power.ti.com">power.ti.com</a>                     |
| Microcontrollers            | <a href="http://microcontroller.ti.com">microcontroller.ti.com</a> |
| RFID                        | <a href="http://www.ti-rfid.com">www.ti-rfid.com</a>               |
| RF/IF and ZigBee® Solutions | <a href="http://www.ti.com/lprf">www.ti.com/lprf</a>               |

### Applications

|                               |                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------|
| Communications and Telecom    | <a href="http://www.ti.com/communications">www.ti.com/communications</a>                 |
| Computers and Peripherals     | <a href="http://www.ti.com/computers">www.ti.com/computers</a>                           |
| Consumer Electronics          | <a href="http://www.ti.com/consumer-apps">www.ti.com/consumer-apps</a>                   |
| Energy and Lighting           | <a href="http://www.ti.com/energy">www.ti.com/energy</a>                                 |
| Industrial                    | <a href="http://www.ti.com/industrial">www.ti.com/industrial</a>                         |
| Medical                       | <a href="http://www.ti.com/medical">www.ti.com/medical</a>                               |
| Security                      | <a href="http://www.ti.com/security">www.ti.com/security</a>                             |
| Space, Avionics and Defense   | <a href="http://www.ti.com/space-avionics-defense">www.ti.com/space-avionics-defense</a> |
| Transportation and Automotive | <a href="http://www.ti.com/automotive">www.ti.com/automotive</a>                         |
| Video and Imaging             | <a href="http://www.ti.com/video">www.ti.com/video</a>                                   |
| Wireless                      | <a href="http://www.ti.com/wireless-apps">www.ti.com/wireless-apps</a>                   |

TI E2E Community Home Page

[e2e.ti.com](http://e2e.ti.com)

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2011, Texas Instruments Incorporated